

FRONT APRON TO COWL SIDE MEMBER (ASSY)


F14967-A

REPLACEMENT
With the front body pillar lower gusset removed.

REMOVAL

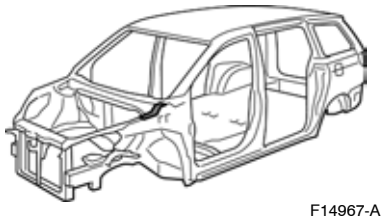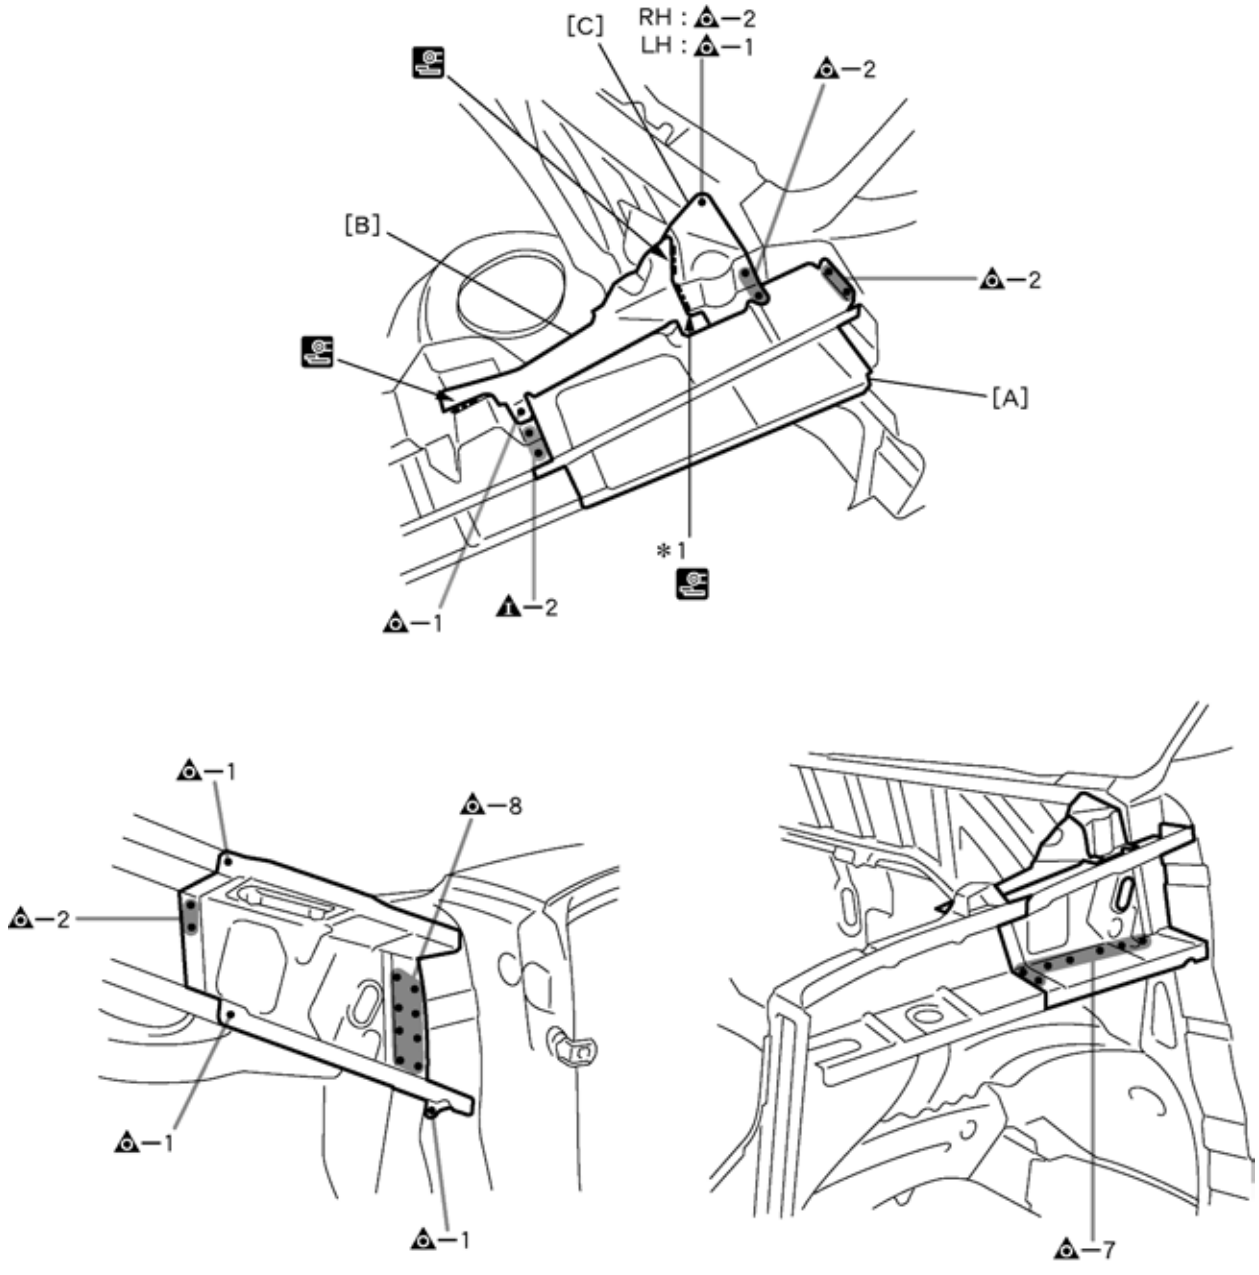


F14967

POINT
1 Remove the [A], [B] and [C] at the same time.
2 *1: RH Only

PART NAME
[A] Front Apron To Cowl Side Member [B] Front Panel Gusset
[C] Front Fender Apron Rear Extension

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

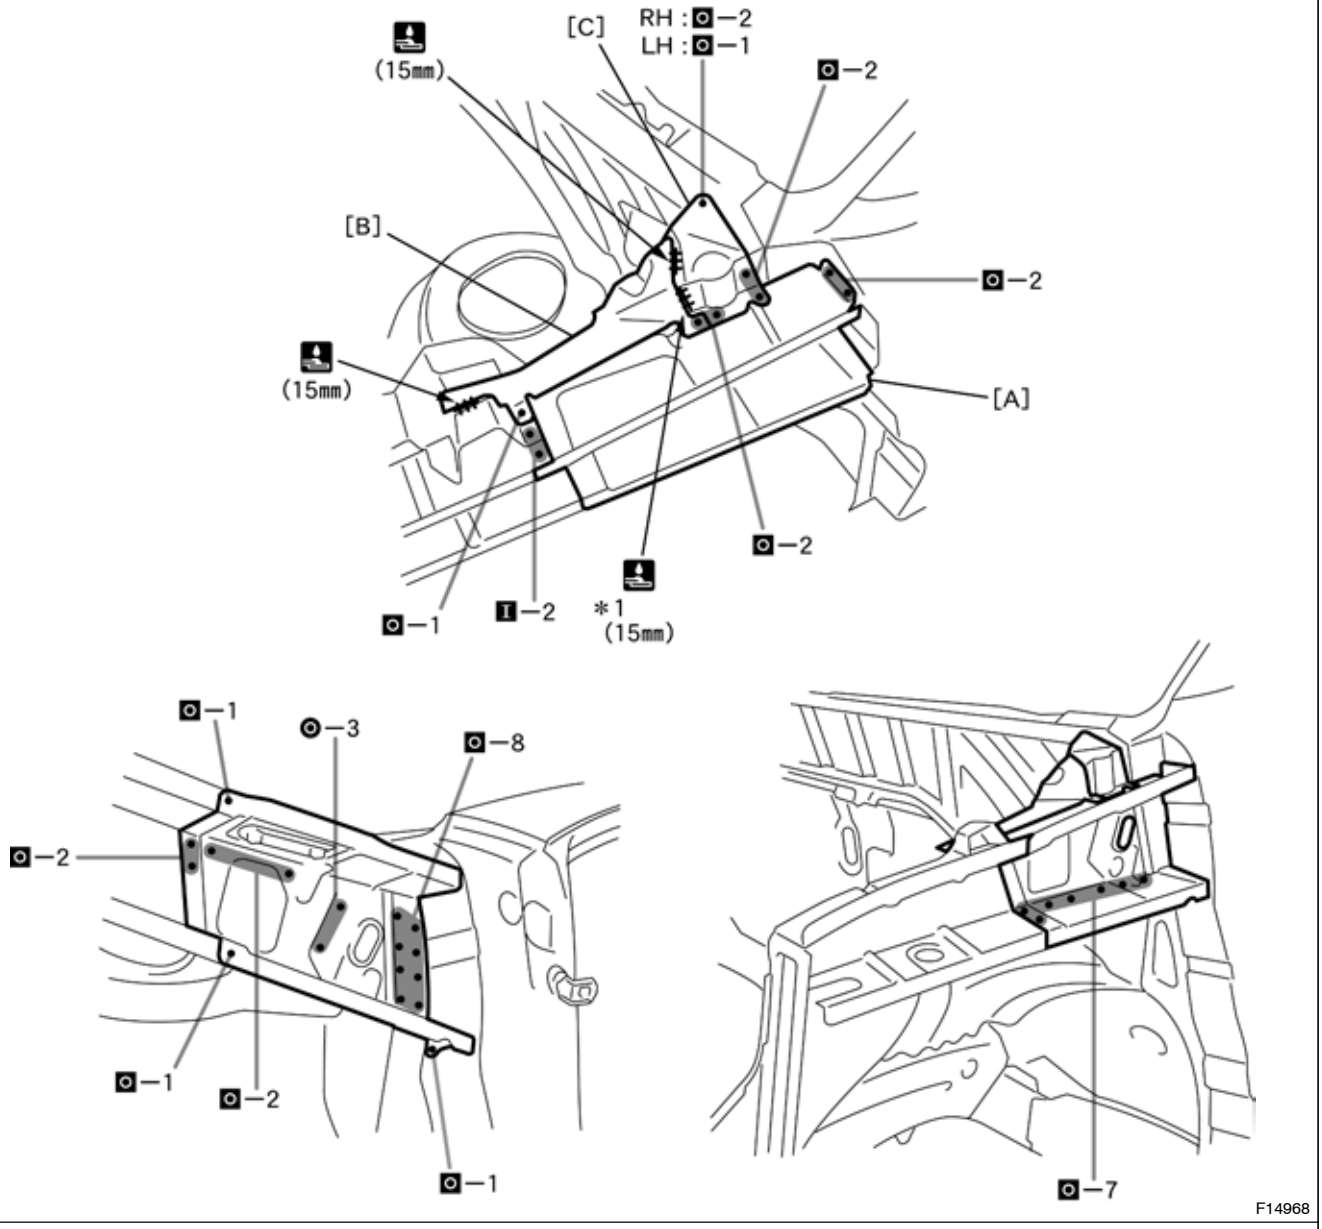


POINT

1 Inspect the fitting of the front fender and hood, etc., before welding, since this affects the appearance of the finish.
2 *1: RH Only

PART NAME

[A] Front Apron To Cowl Side Member [B] Front Panel Gusset
[C] Front Fender Apron Rear Extension

15mm (0.59in.)

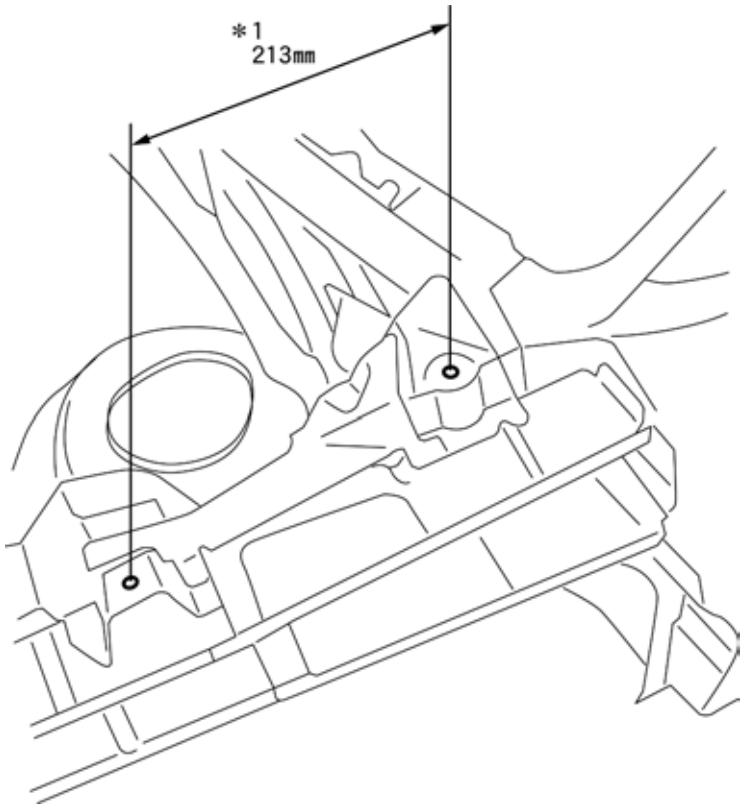

F14962

POINT

1 *1: The value is reference value.

213mm (8.39in.)