

RADIATOR UPPER SUPPORT (ASSY)


F21429-A

REPLACEMENT

REMOVAL

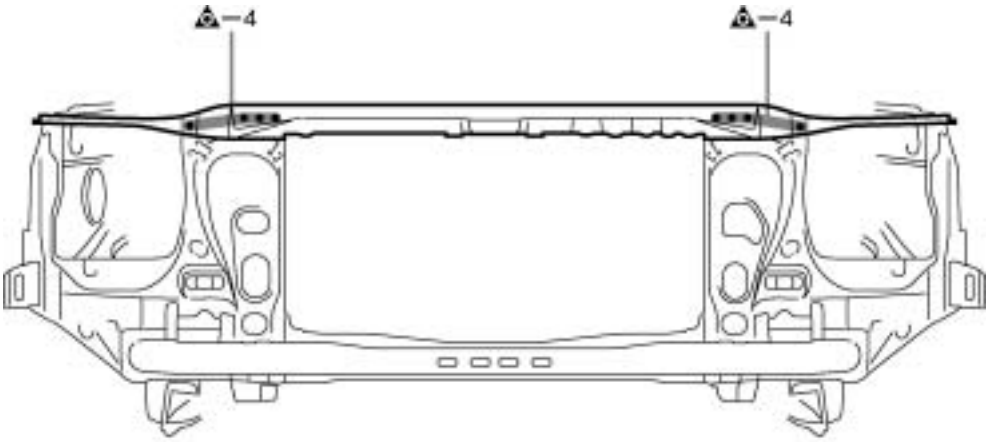


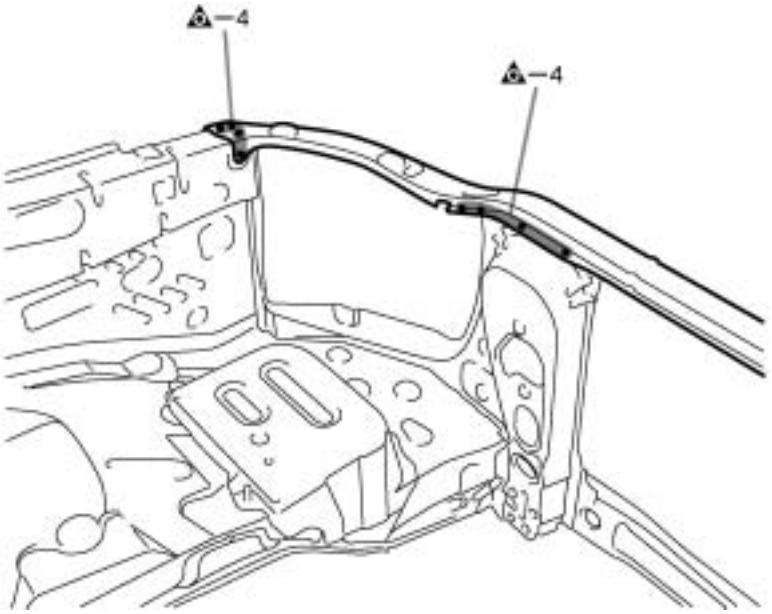

F21429

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

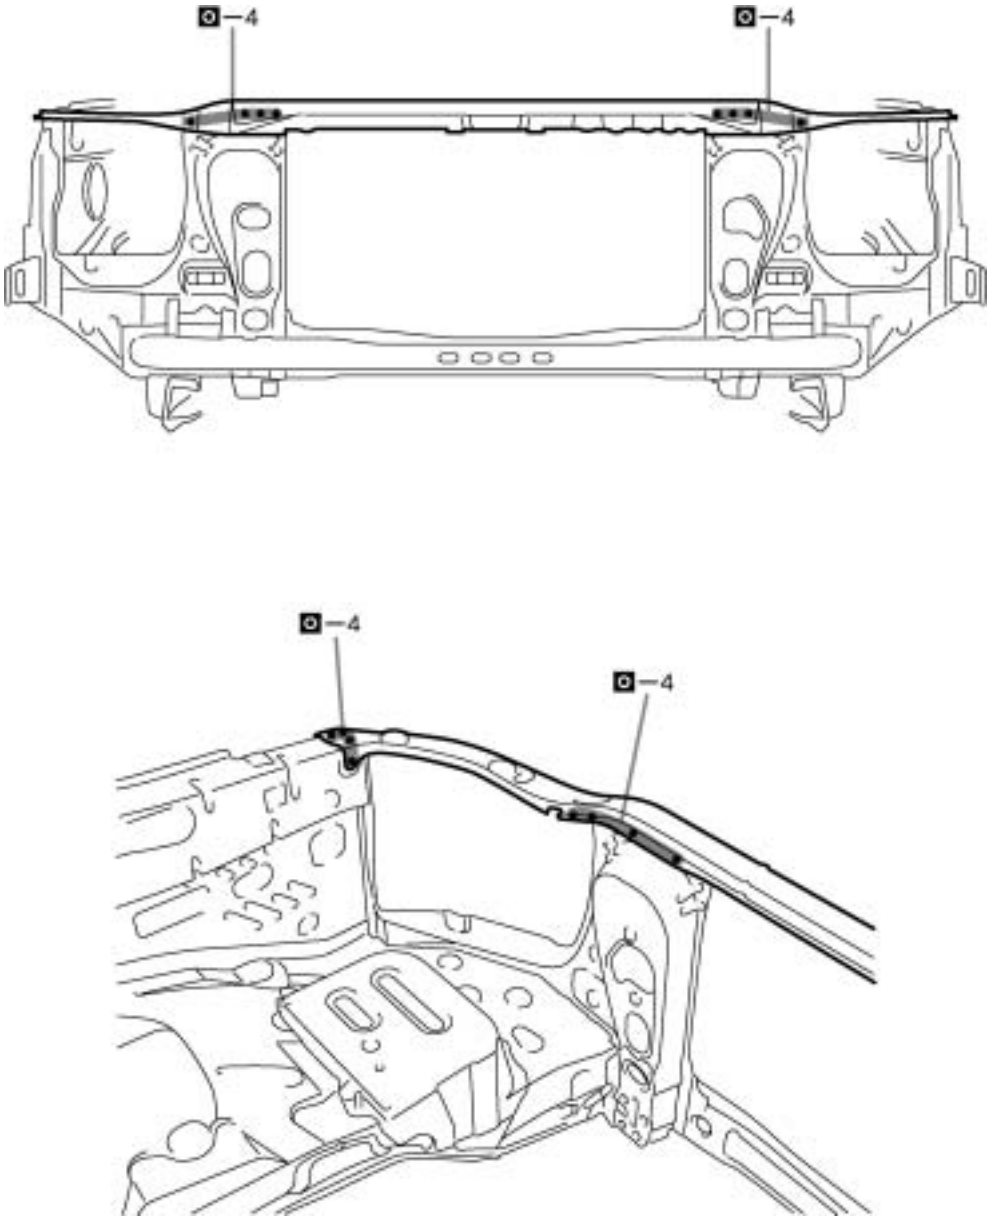

F21430

POINT

1 Inspect the fitting of the headlight and front fender, etc., before welding, since affects the appearance of the finish.

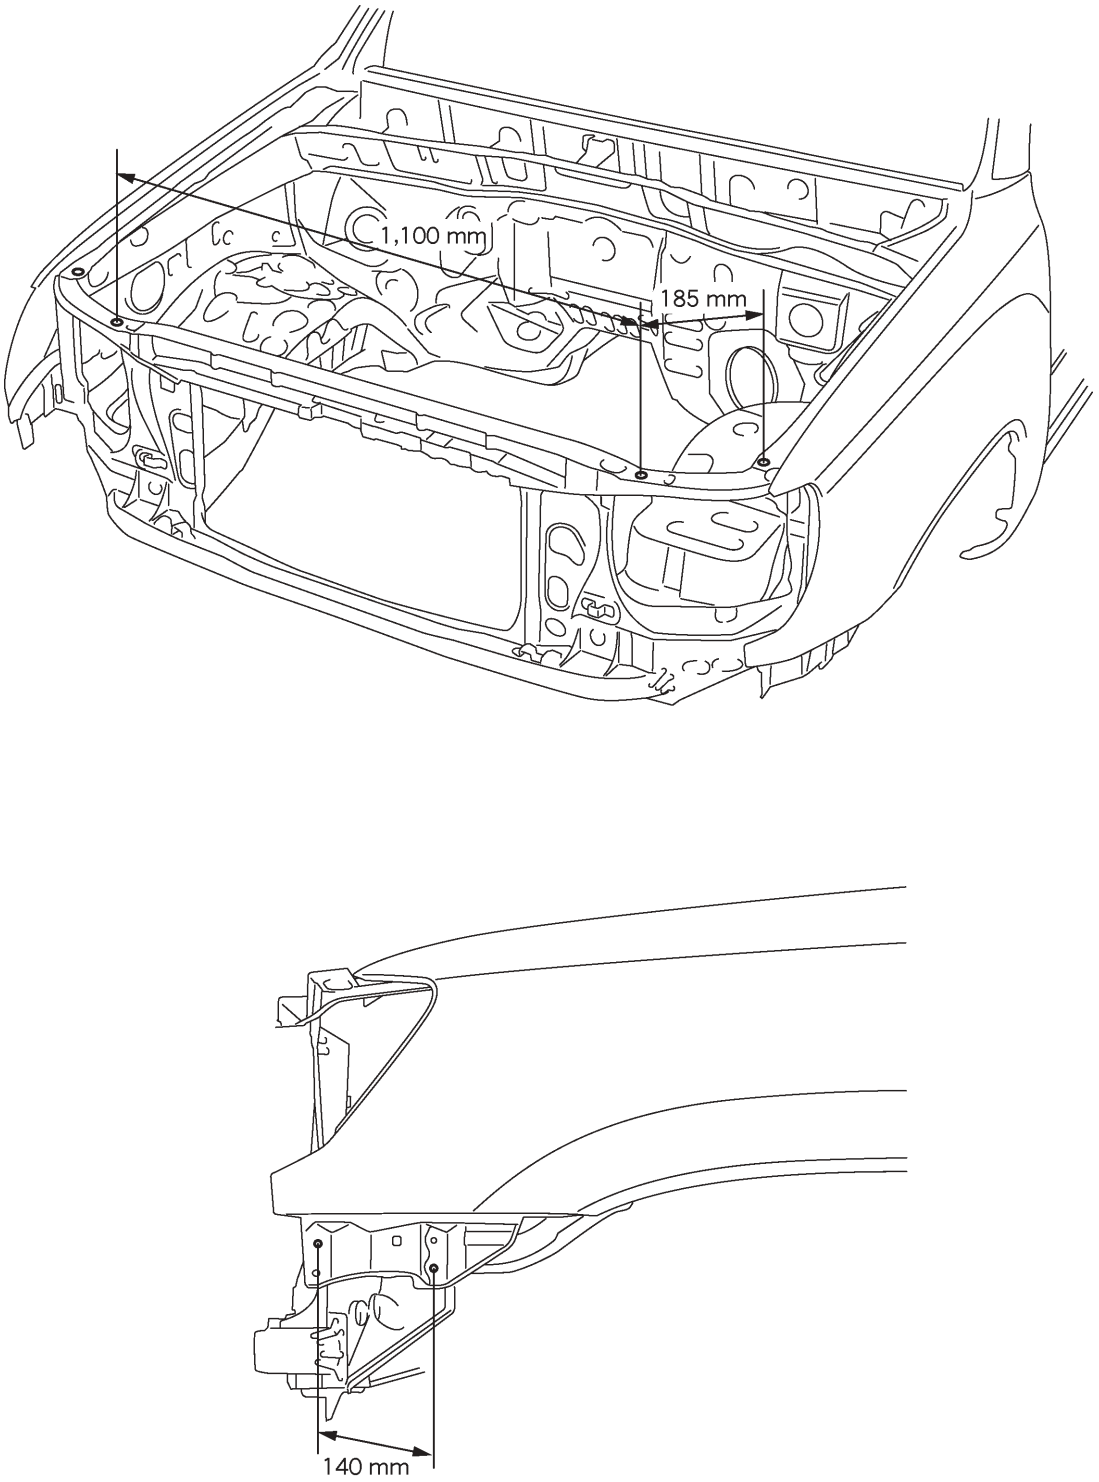

F21431

POINT

1 Measure the dimensions before installing headlight.
2 These values are reference values.

140 mm (5.51 in) 185 mm (7.28 in) 1,100 mm (43.31 in)