
NAME PLATE APPLICATION PROCEDURE


1 Heat the double-sided tape remaining on the body with an infrared lamp or equivalent.
HINT:
1) Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.

2 Wipe off the remaining double-sided tape using a clean cloth or equivalent.
HINT:
1) If a name plate is installed without thoroughly removing the remaining double-sided tape from the body, the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.


3 After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.
HINT:
1) The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.

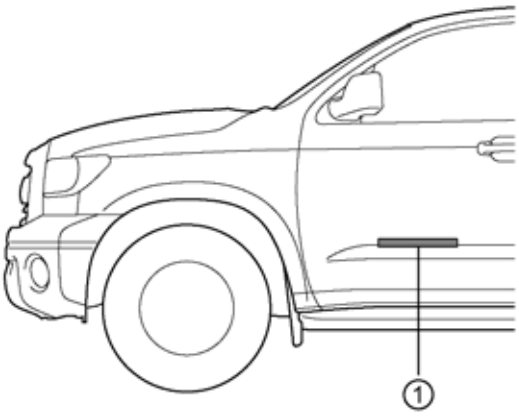

① DOOR NAME PLATE : LH Side

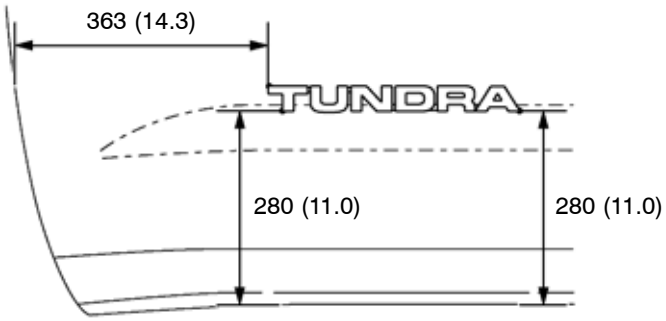


① DOOR NAME PLATE : RH Side

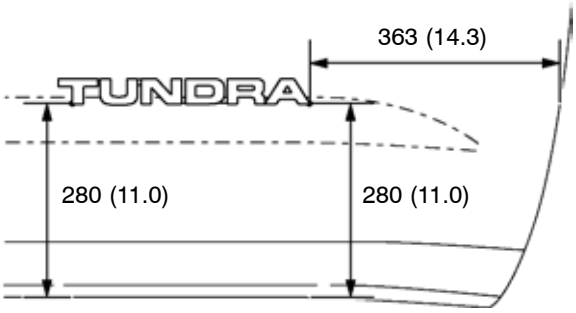


mm (in.)

F27080

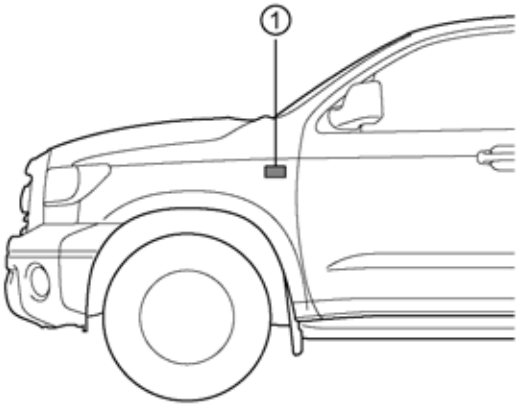


for 2UZ-FE:

1 FRONT FENDER PLATE: RH Side

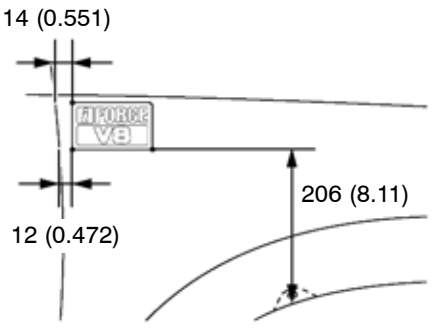


1 FRONT FENDER PLATE: LH Side

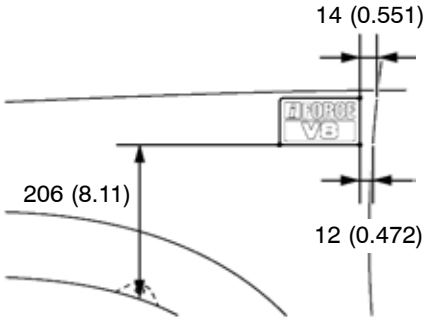


for 3UR-FE:

1 FRONT FENDER PLATE: RH Side

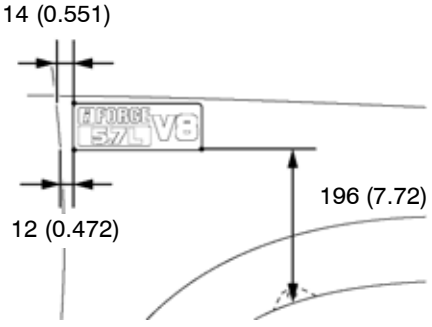


1 FRONT FENDER PLATE: LH Side

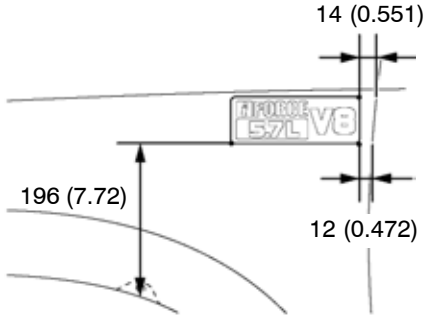



mm (in.)

F27081


for Regular Cab:

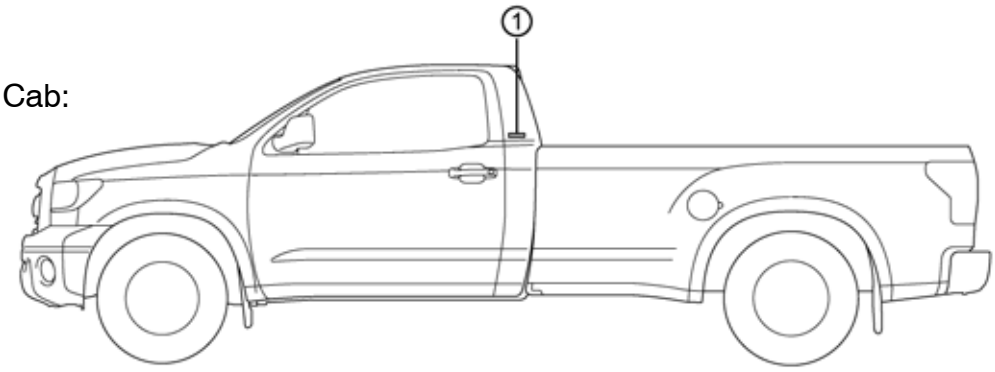


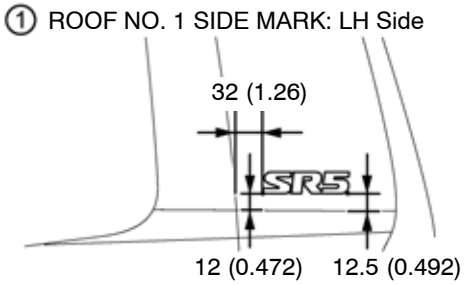


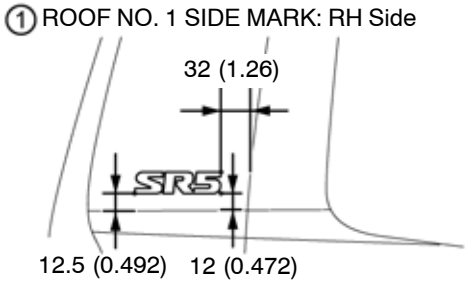



for Double Cab:

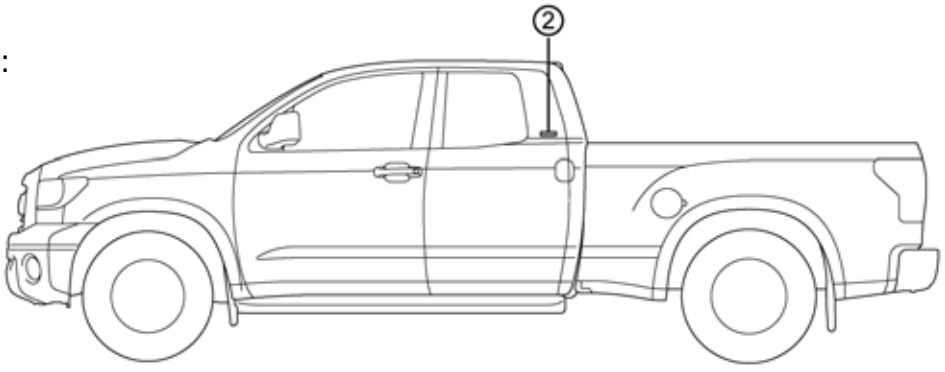

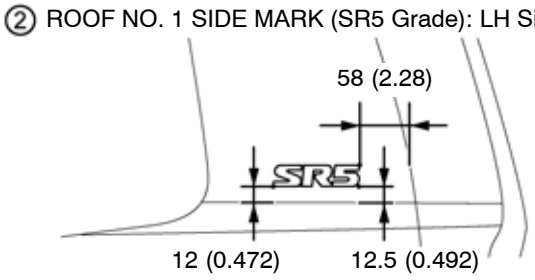

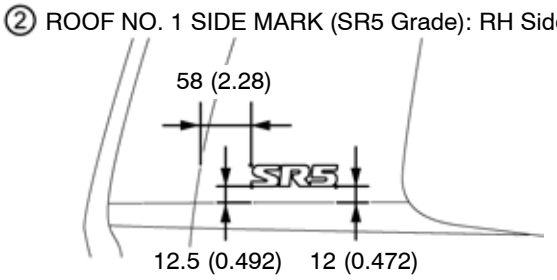


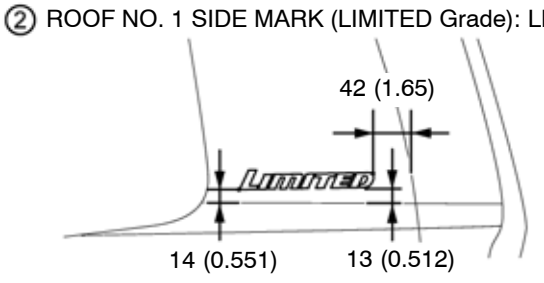

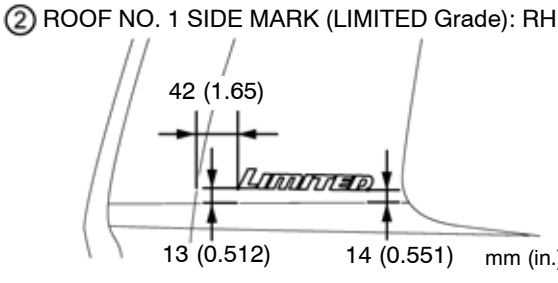


F27071


for CrewMax:

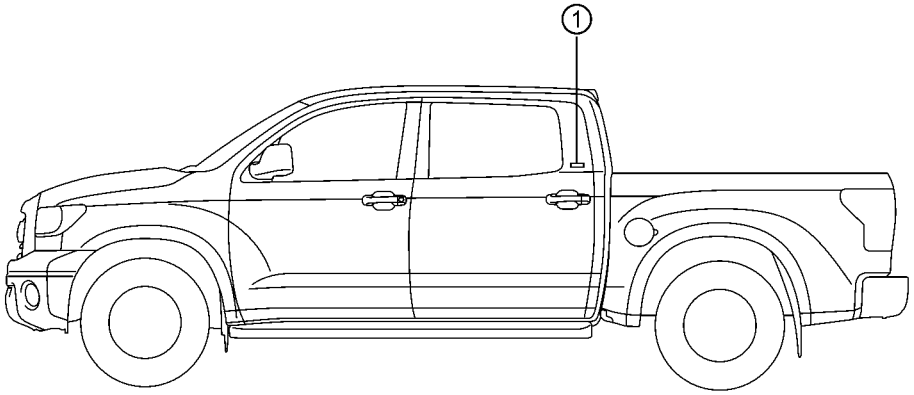


① ROOF NO. 1 SIDE MARK (SR5 Grade): LH Side

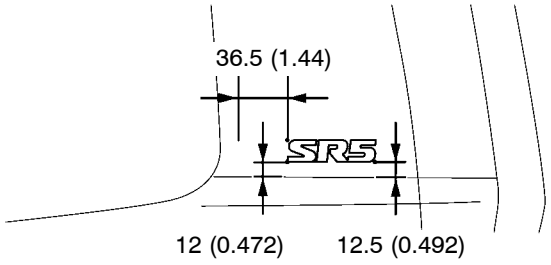


① ROOF NO. 1 SIDE MARK (SR5 Grade): RH Side

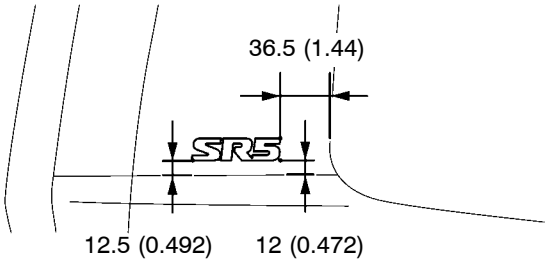

① ROOF NO. 1 SIDE MARK (LIMITED Grade): LH Side

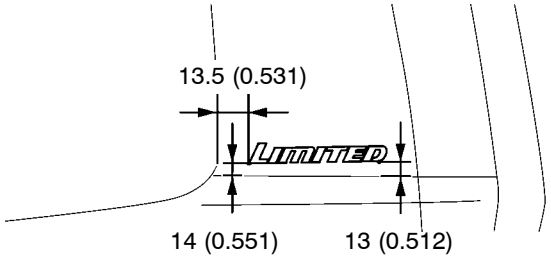


① ROOF NO. 1 SIDE MARK (LIMITED Grade): RH Side

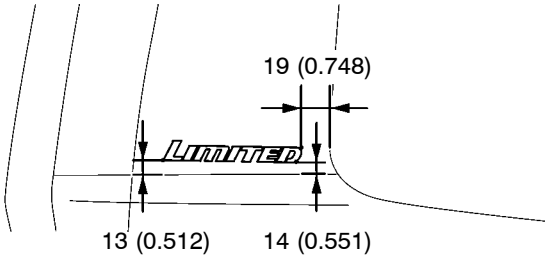


mm (in.)


F27089

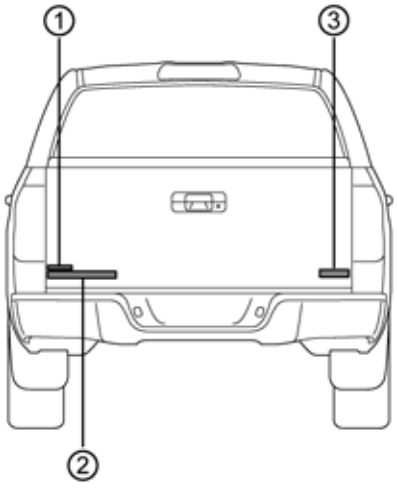


1 BACK DOOR NO. 2 NAME PLATE
2 REAR BODY NO. 1 NAME PLATE

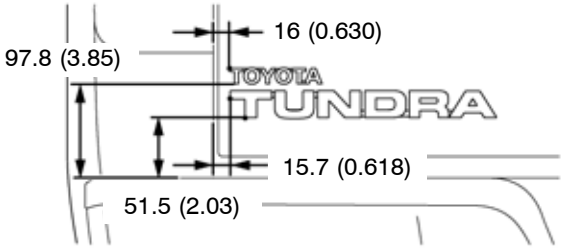


3 REAR BODY NO. 3 NAME PLATE

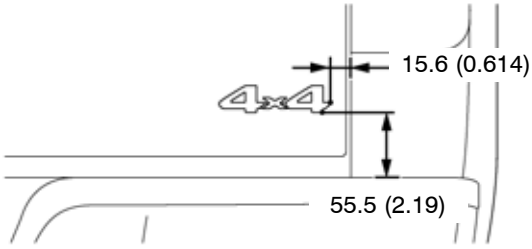


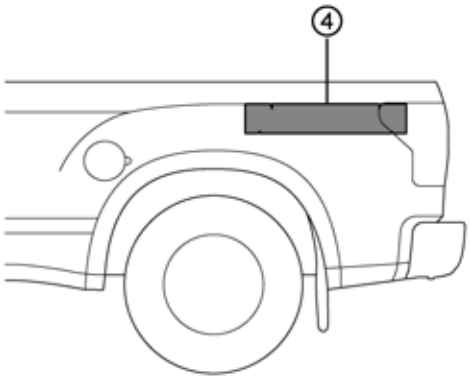

4 REAR BODY STRIPE : LH Side

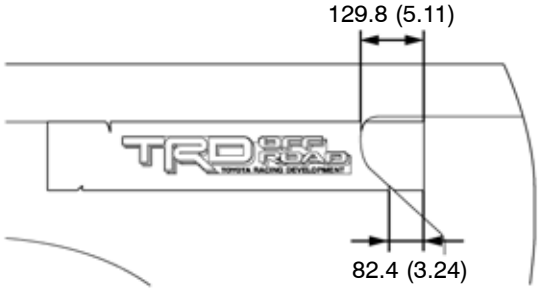

4 REAR BODY STRIPE : RH Side

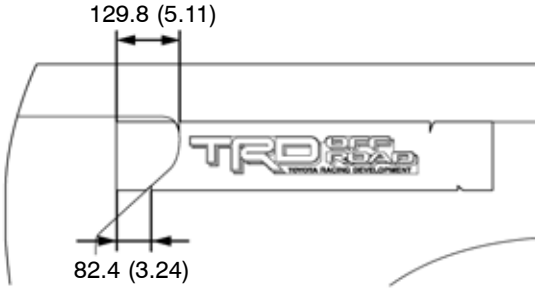

mm (in.)

F27072