





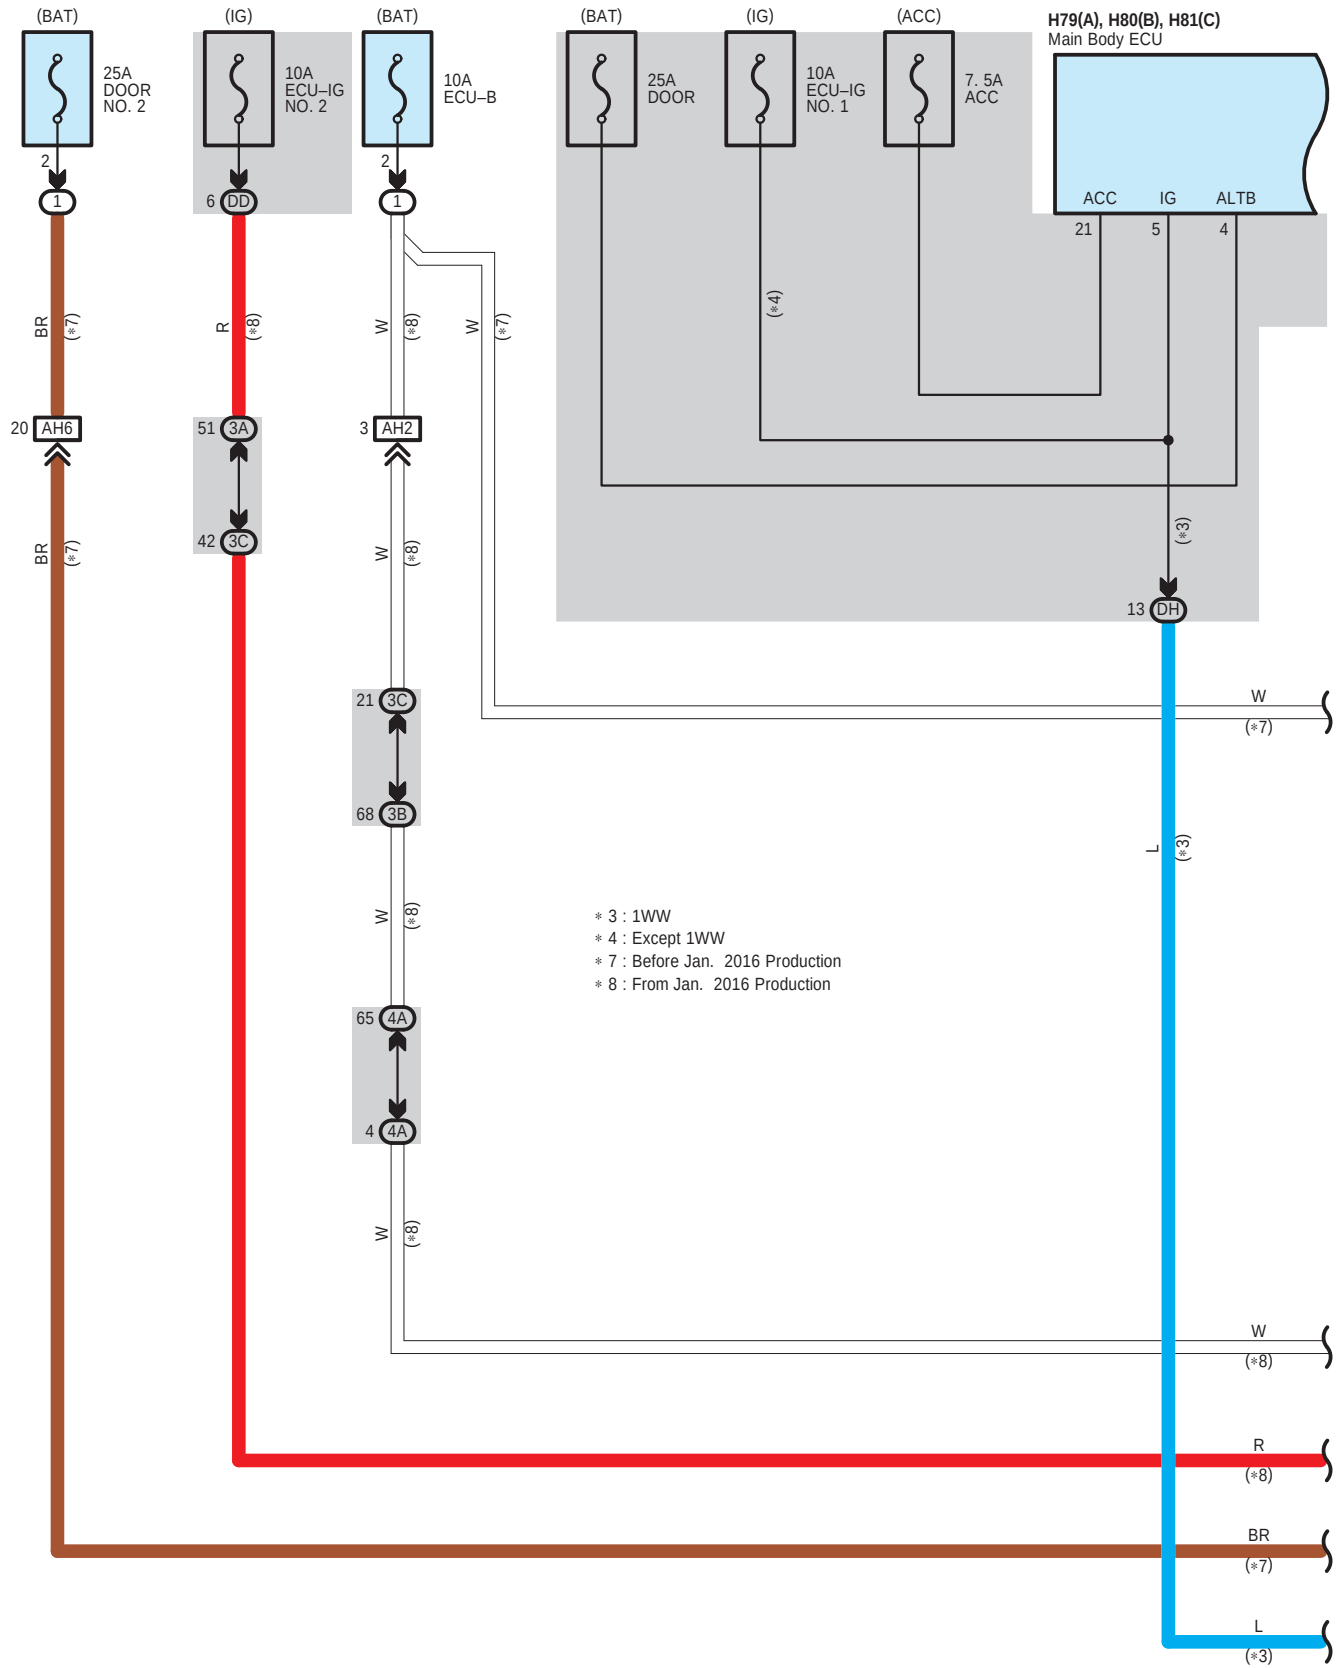


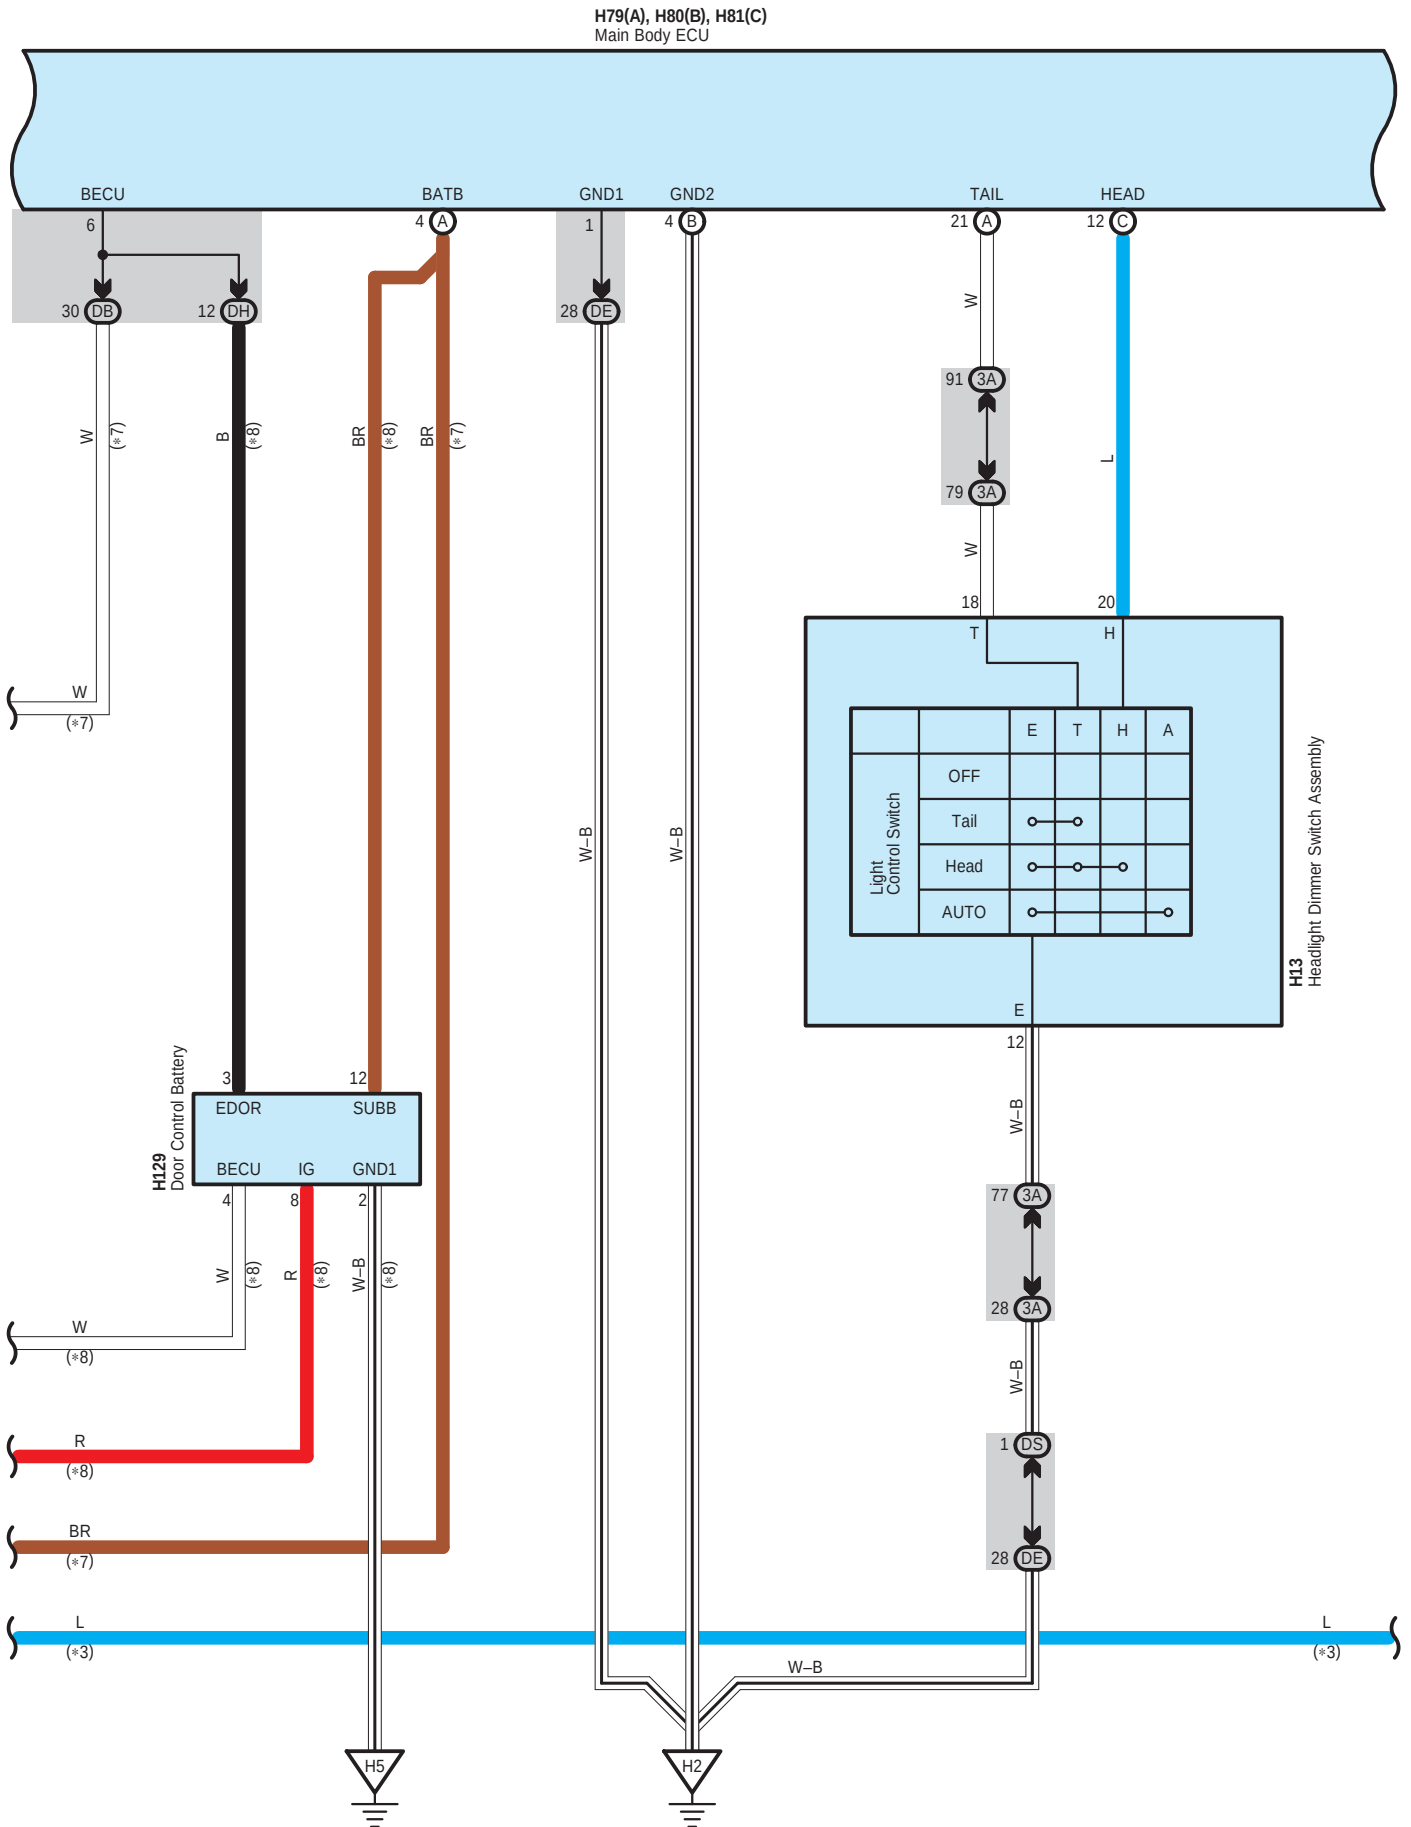

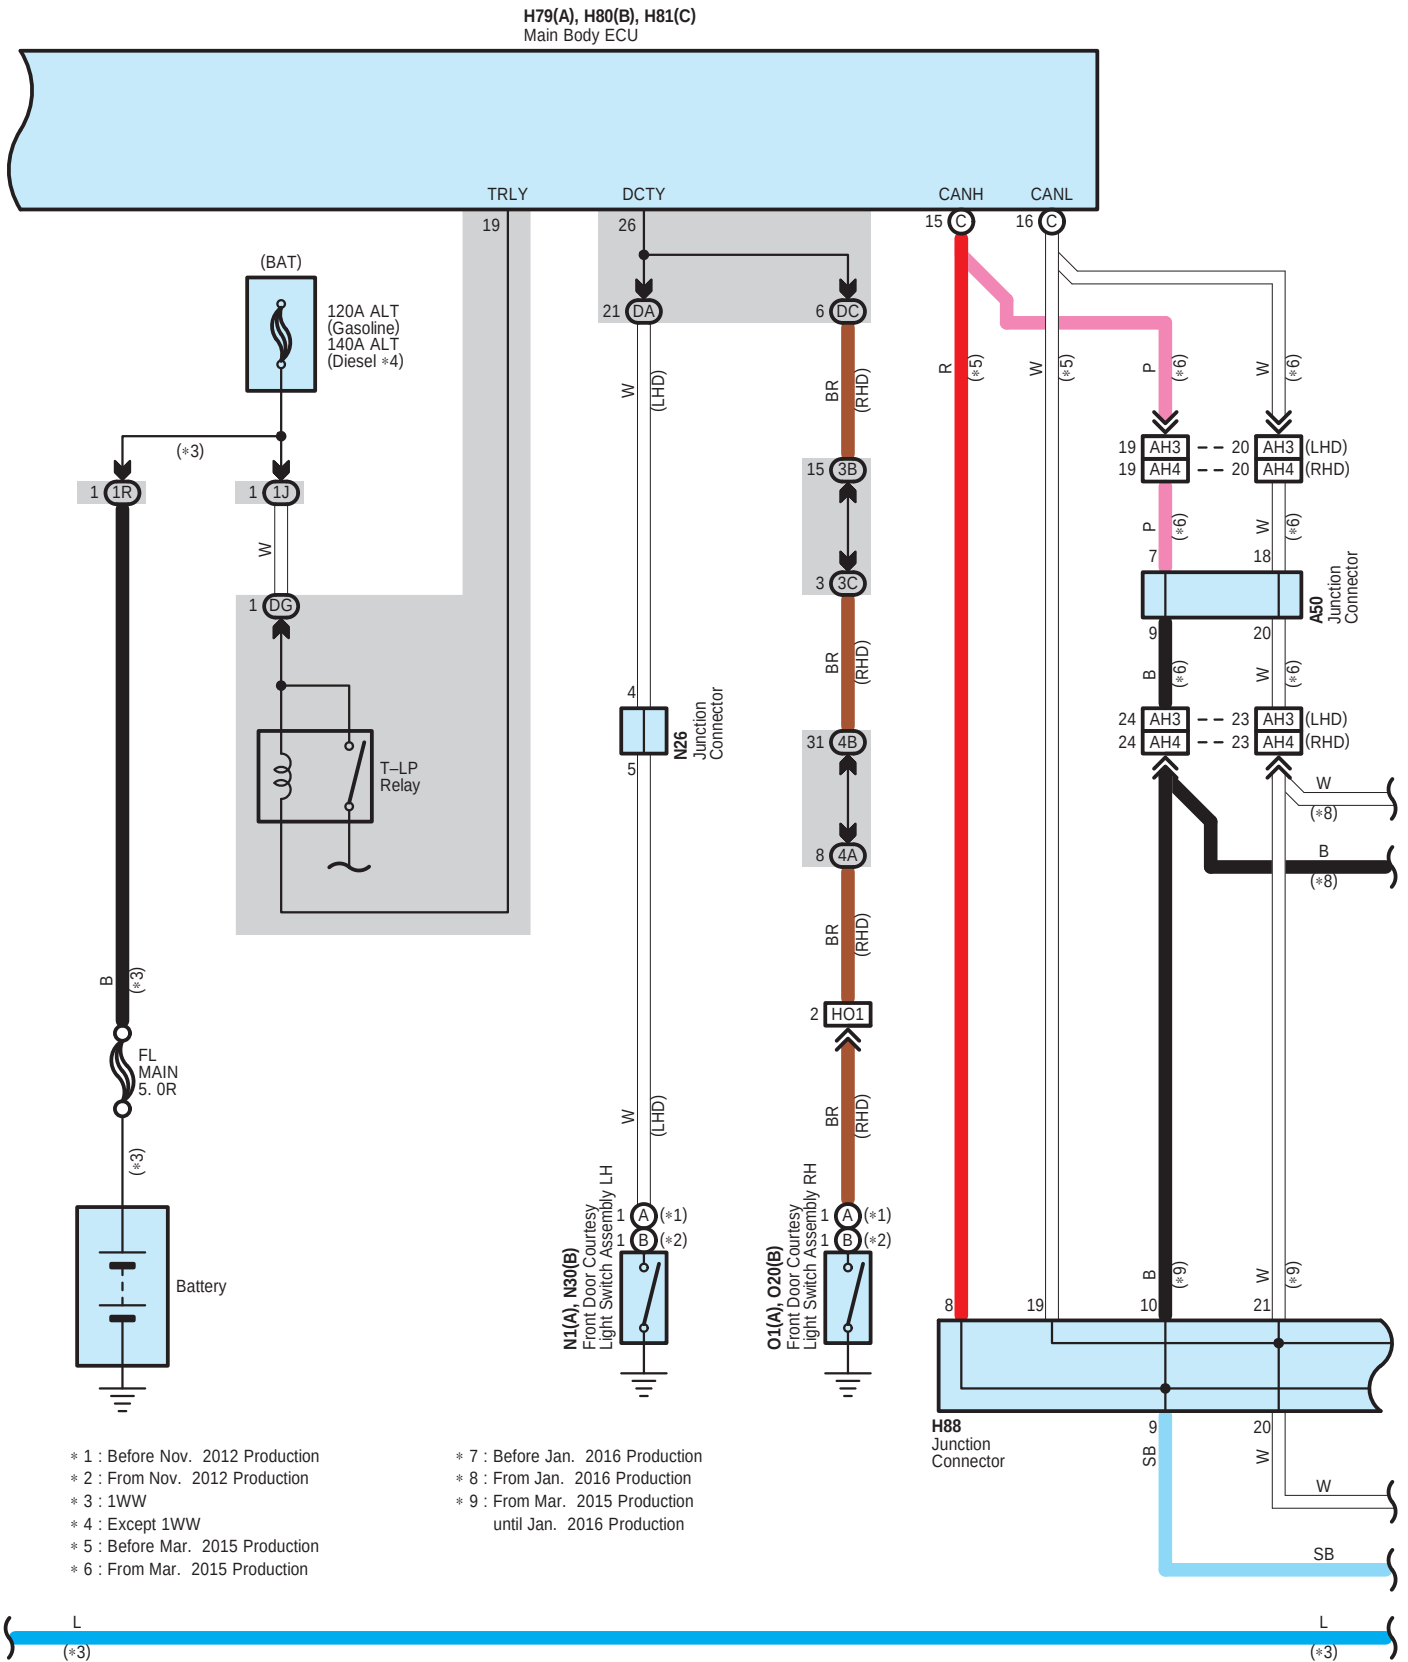


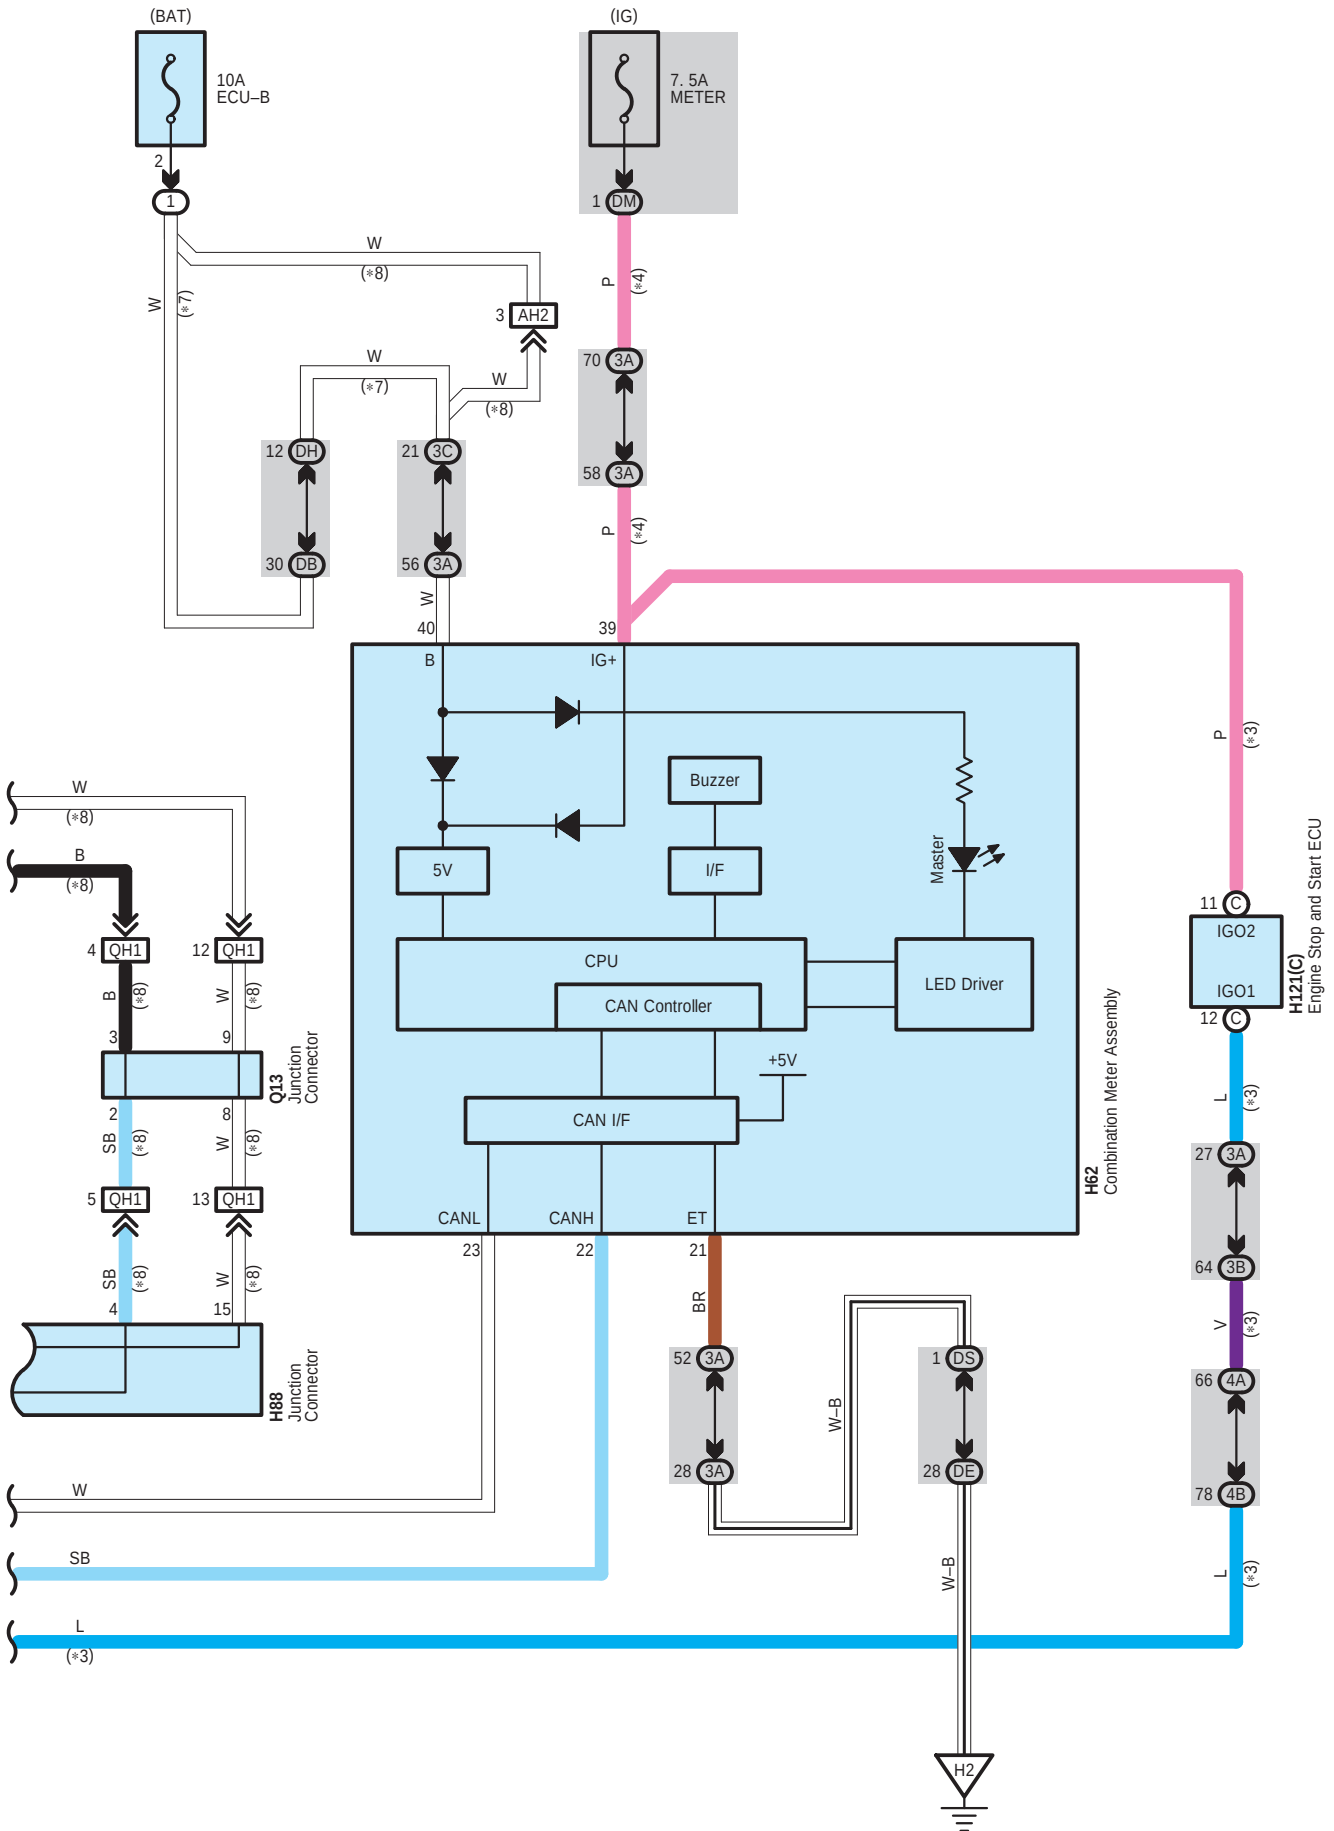


A 50
White

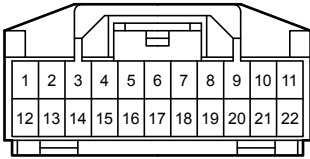


H 13
White

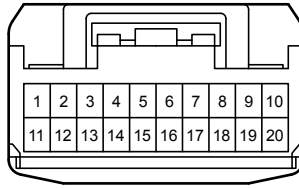


H 62
Black

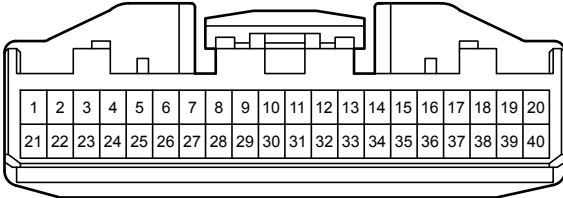


H 79
White

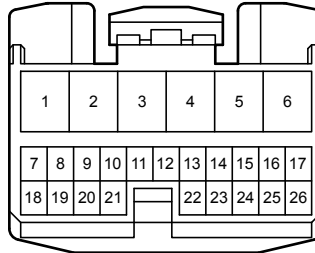


H 80
White

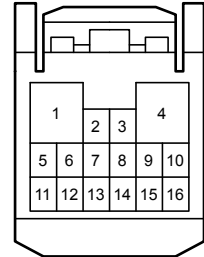


H 81
White

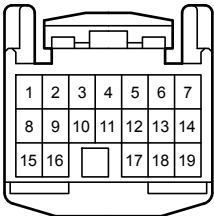


H 88
White

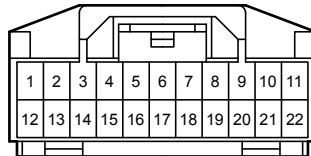

H121
Black

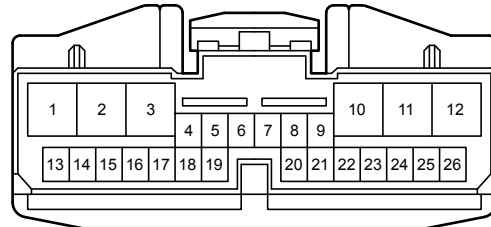


H129
Gray

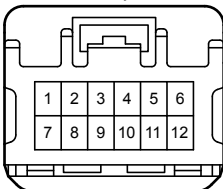

N 1
Gray



N 26
White

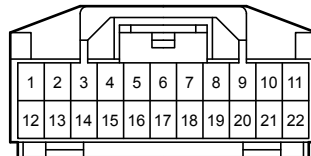

N 30
Black




O 1
Gray




O 20
Black




Q 13
White

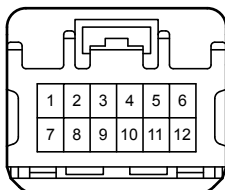

1J




1R




3A

White

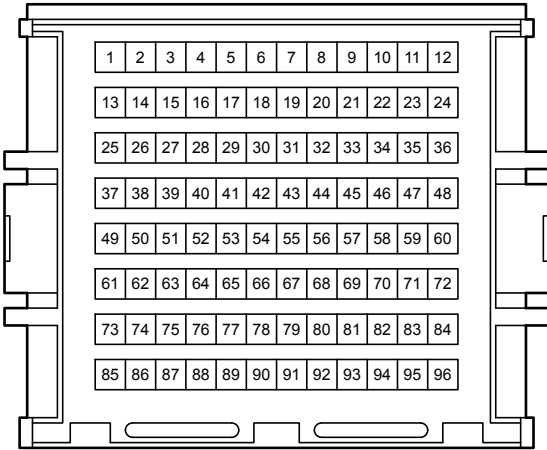


3B

White

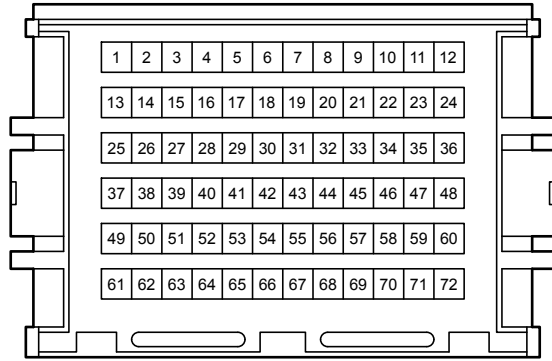


3C

White

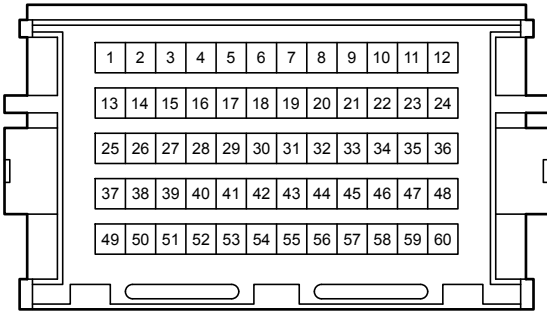


4A

White

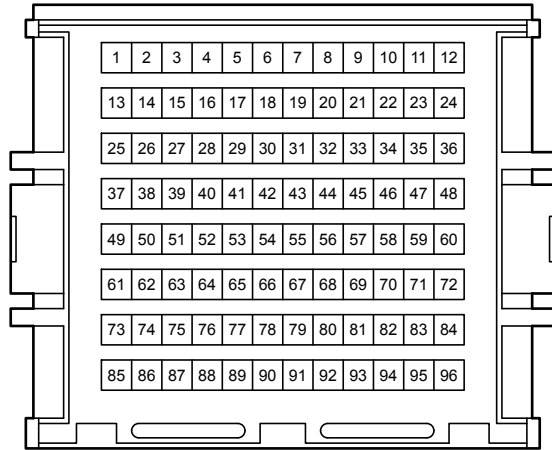


4B

White

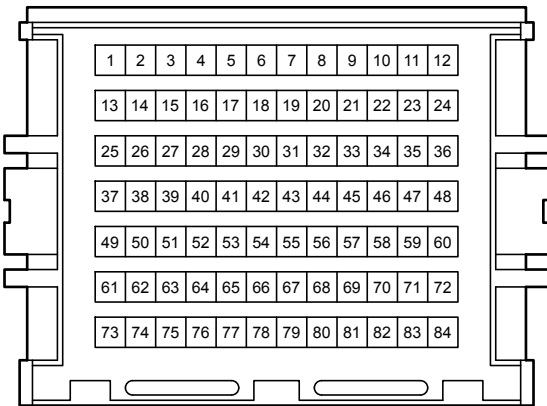


DA

White

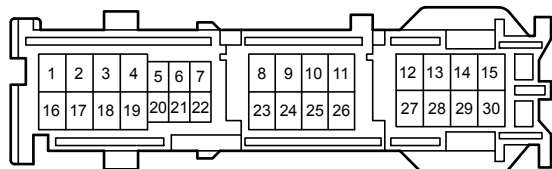


DB

White

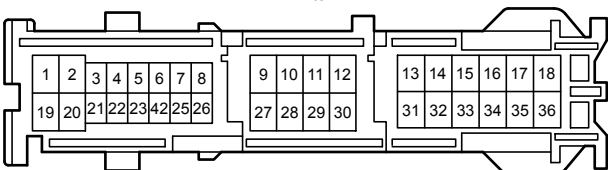


DC

White

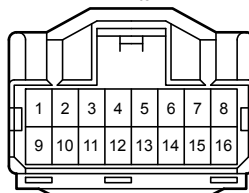


DD


White

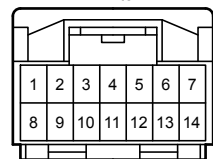


DE
White

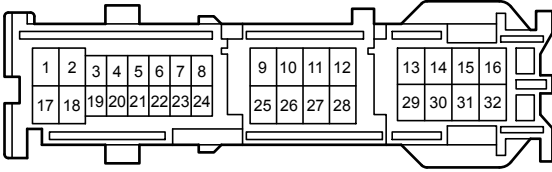


DG
White




DH
White

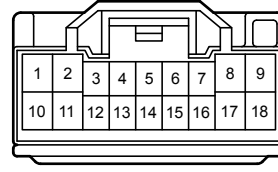


DM
White

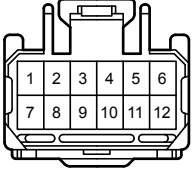


DS
White

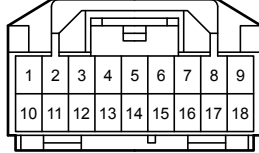


AH2
Gray

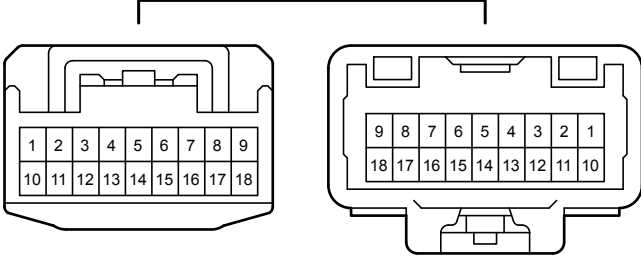


AH3
White

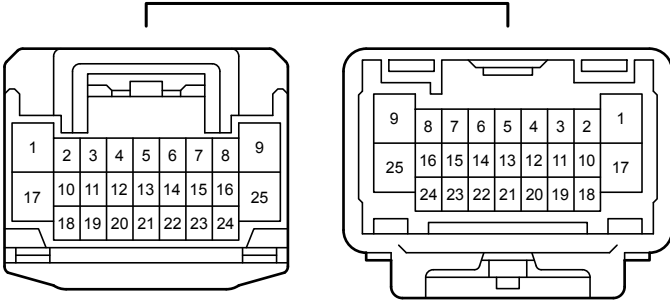


AH4
Gray

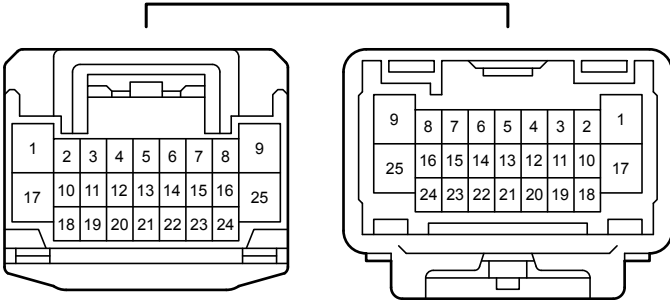

AH6
White

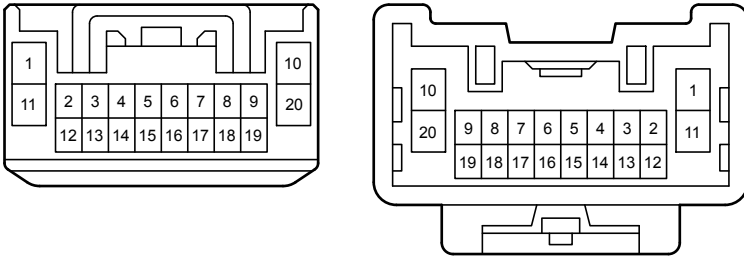

HO1
Gray

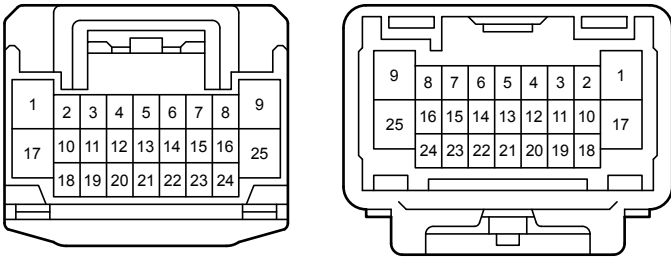

QH1
White

