





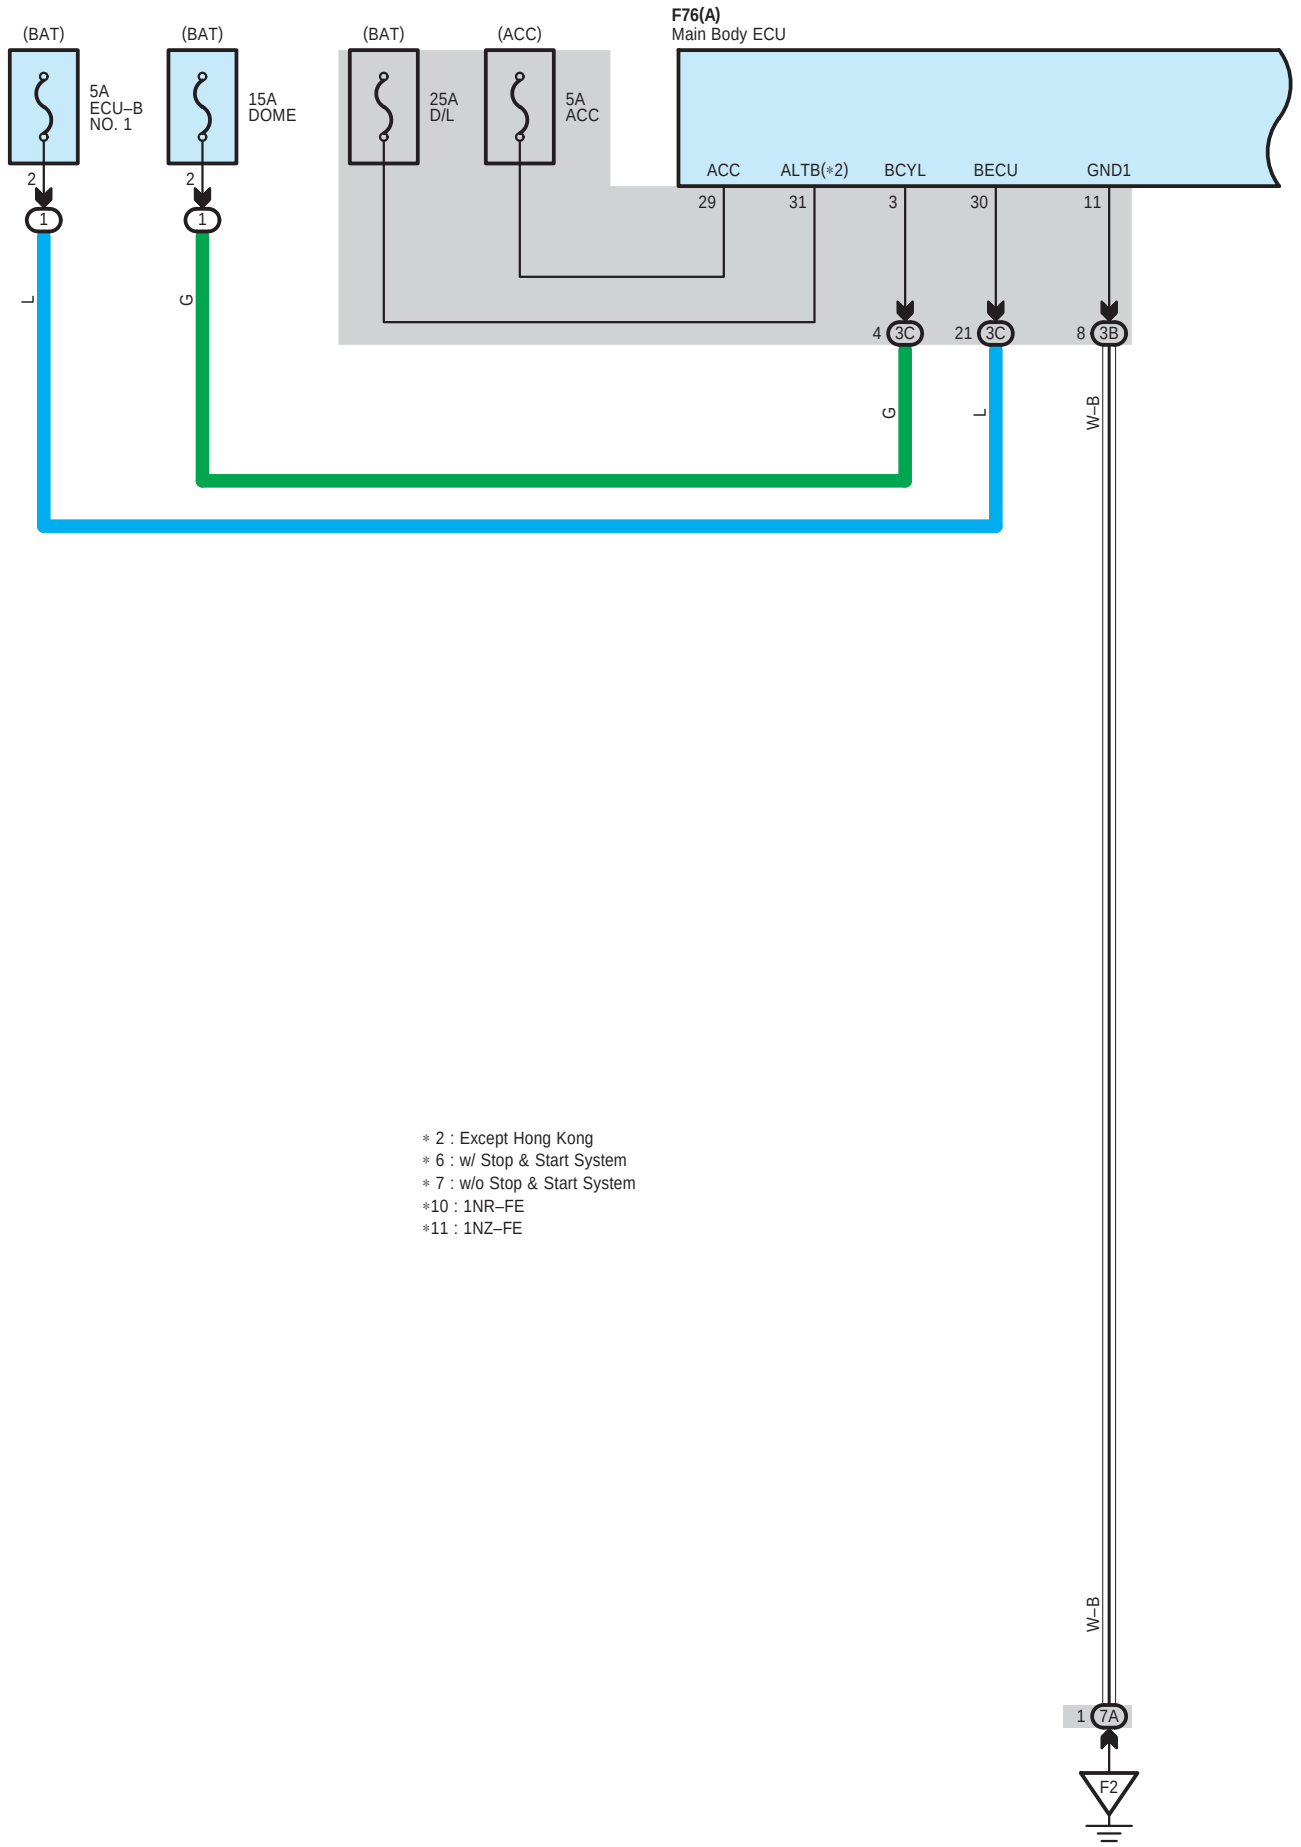


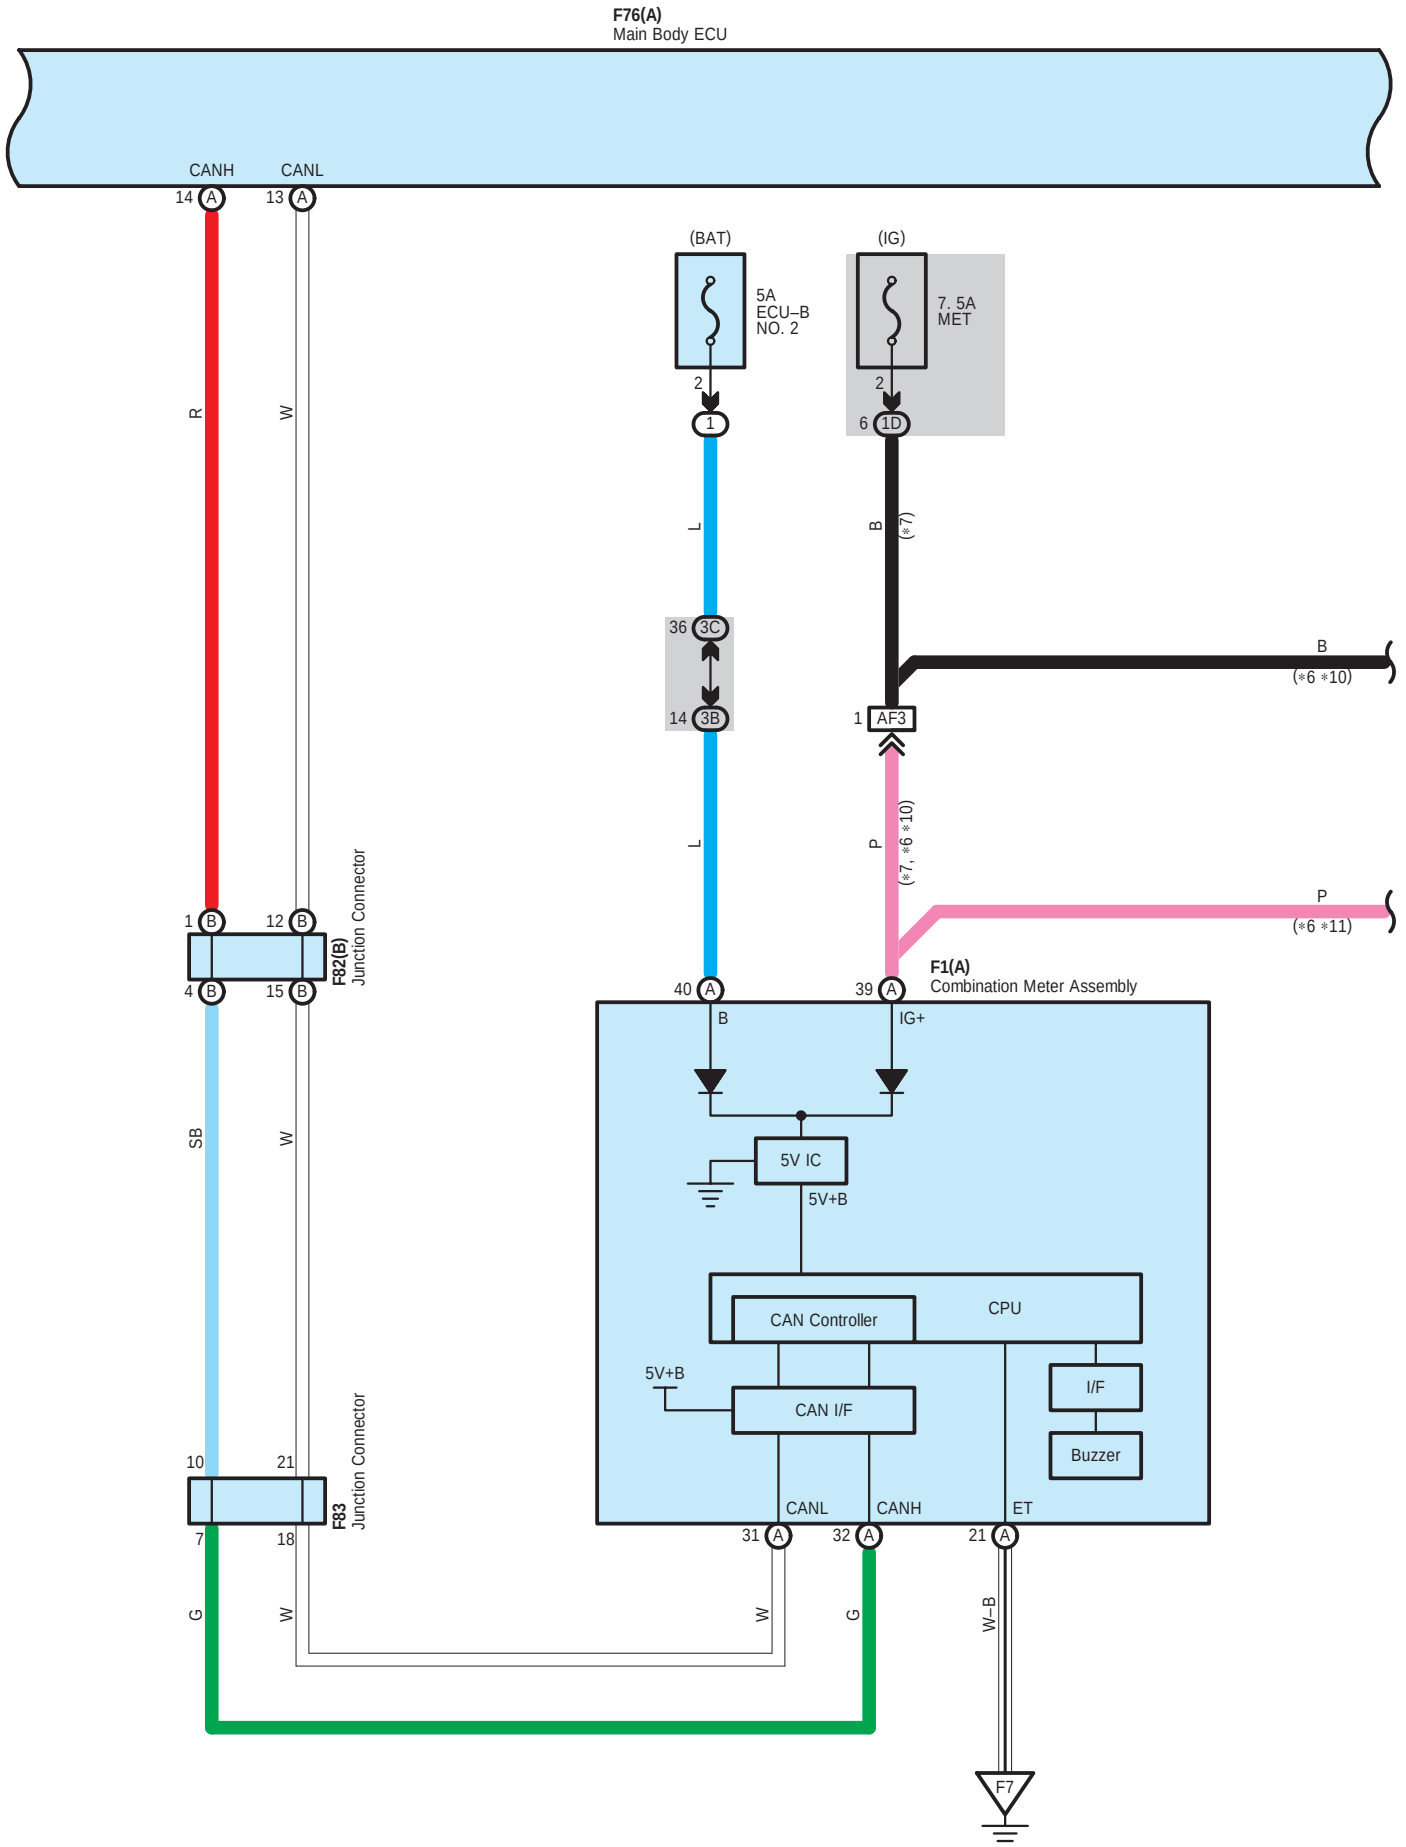

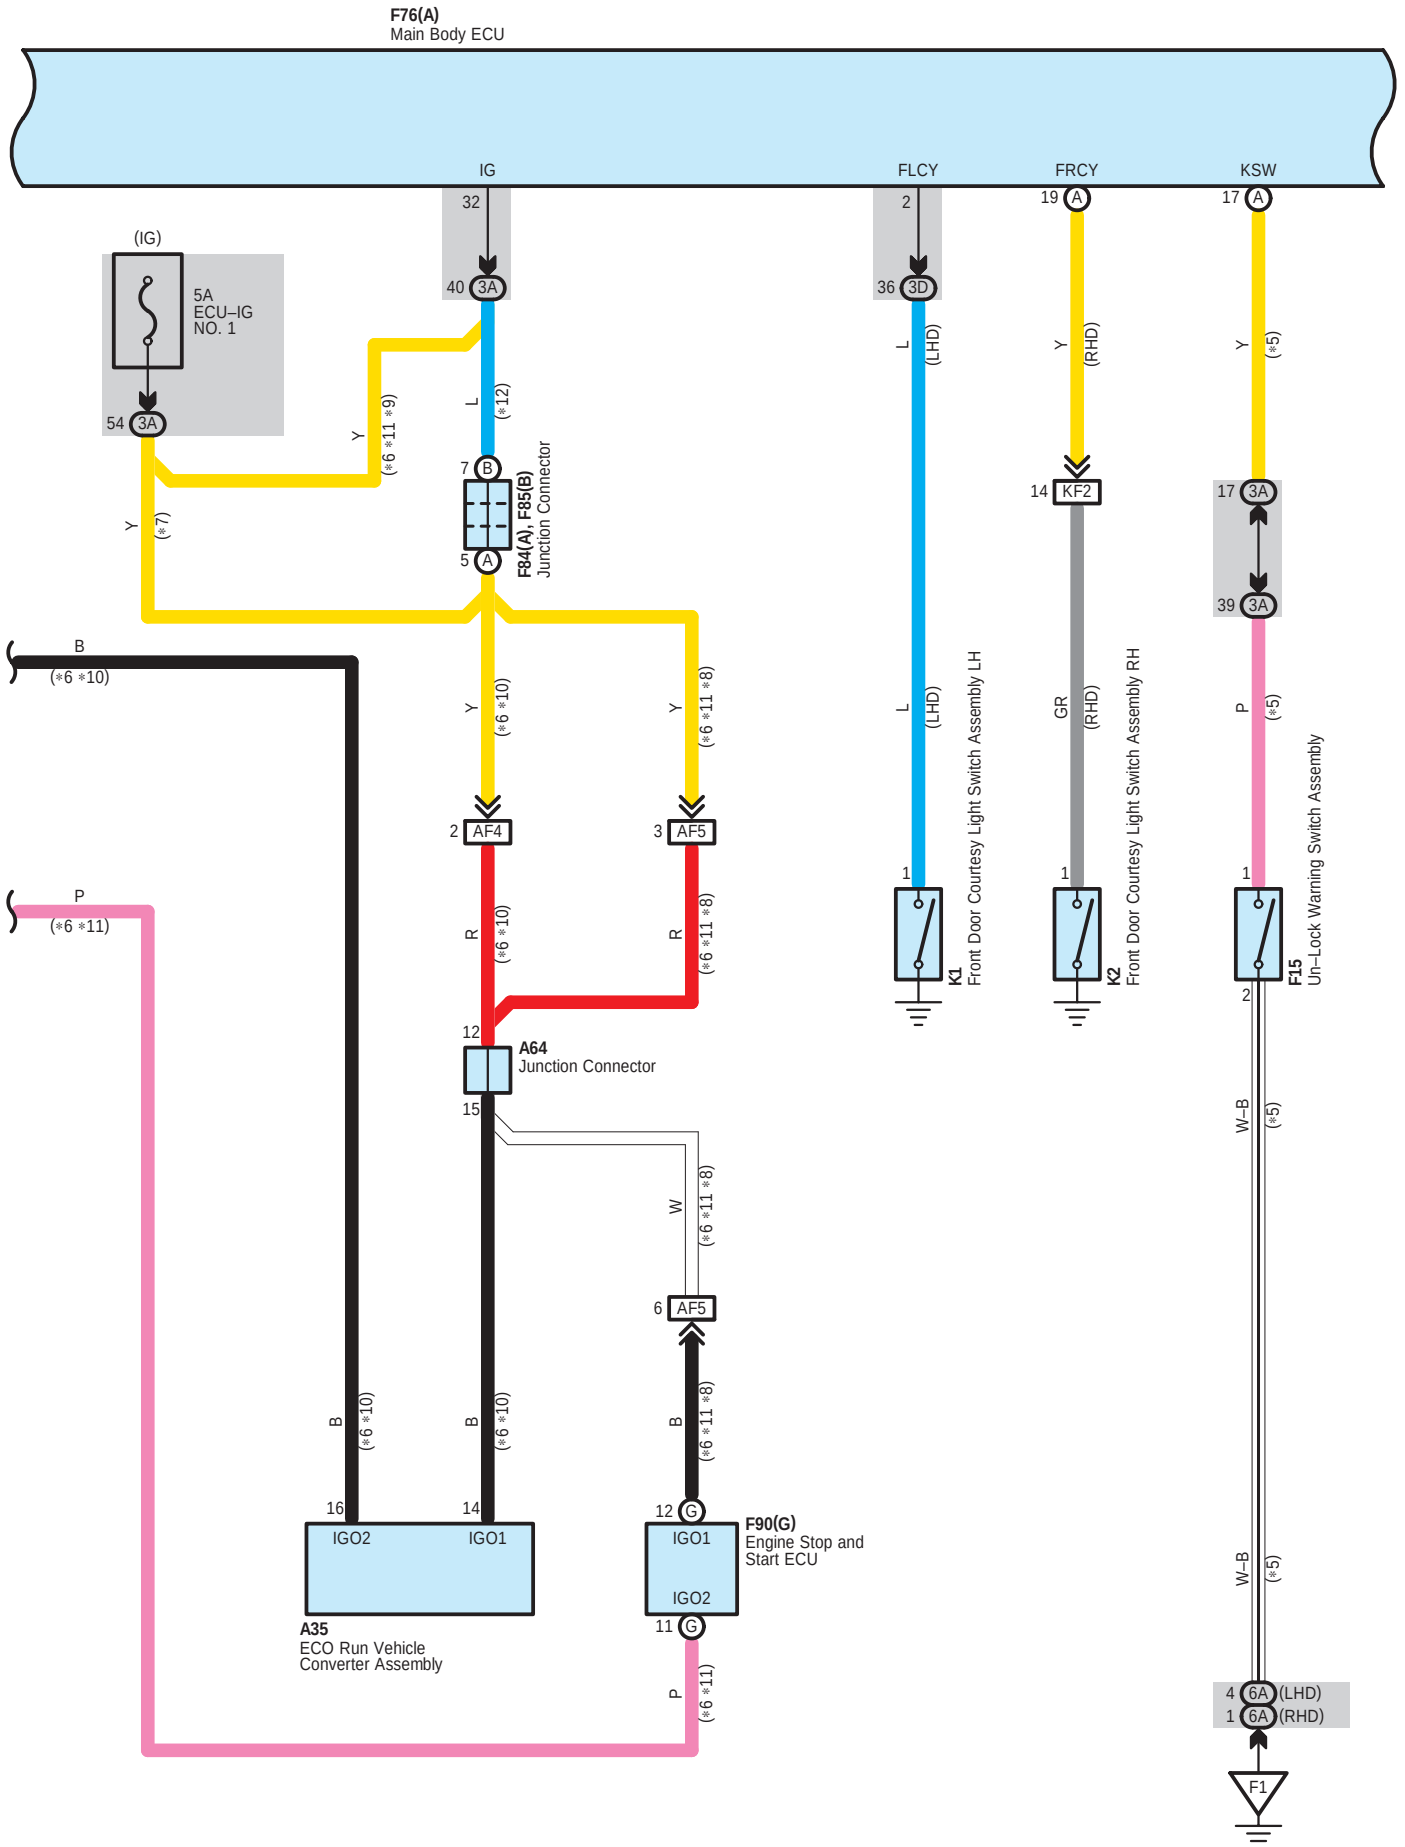


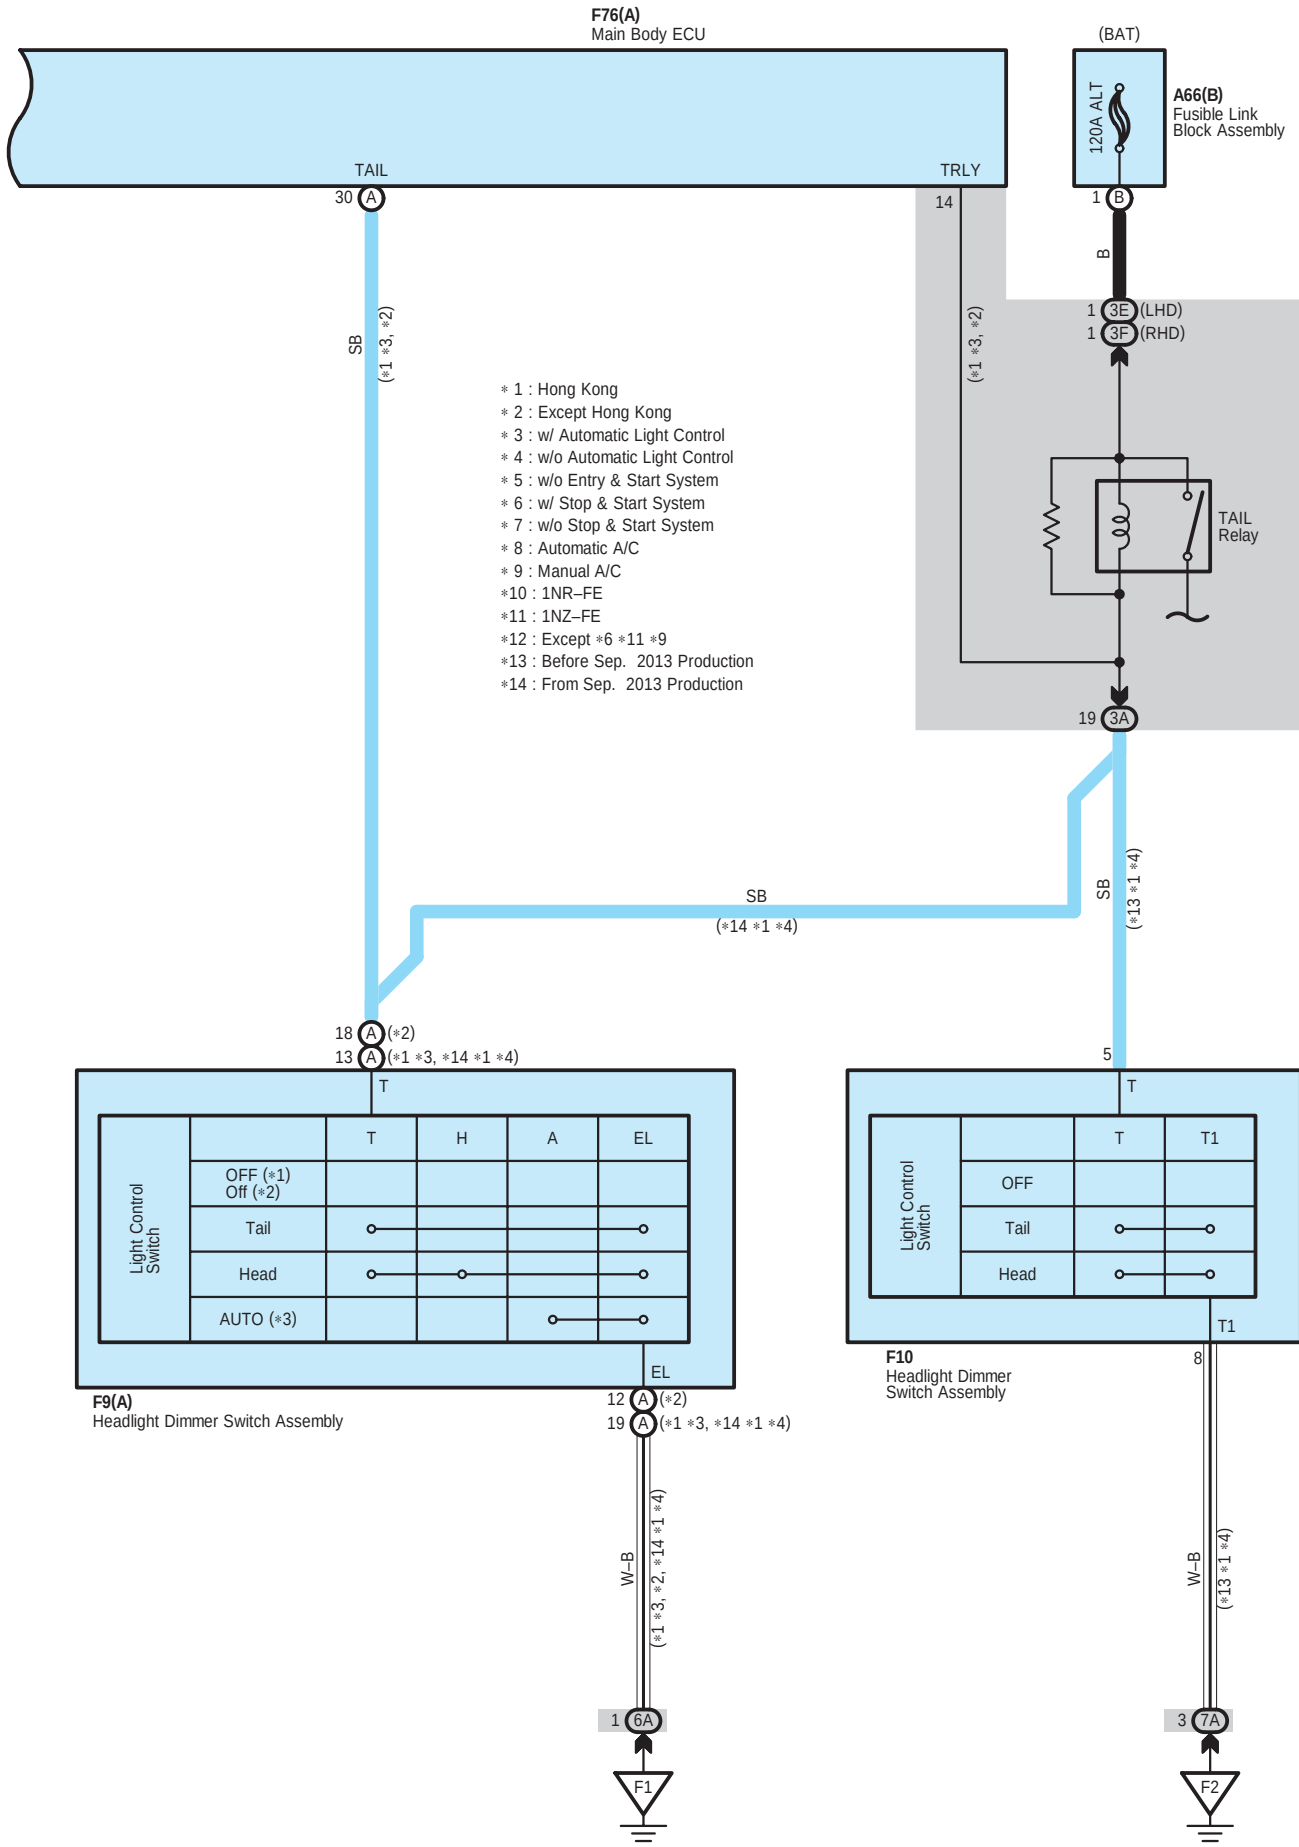


A 35
Black

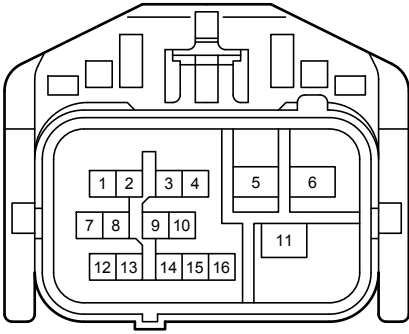


A 64
White

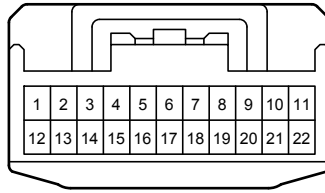


A 66
White




F 1
Black

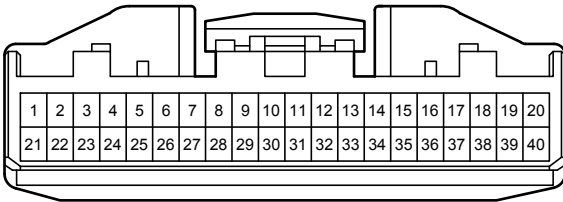

F 9
Black

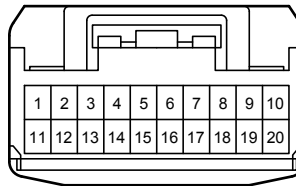


F 10
White

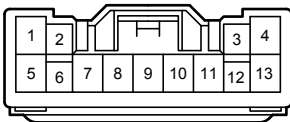


F 15
White




F 76
White

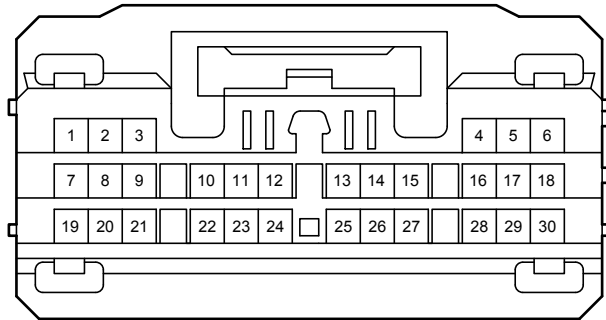


F 82
Blue

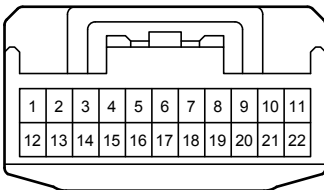


F 83
Gray

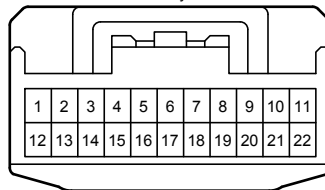


F 84
Black

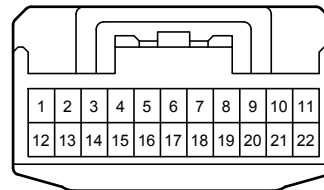

F 85
Black

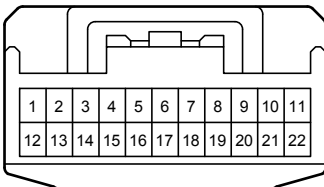

F 90
Black

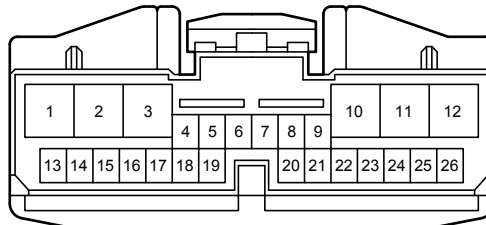


K 1
White




K 2
White




1D
White

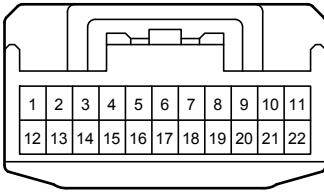


3A
White

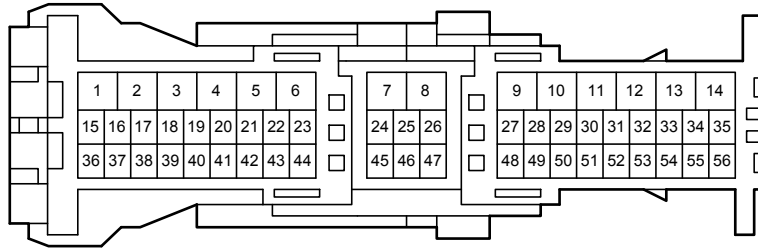


3B
White

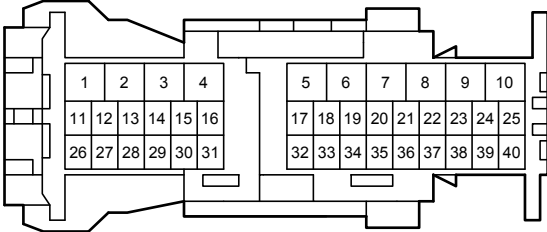


3C
White

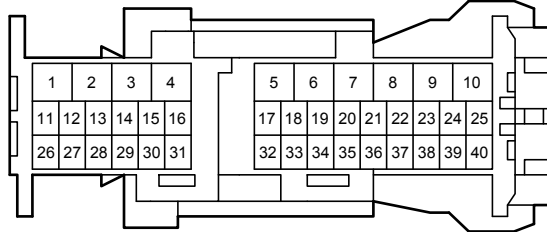


3D
White

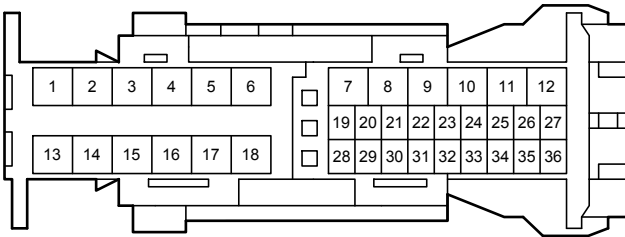


3E
White

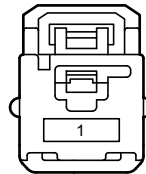


3F
White

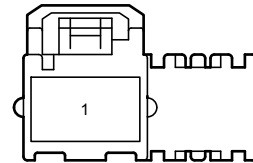



6A
White




7A
White




AF3
Black

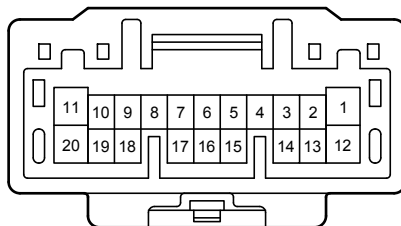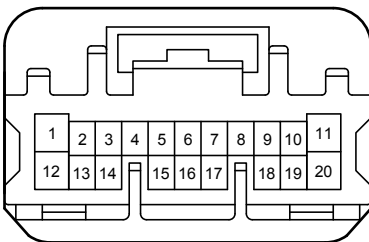

AF4
Gray

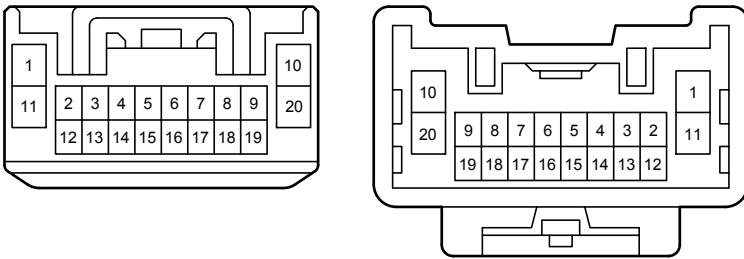

AF5
White

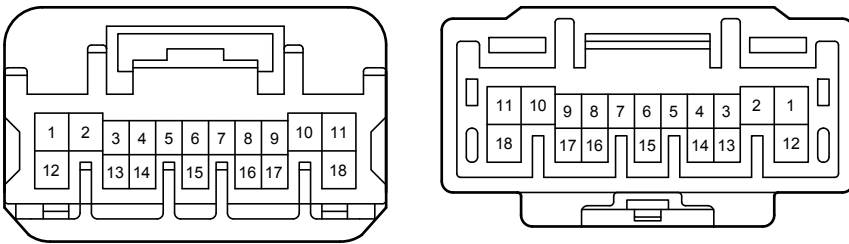

KF2
White

