




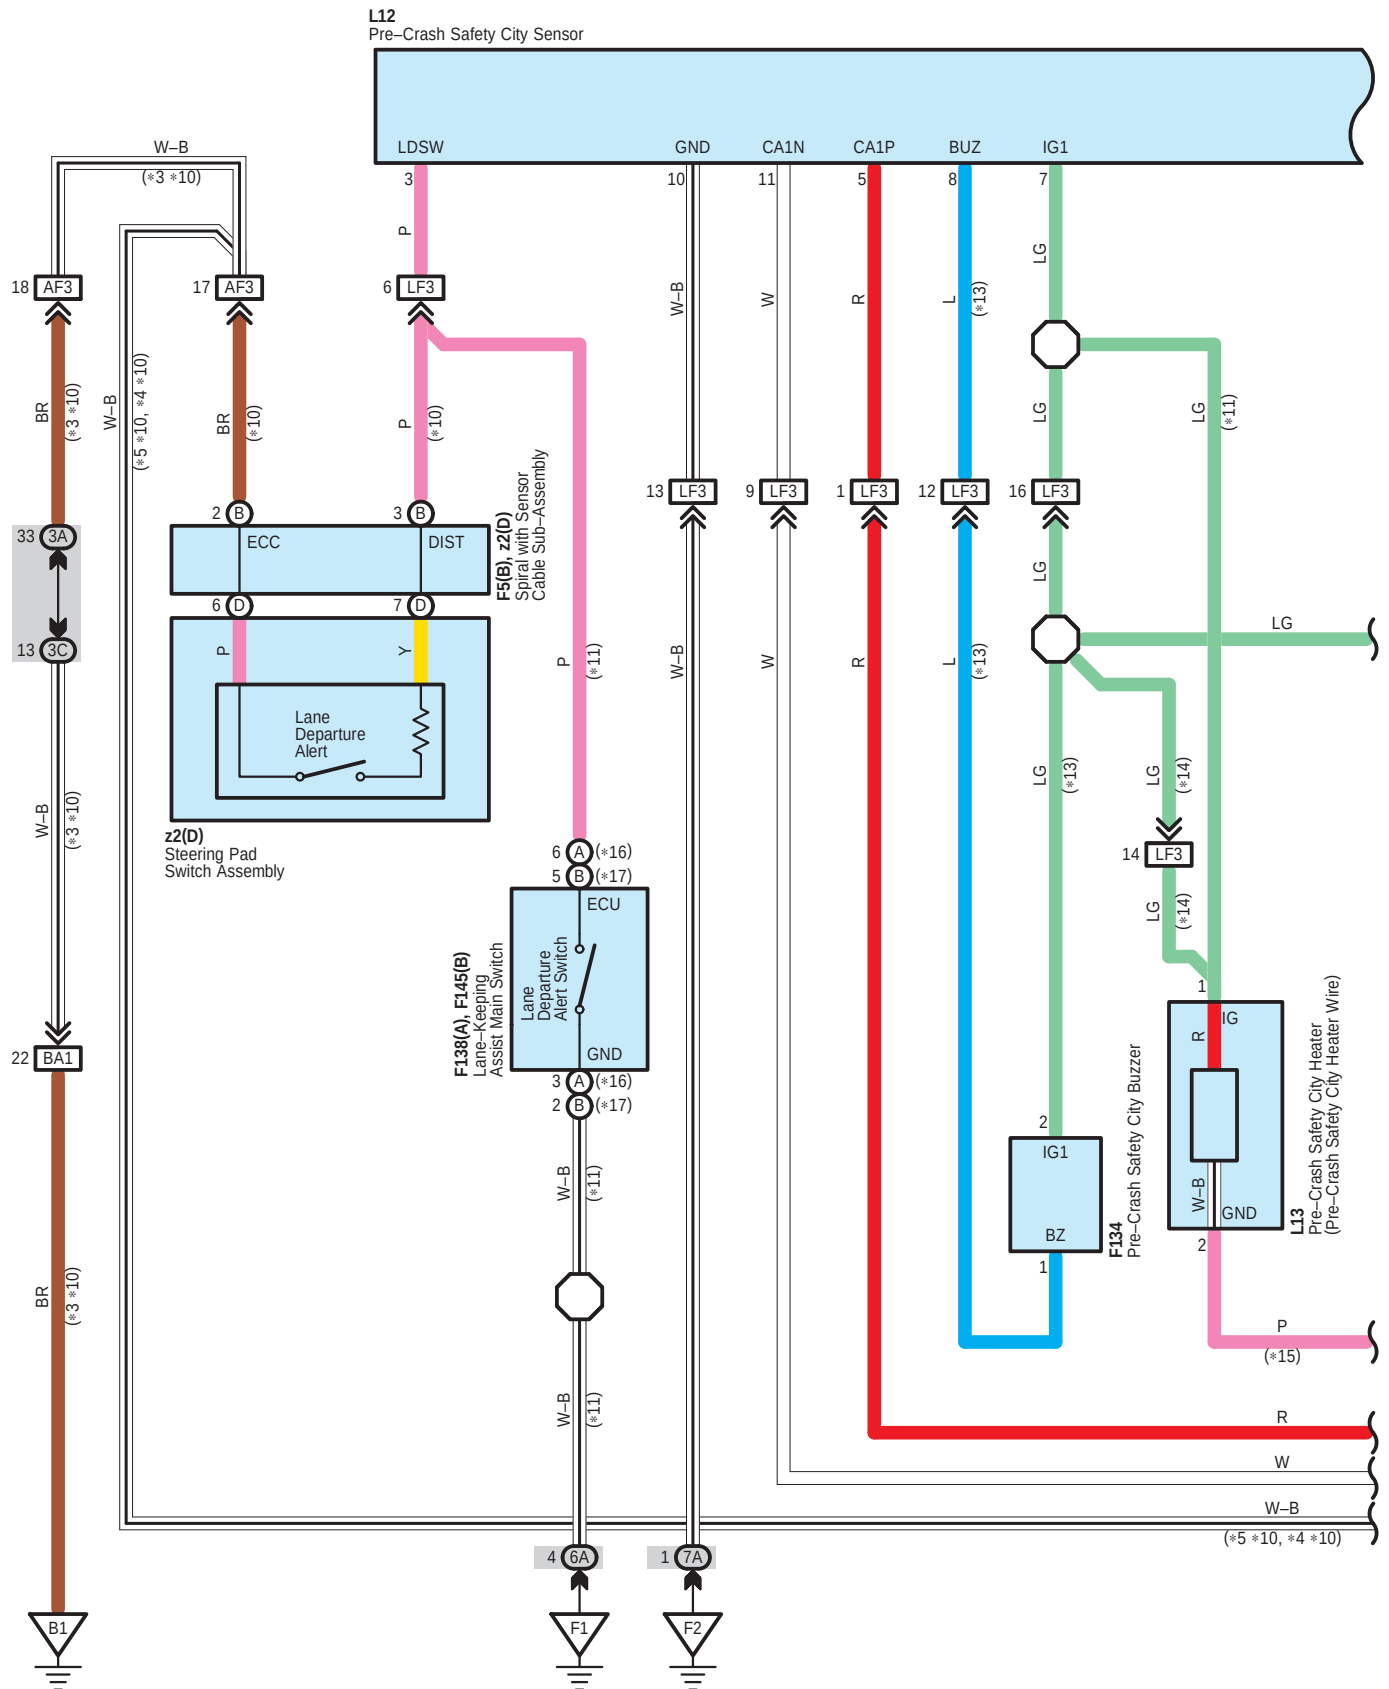


Lane Departure Alert <TMMF Made>

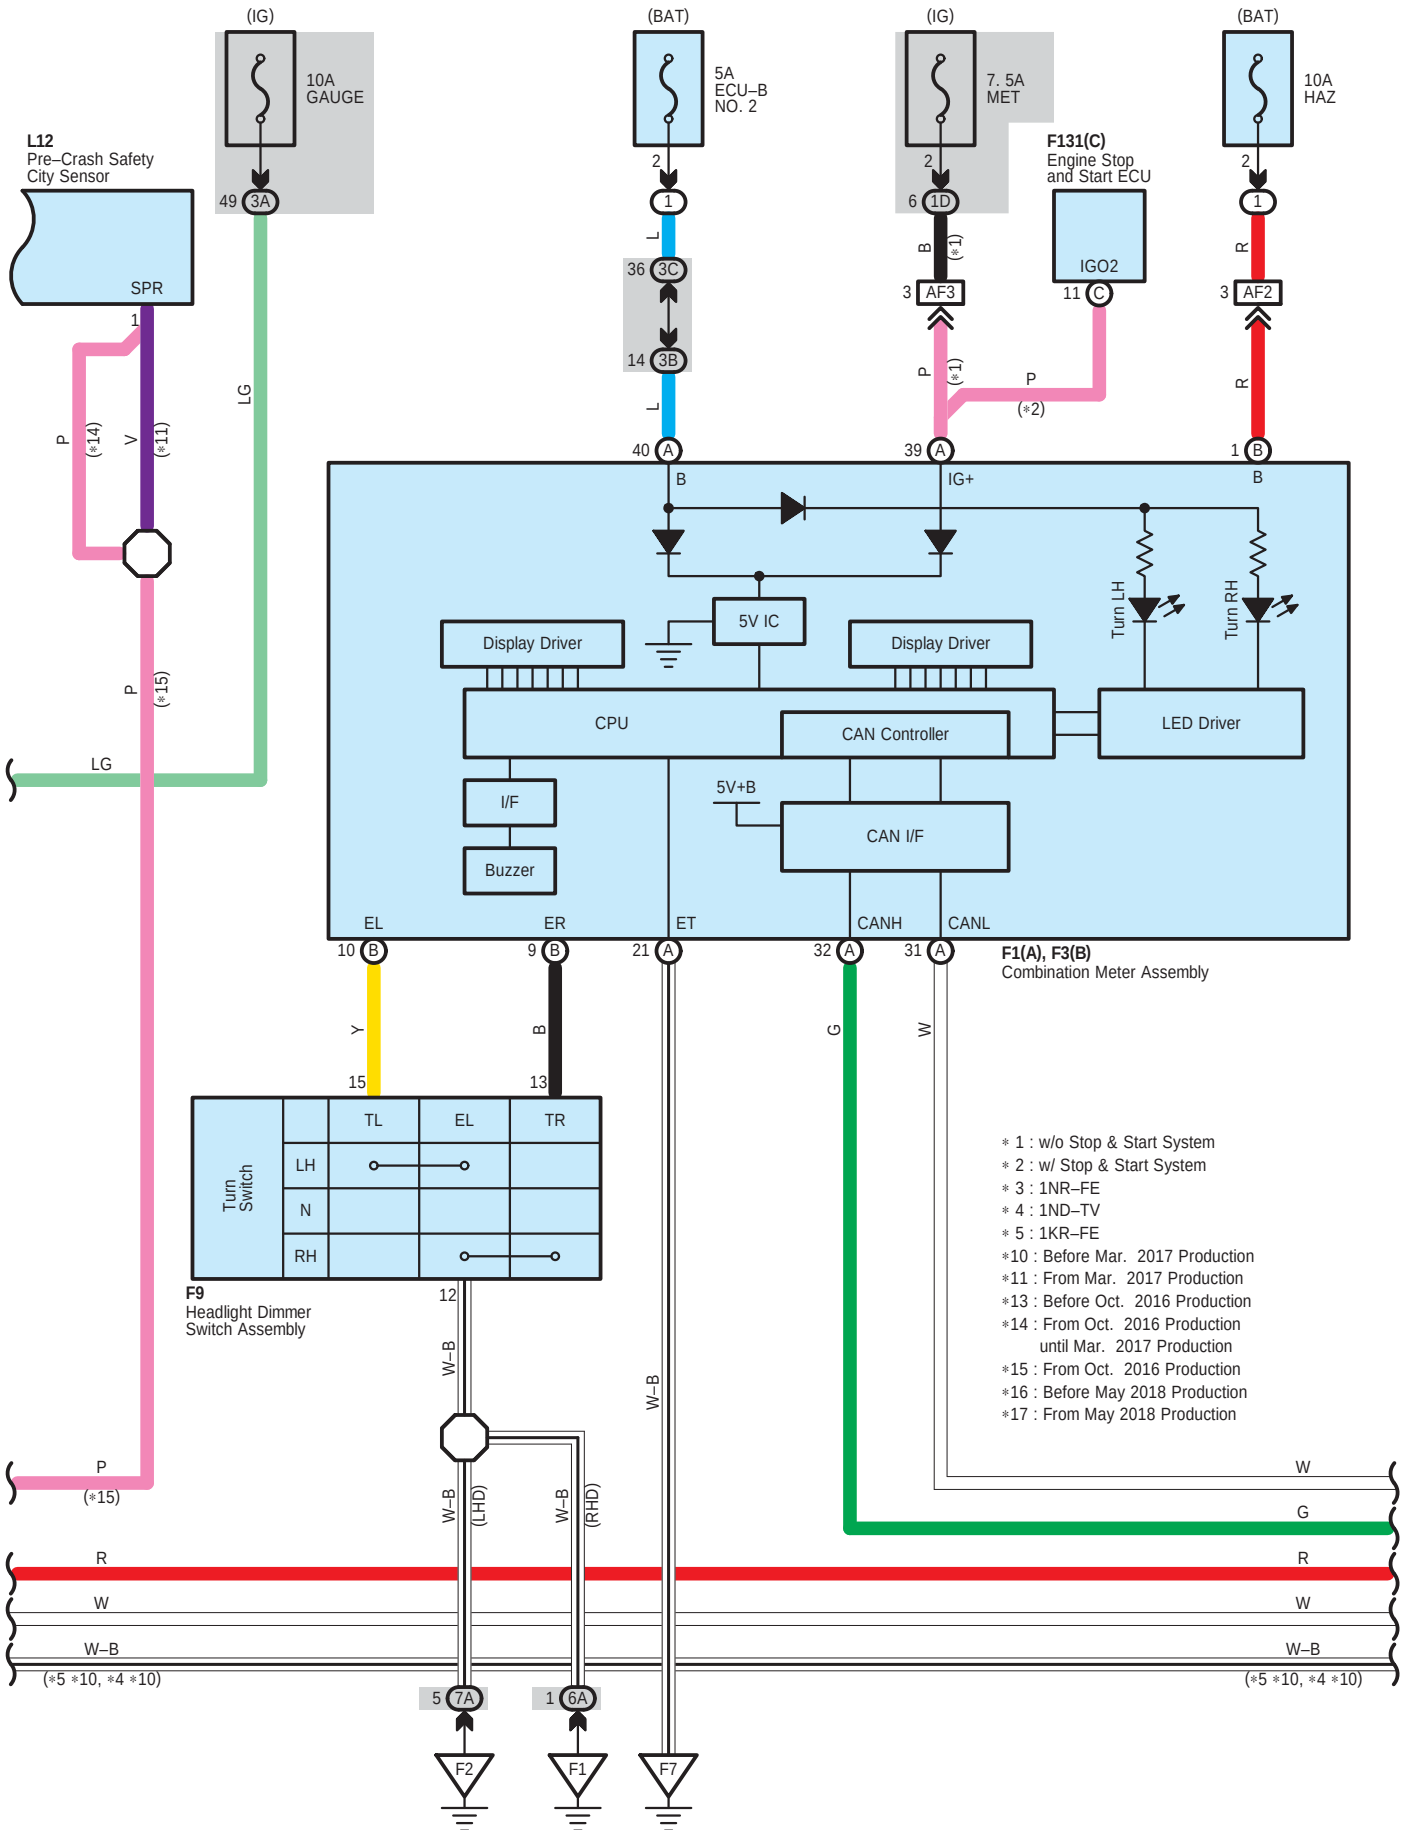


Lane Departure Alert <TMMF Made>

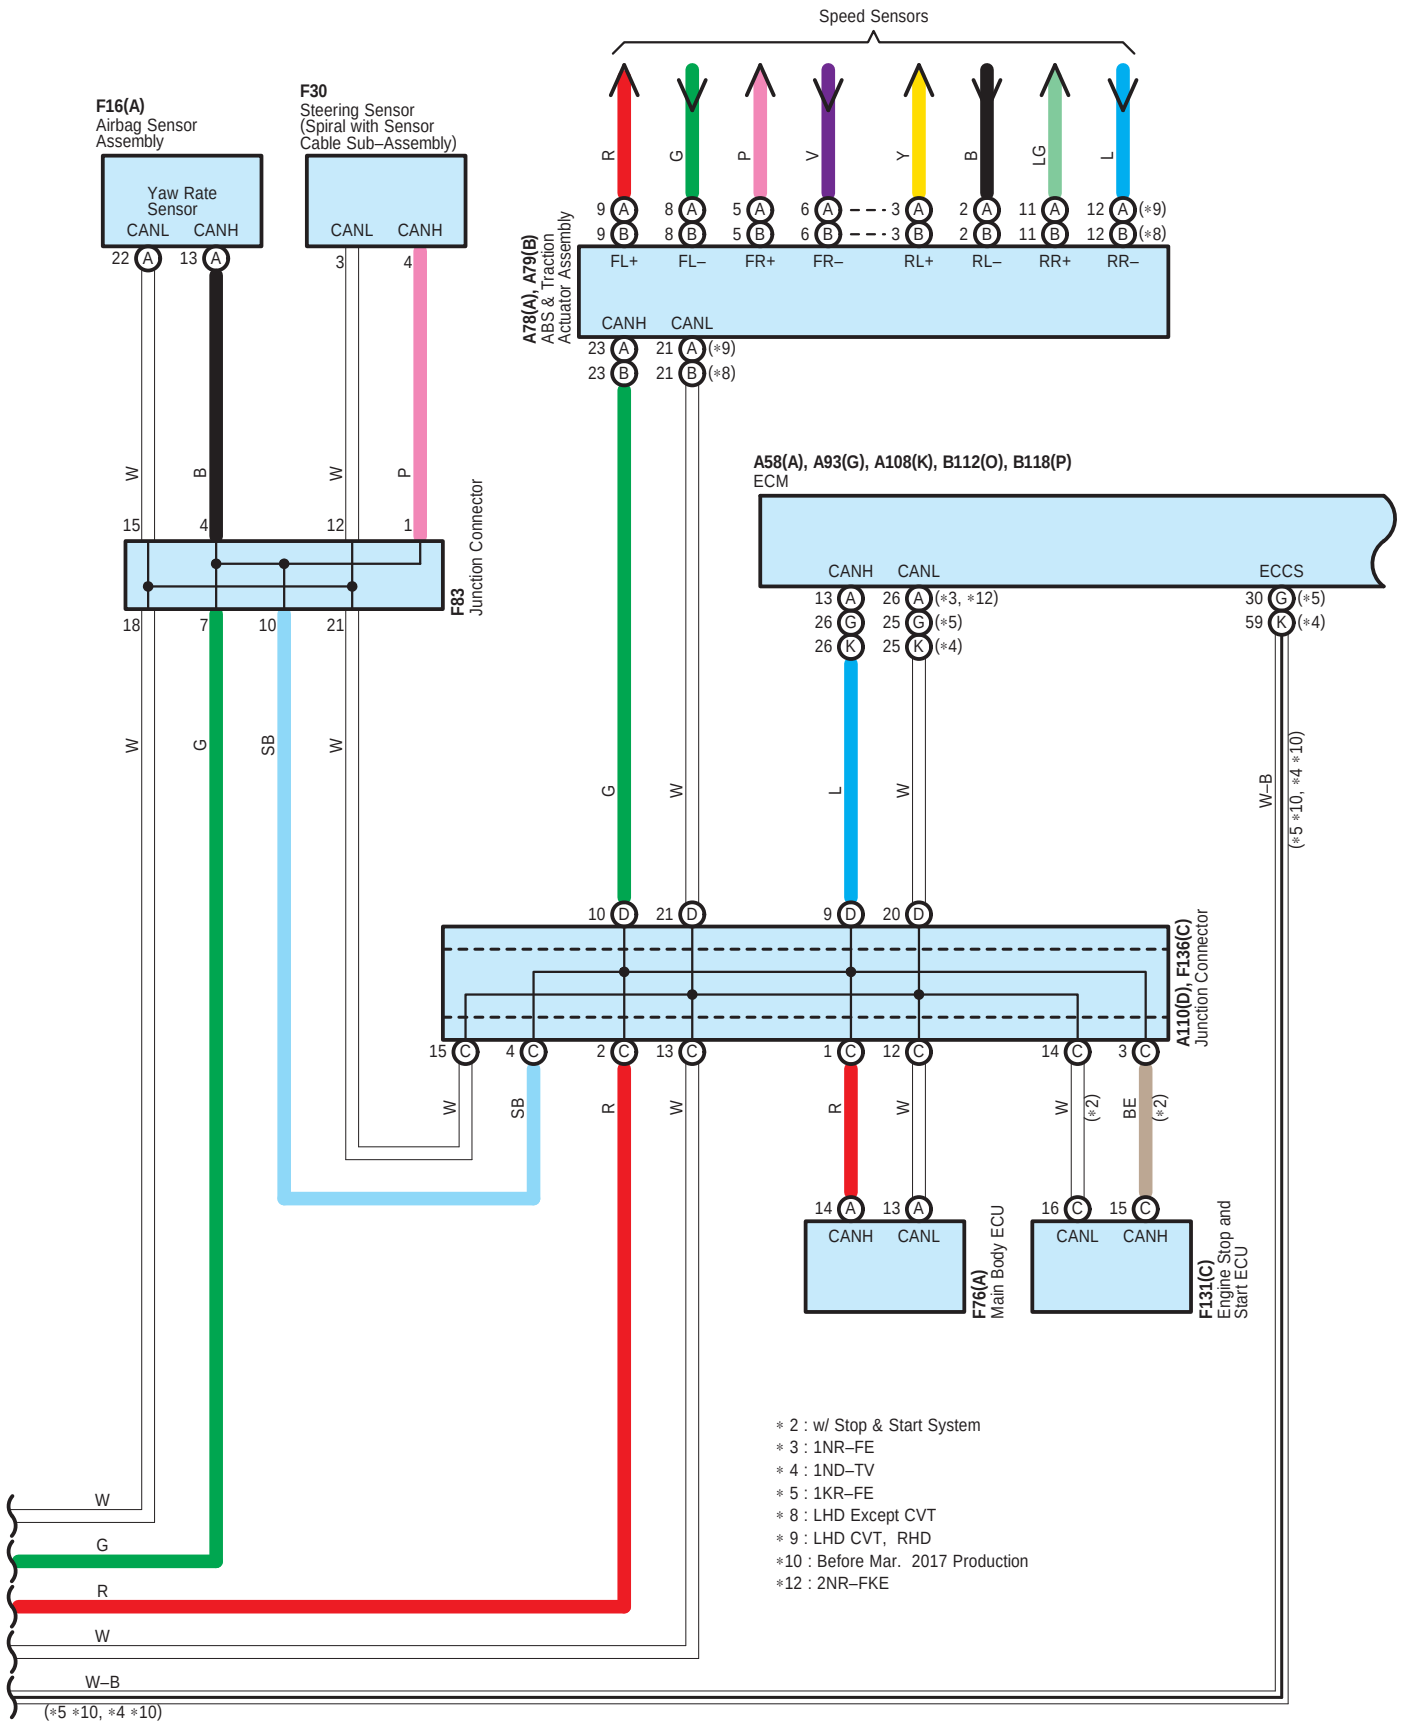


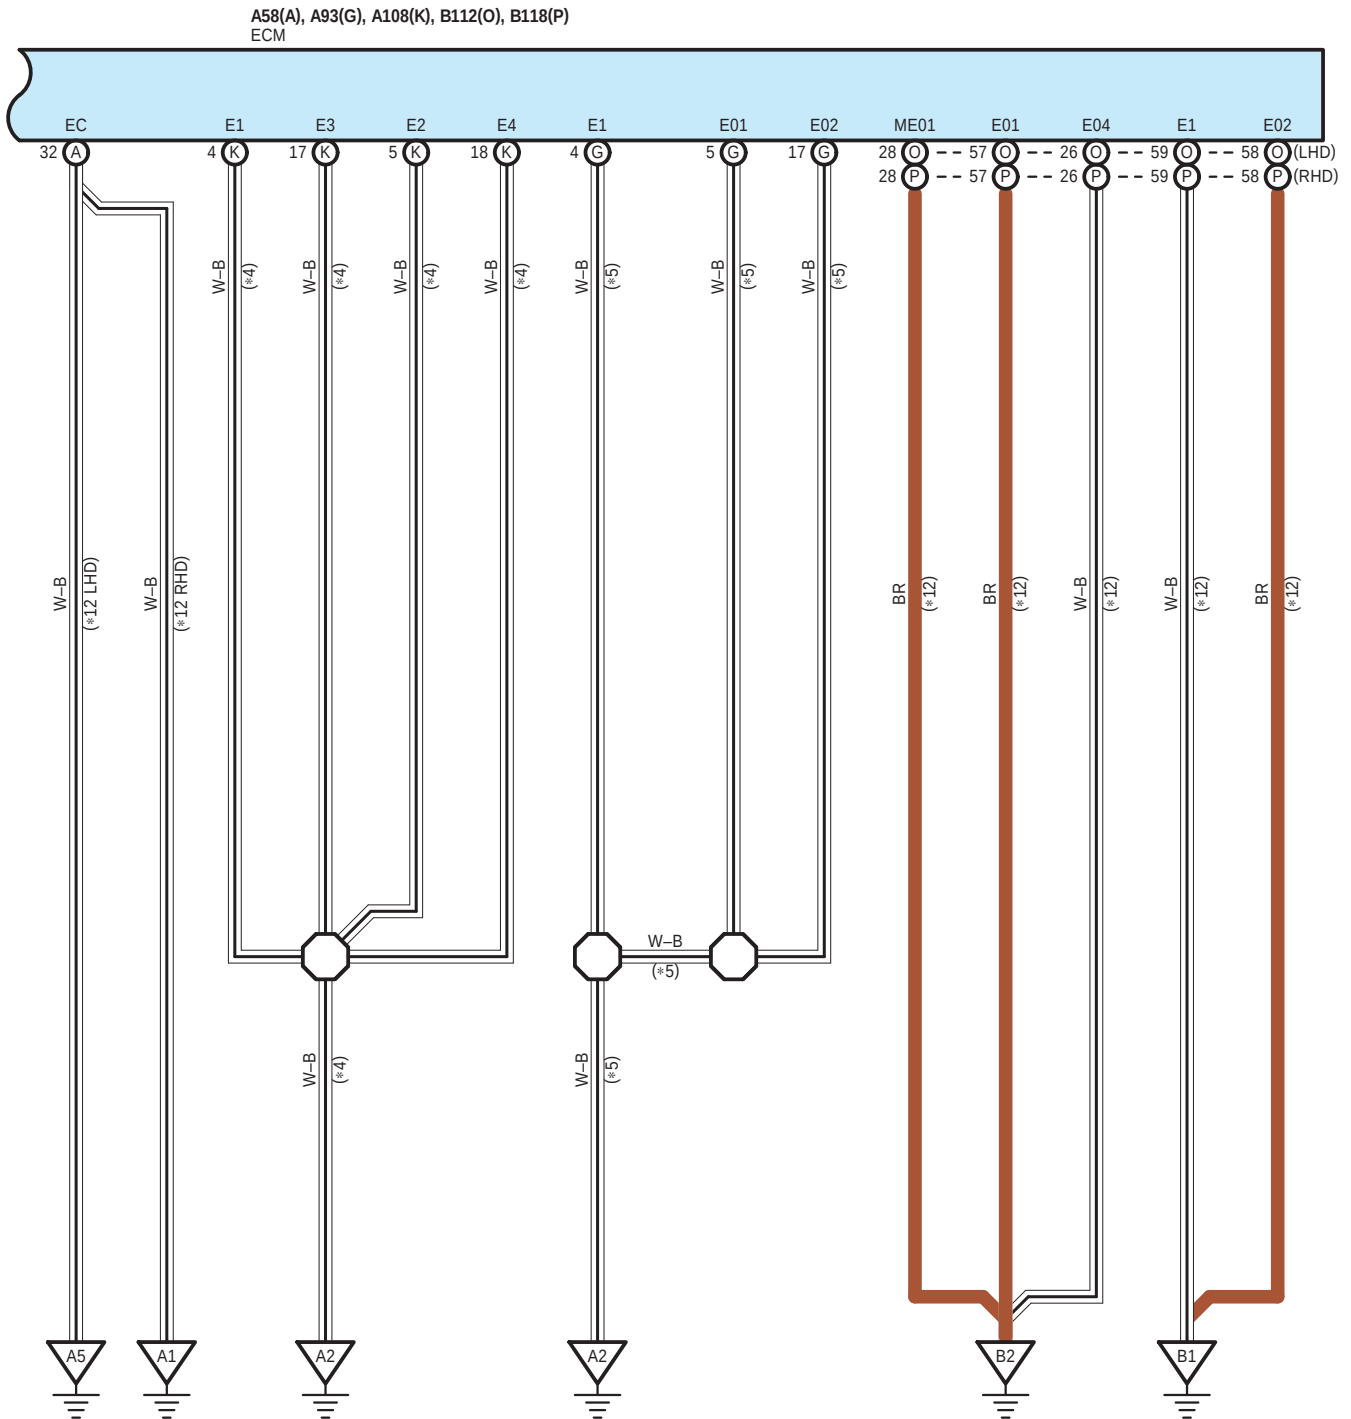


A 58
Black

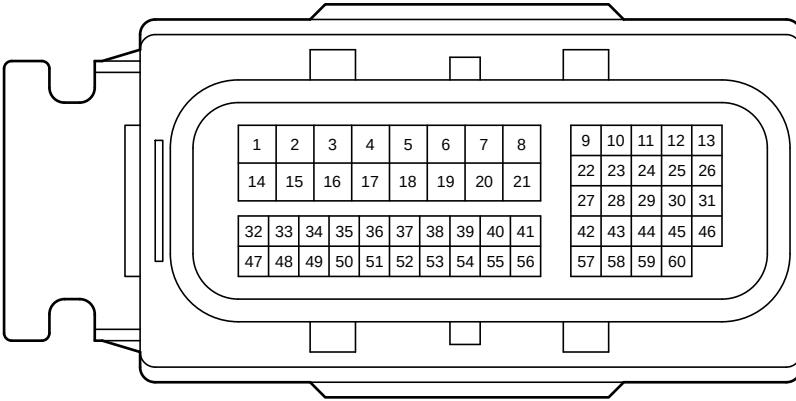


A 78
Black

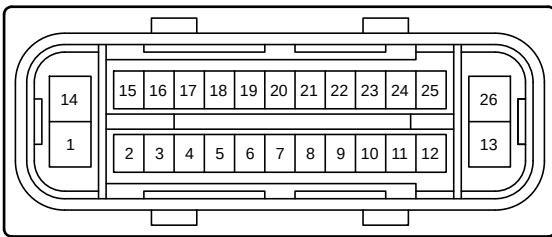


A 79
Black

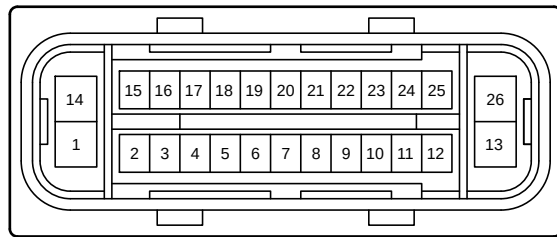


A 93
Black

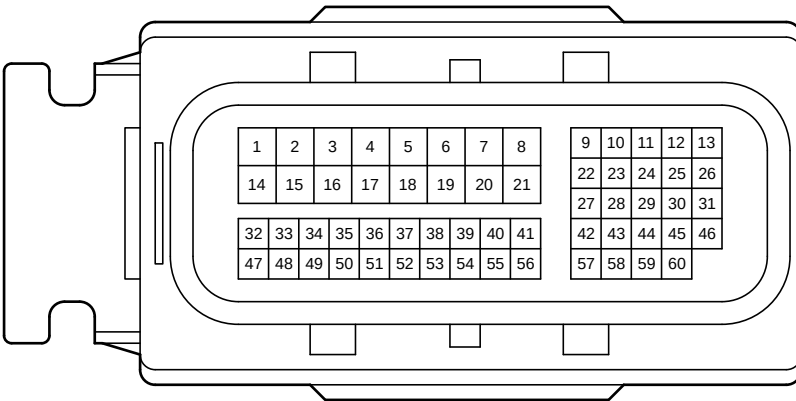


A108
Black

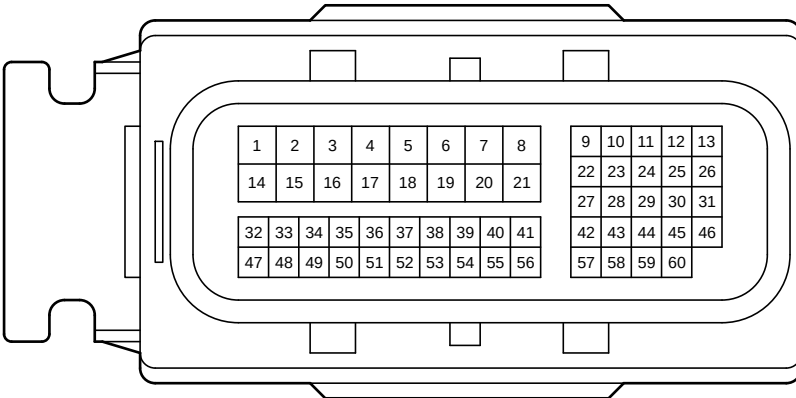


A110
Blue

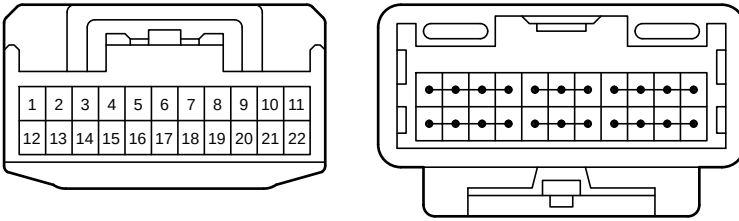


B112
Black

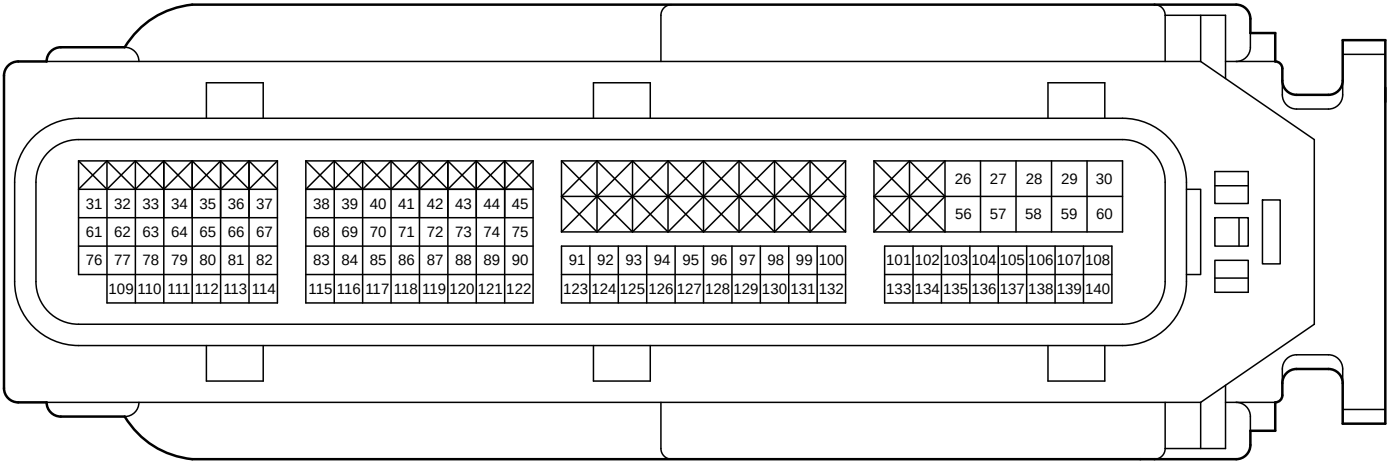


B118
Black

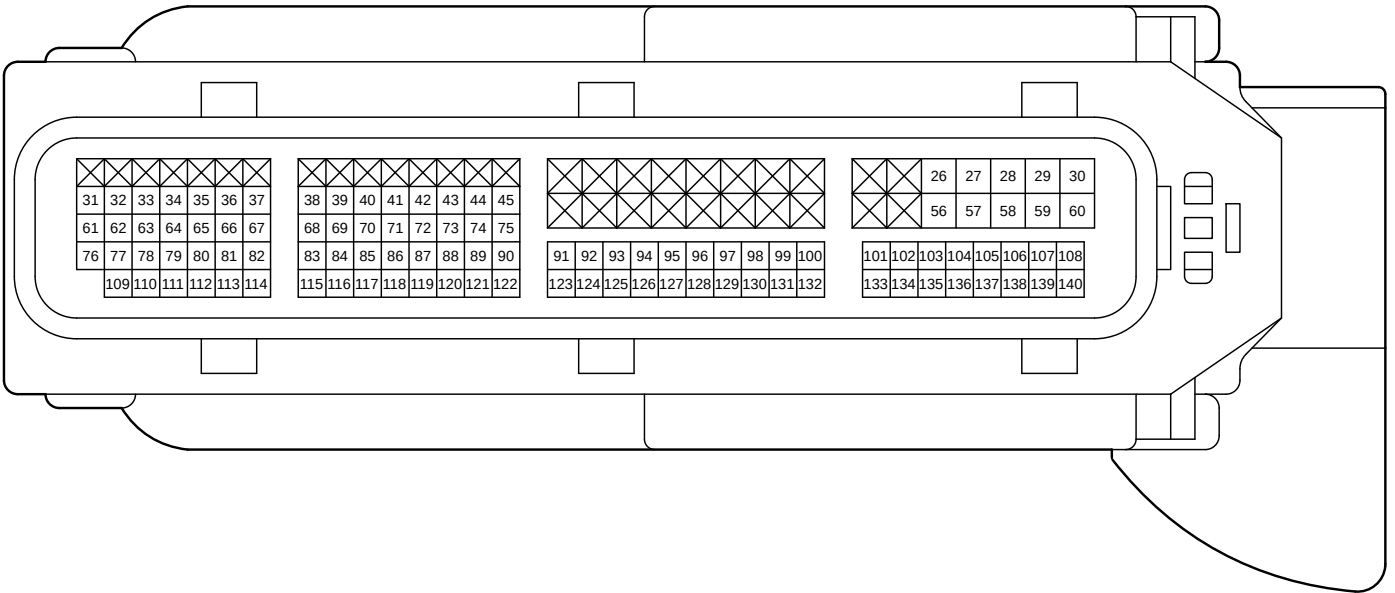


F 1
Black

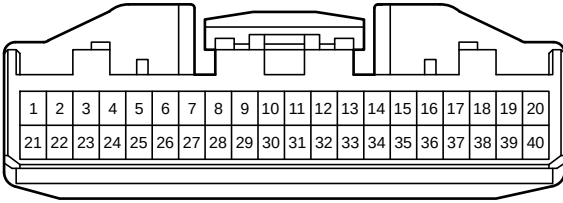


F 3
White

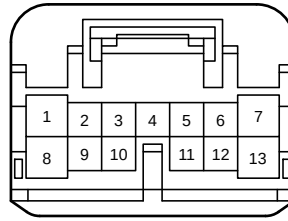


F 5
Black

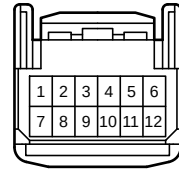


F 9
Black

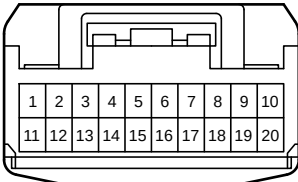


F 16
Yellow

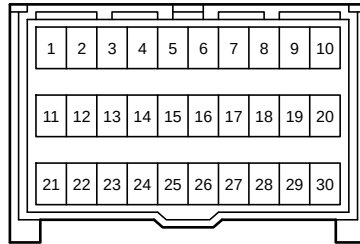


F 30
White

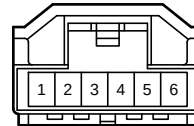


F 76
White

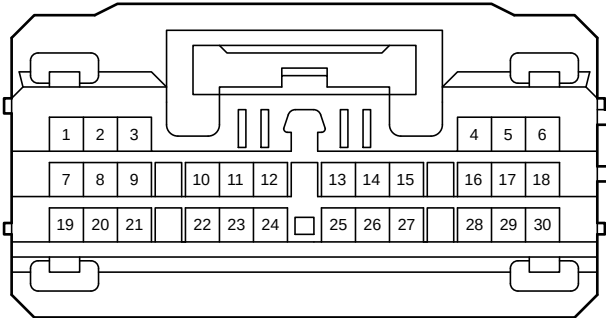


F 83
Gray

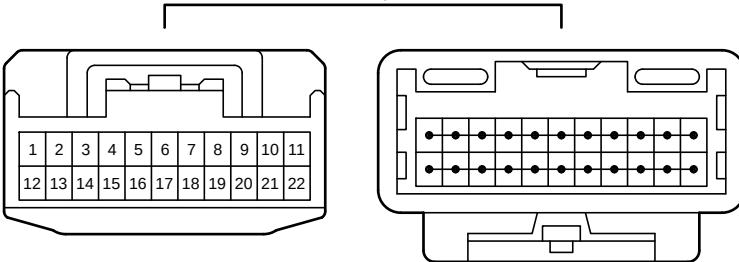


F131
Black

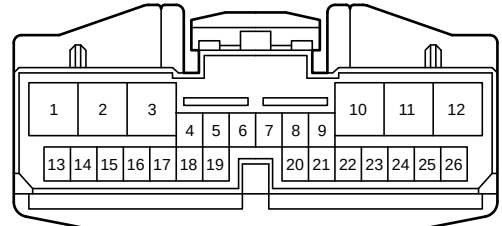


F134
Blue



F136
White

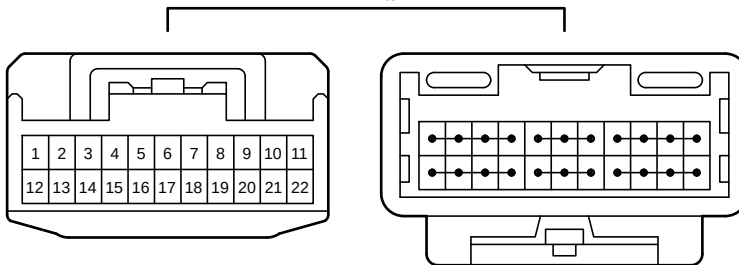


F138
White

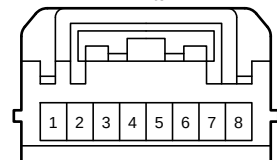


Lane Departure Alert <TMMF Made>


F145
Blue

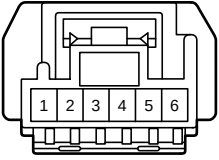


L 12
Gray

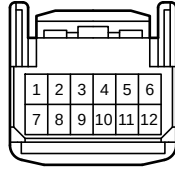


L 13
Black




z 2
White

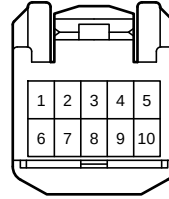


1D
White

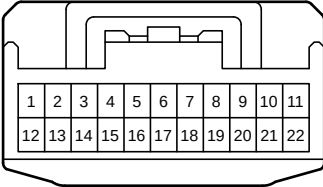


3A
White

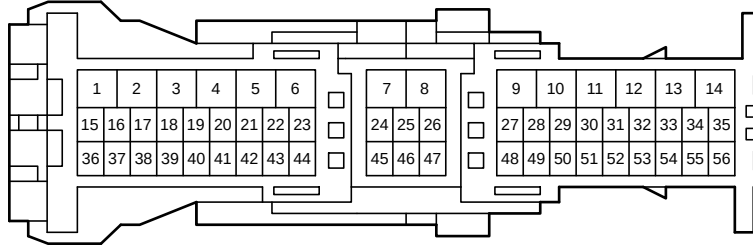


3B
White

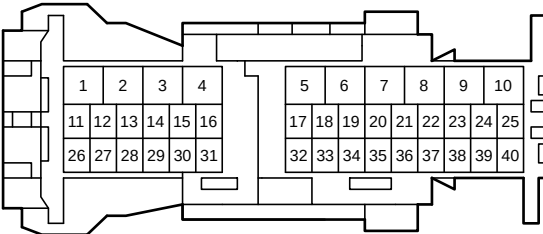


3C
White

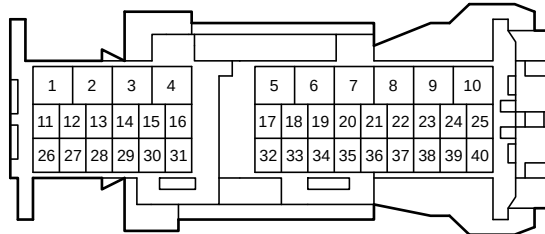


6A
White




7A
White



AF2
White


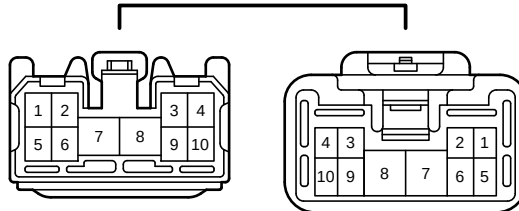


AF3
Black

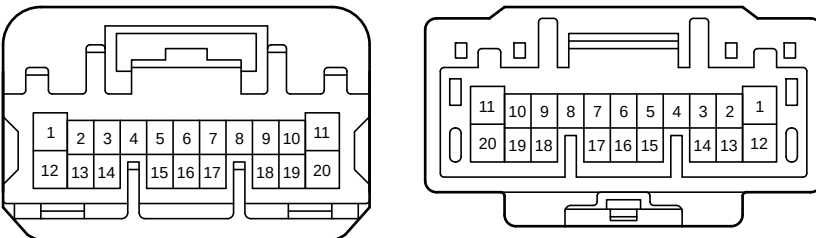

BA1

White

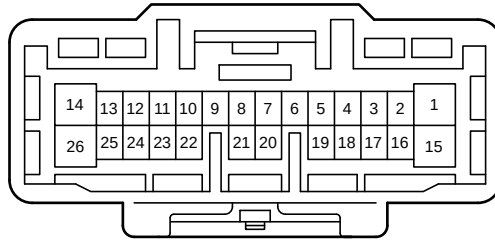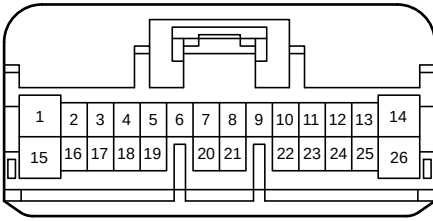

LF3

White

