
RADIATOR SUPPORT (ASSY)


F22816A

REPLACEMENT

REMOVAL

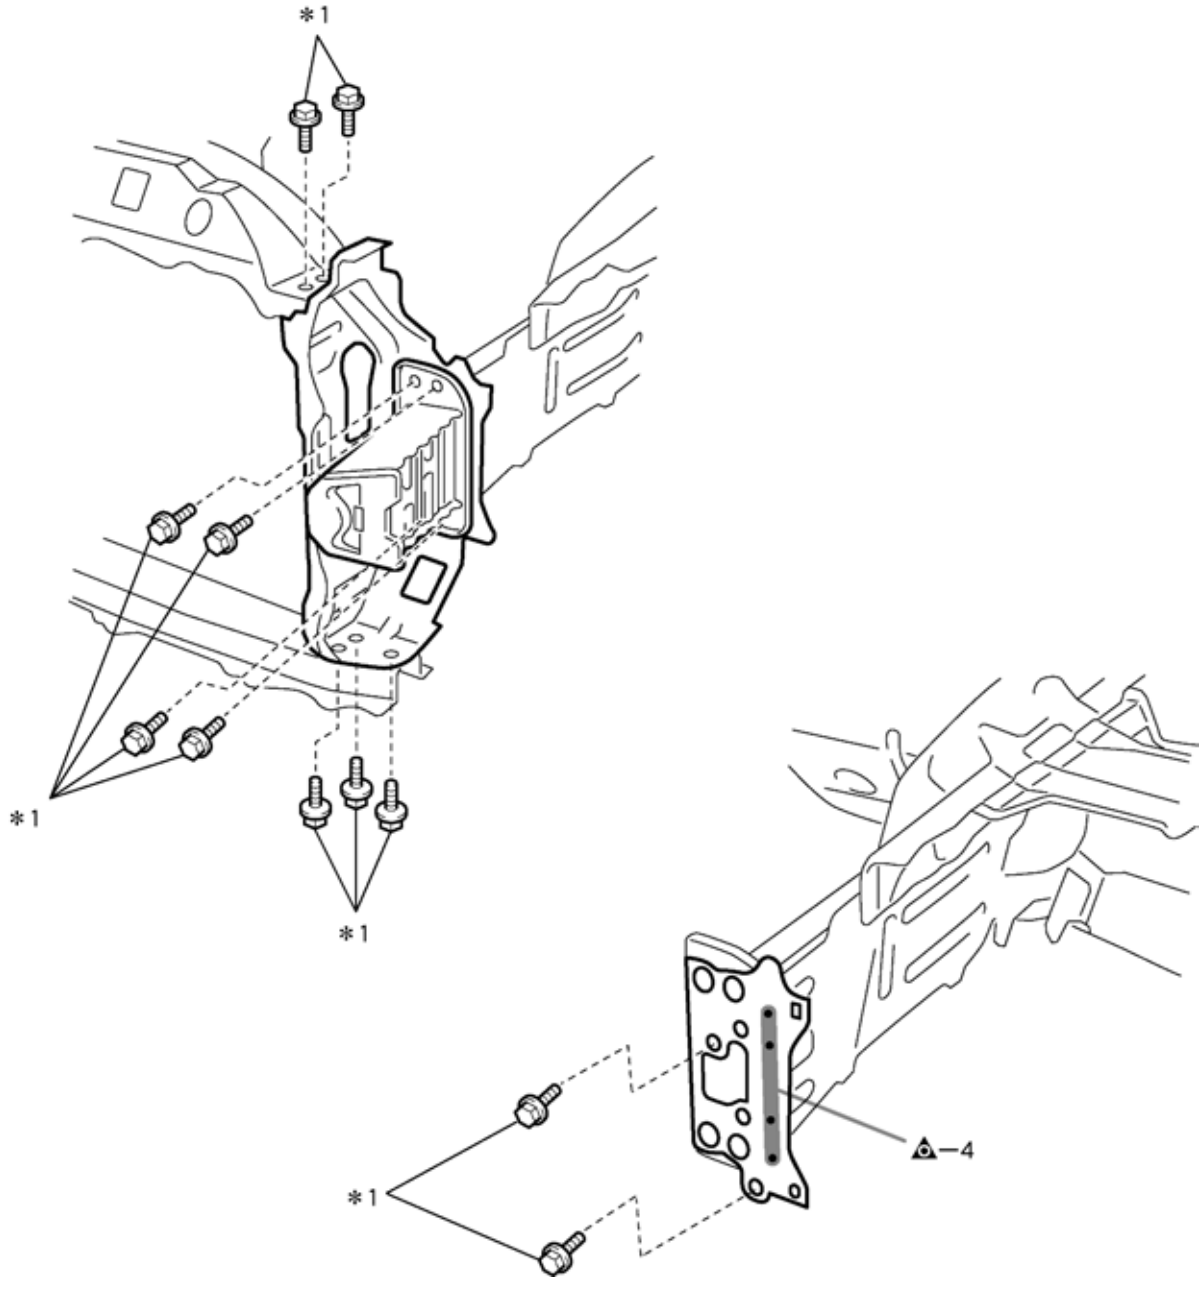


F22816

POINT

1 *1: Bolt

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

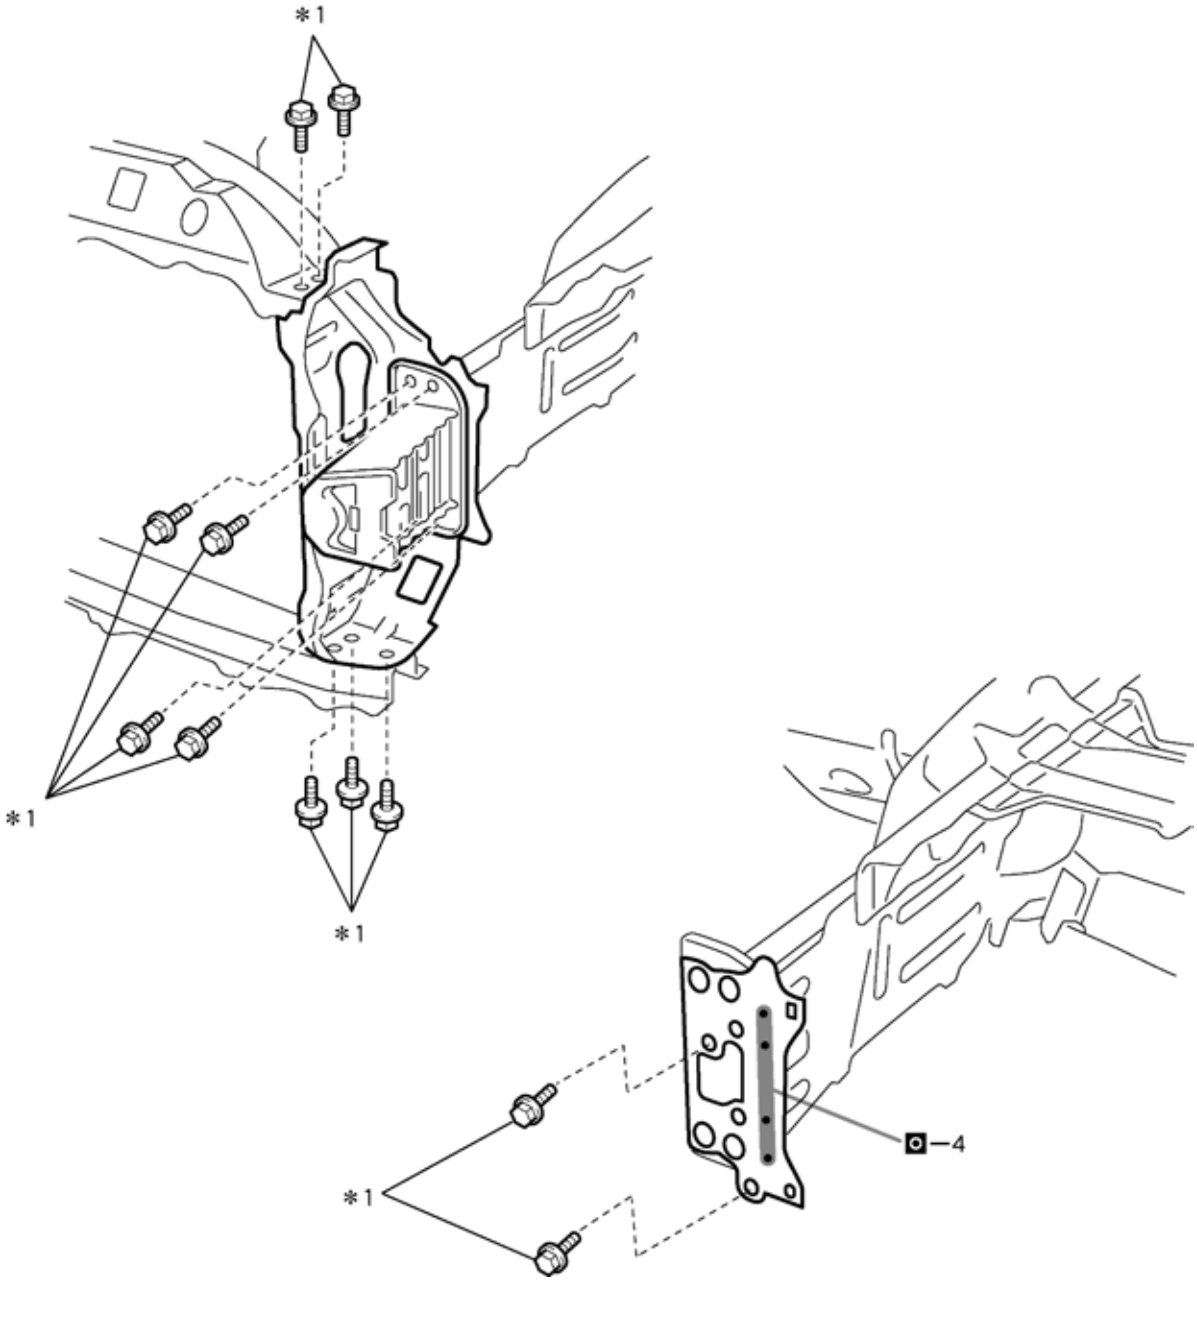


F22817

POINT


1 Inspect the fitting of the headlight, front fender, hood and other related parts, before welding as this affects the appearance of the finish.

2 *1: Bolt

[Hatchback]

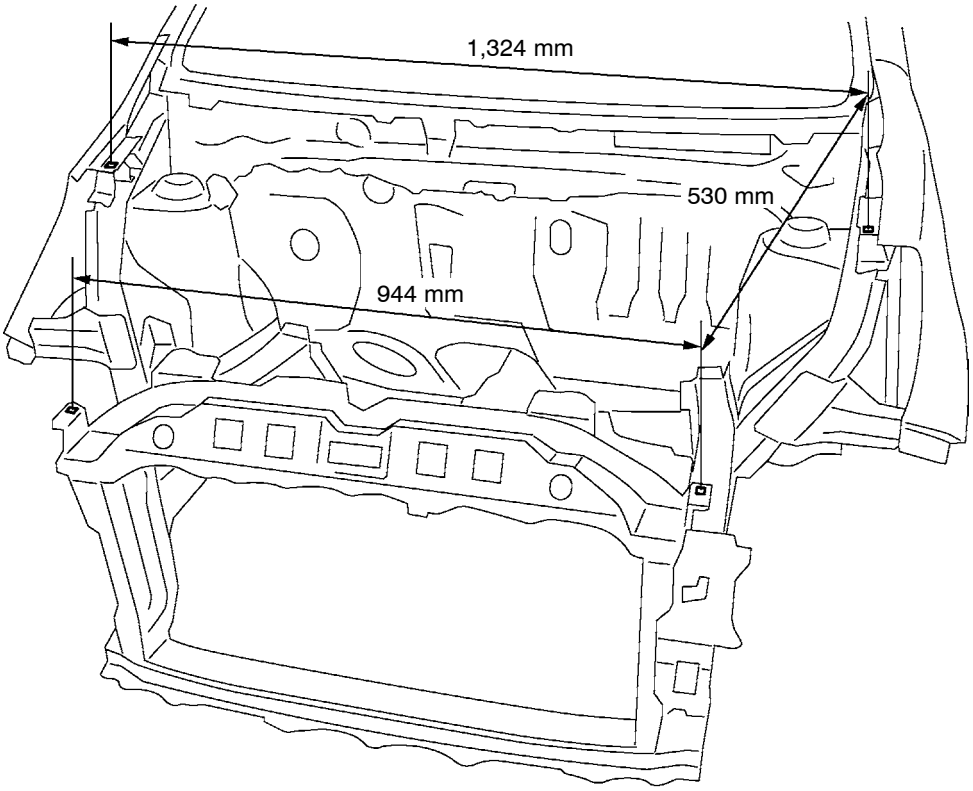

[Sedan]

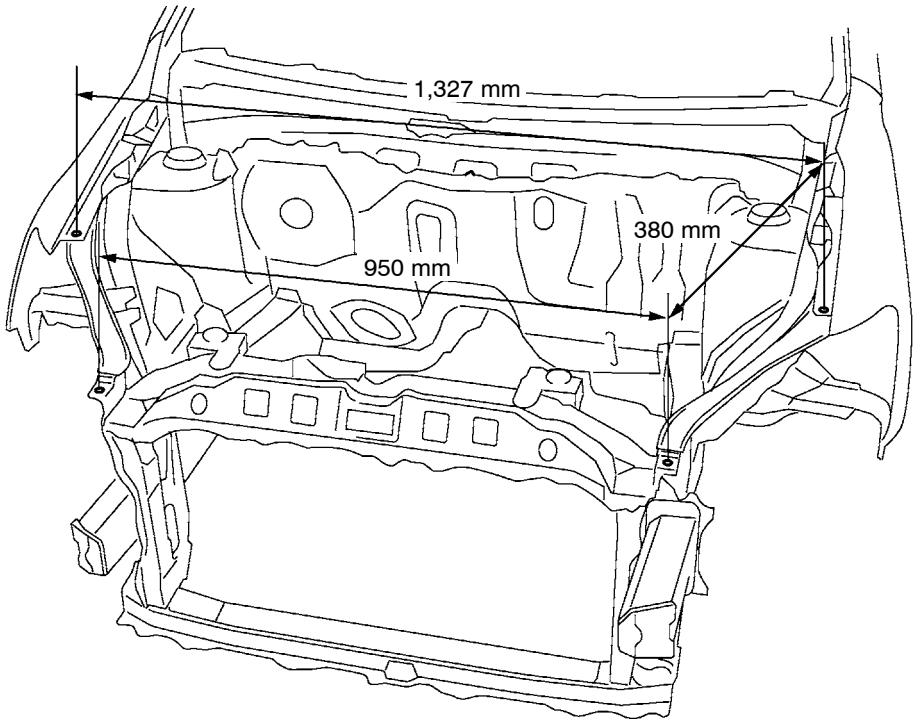

F22818-1

POINT

1 Measure the dimensions before installing the headlight.
2 These values are reference values.

380 mm (14.96 in.) 530 mm (20.87 in.) 944 mm (37.17 in.) 950 mm (37.40 in.)
1,324 mm (52.13 in.) 1,327 mm (52.24 in.)