

# LOWER BACK UPPER GUSSET (ASSY): Hatchback


F22859A

## REPLACEMENT


### REMOVAL

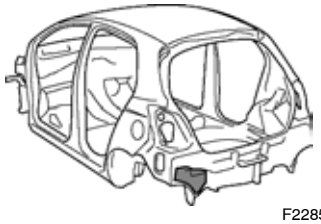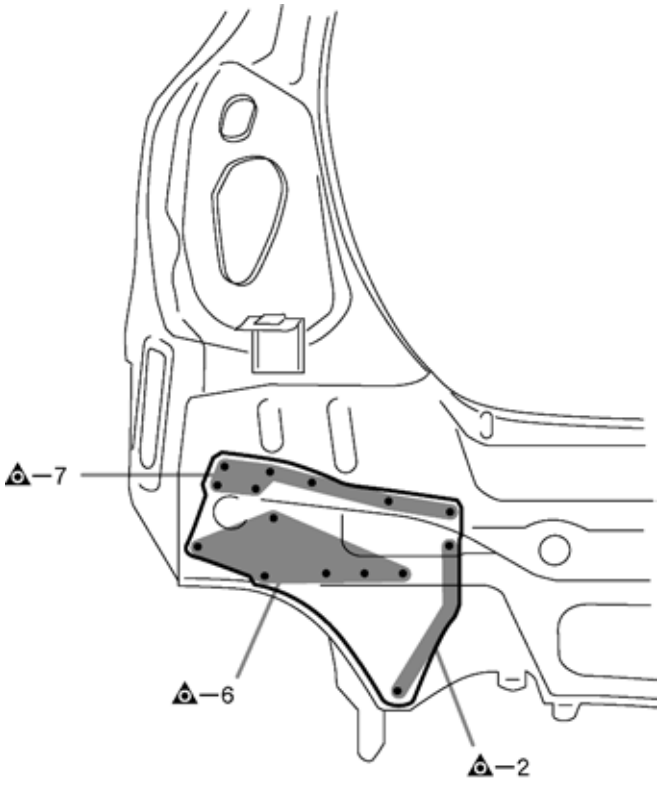

F22859

**INSTALLATION**

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

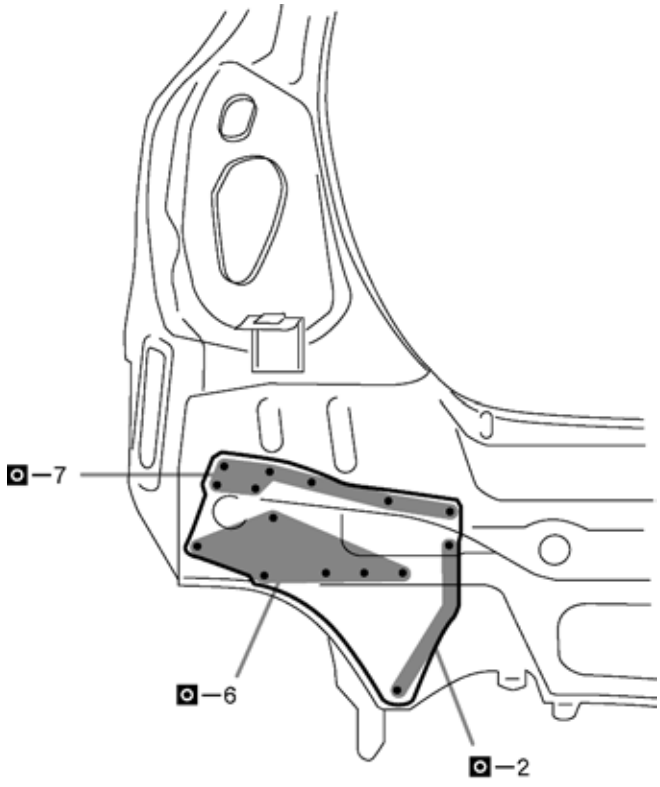



F22860

# LOWER BACK UPPER QUSSET (ASSY): Sedan


F24843A

## REPLACEMENT


### REMOVAL

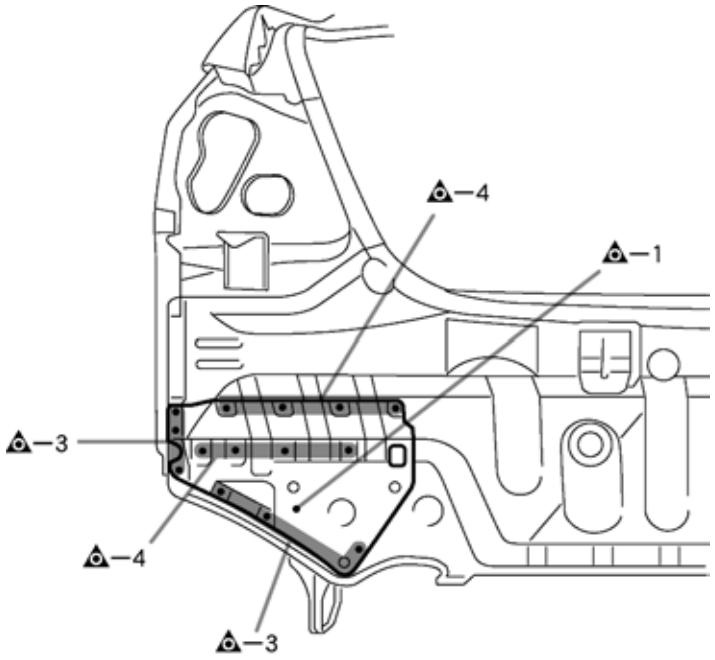

F24843-1

**INSTALLATION**

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

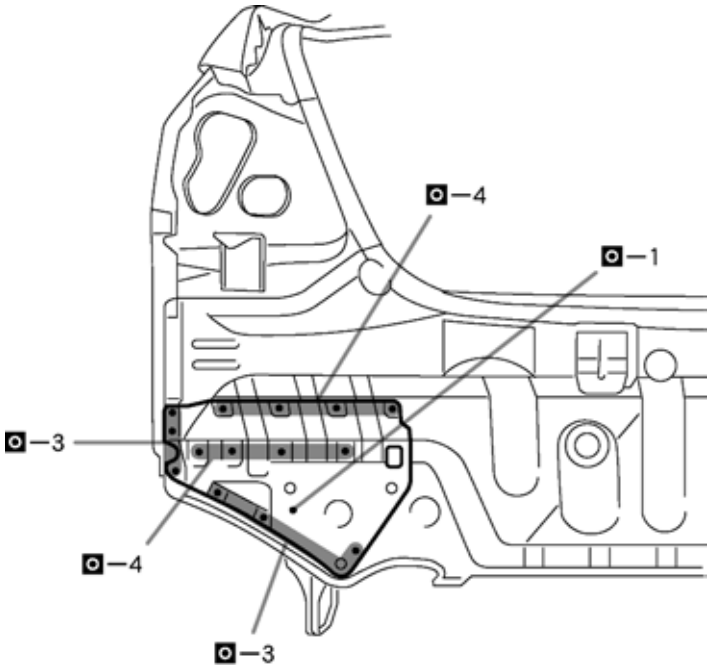


F24843-2