

FRONT FENDER APRON (ASSY)


F22821A


REPLACEMENT
With the cowl top side panel removed.

REMOVAL


[RH]

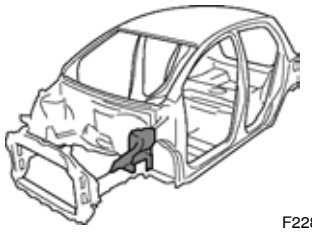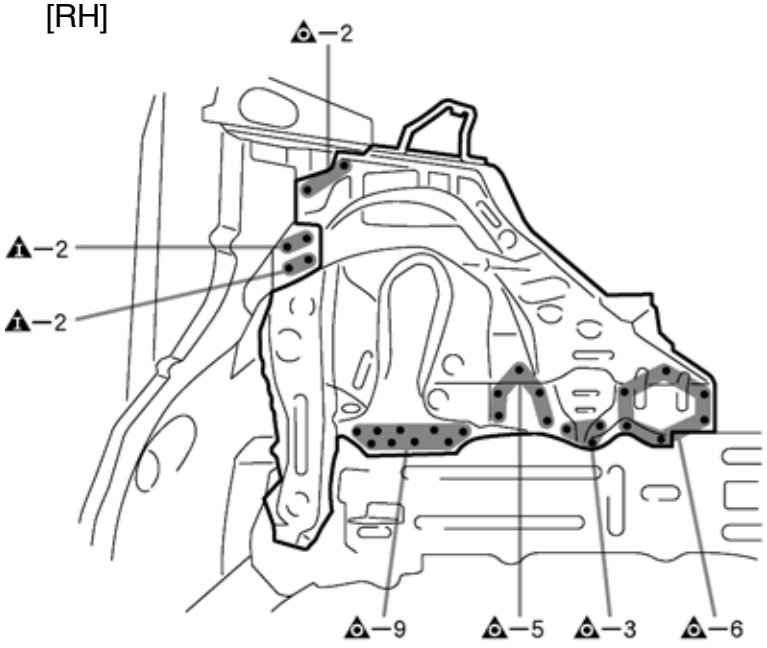


[LH]

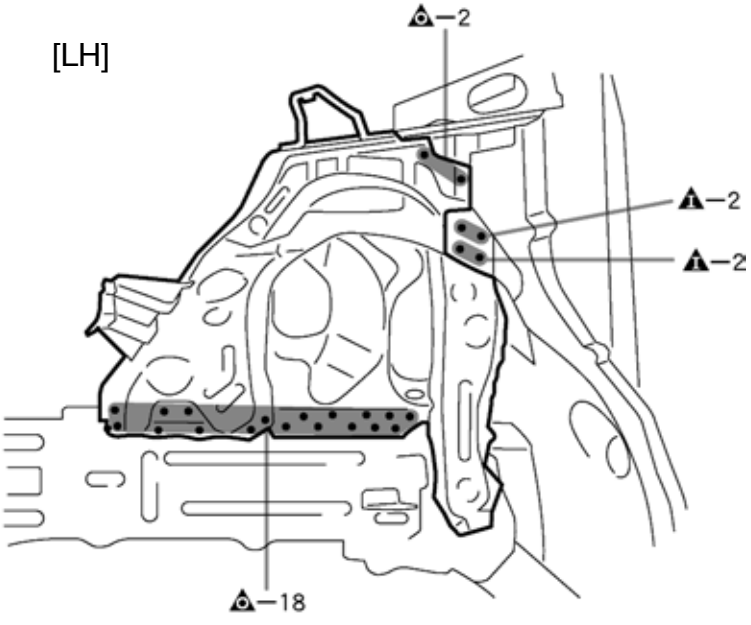

F22821

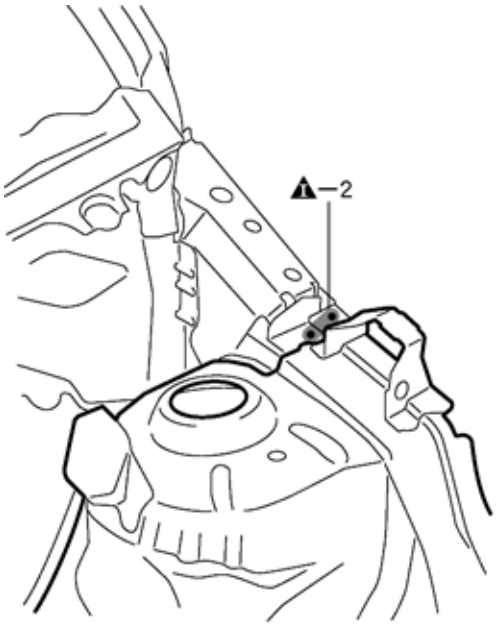


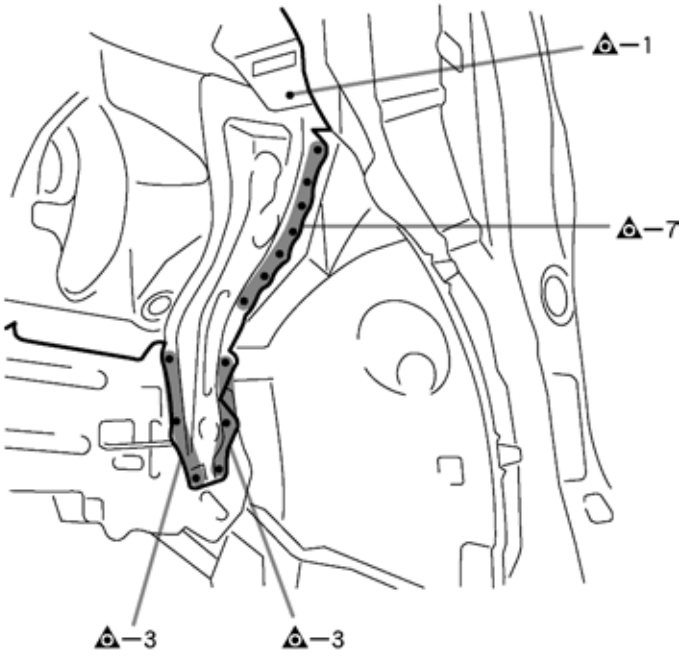

F22822

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

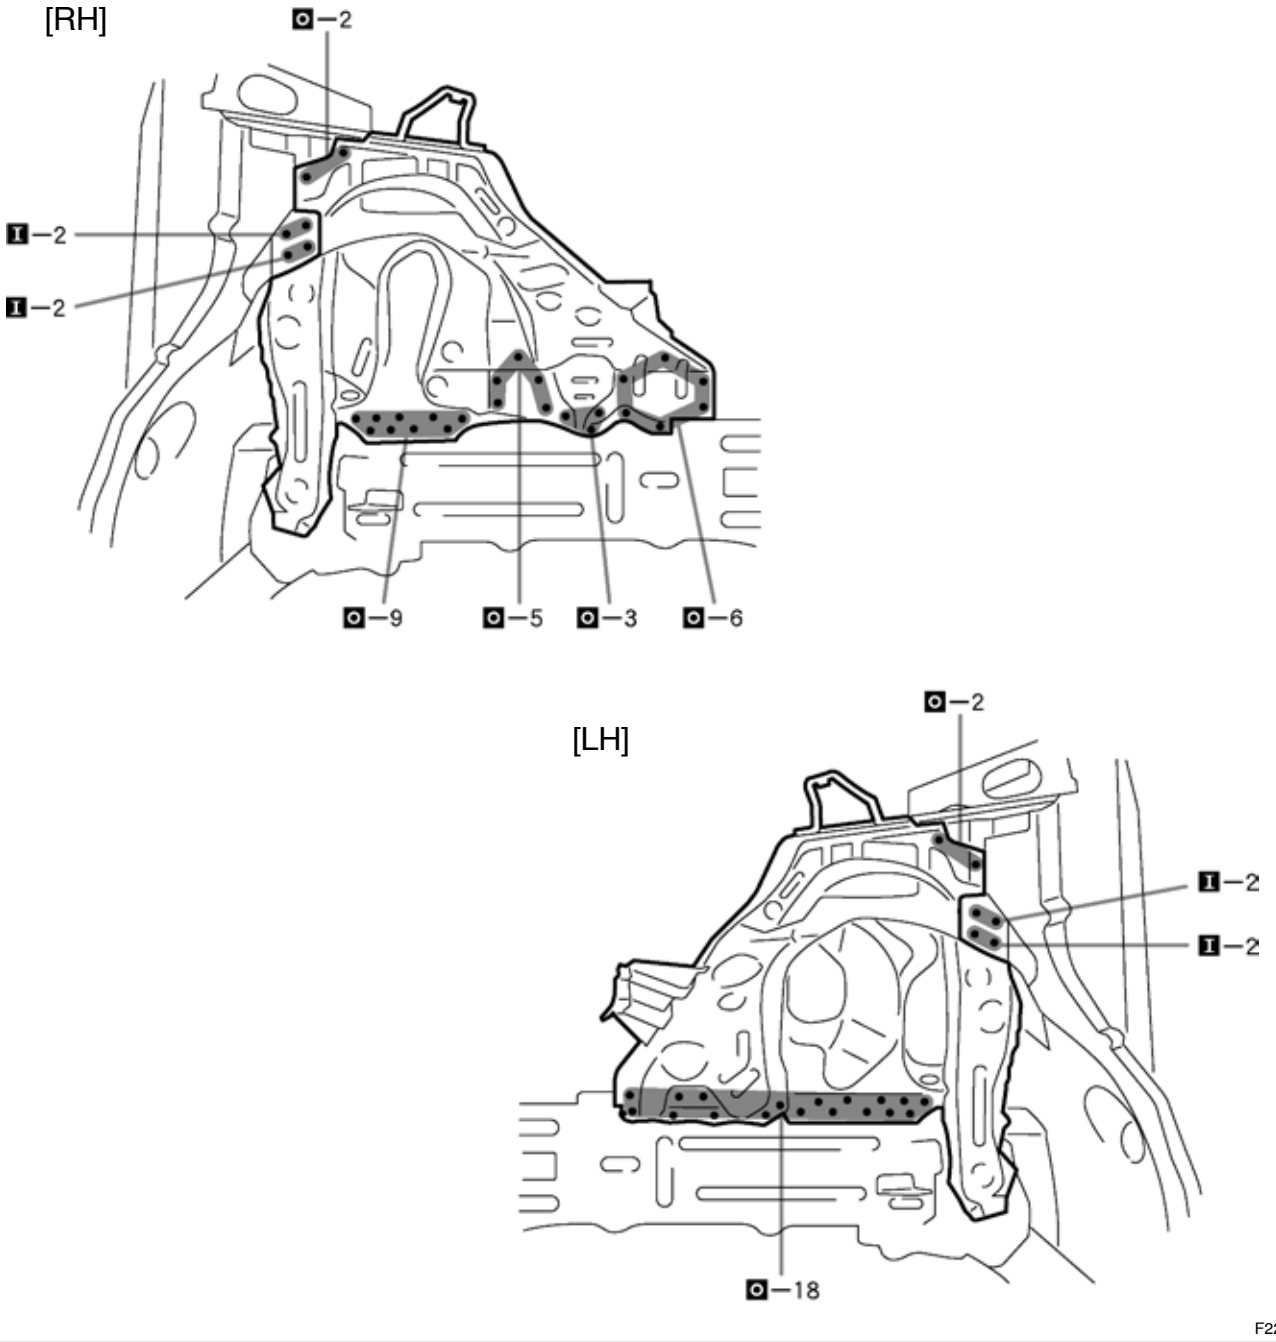


POINT

1 Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

2 Inspect the fitting of the front fender, hood and other related parts before welding as this affects the appearance of the finish.

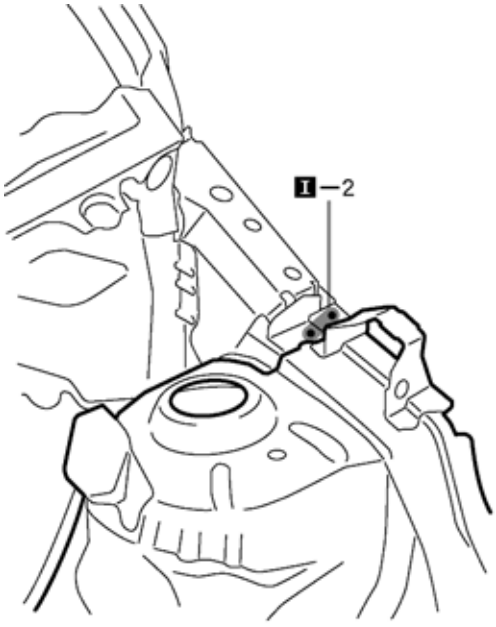

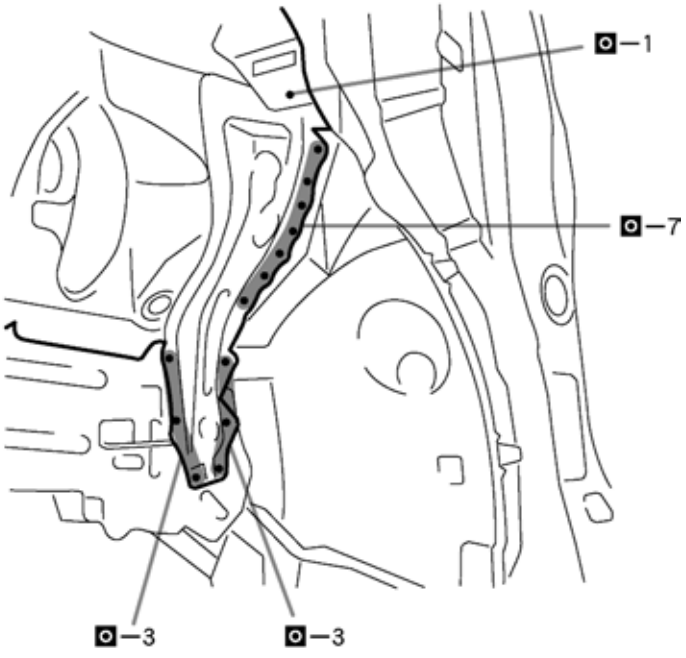

F22824