

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

## 48. Bulkhead Wiring Harness (In Engine Room)

### A: LOCATION

#### 1. NON-TURBO MODEL

##### • Bulkhead Wiring Harness

| Connector |      |       |      | Connecting to |                                 |
|-----------|------|-------|------|---------------|---------------------------------|
| No.       | Pole | Color | Area | No.           | Name                            |
| B4        | 4    | Gray  | B-2  |               | AT dropping resistor            |
| B5        | 2    | Gray  | B-2  |               | Daytime running light resistor  |
| B6        | 2    | Brown | B-2  |               | Front ABS wheel speed sensor RH |
| B7        | 6    | Black | B-3  |               | Cruise control actuator         |
| B8        | 5    | Gray  | B-4  |               | Front wiper motor               |
| B11       | 20   | Black | B-4  | T4            | Transmission code (AT model)    |
| B12       | 12   | Gray  | B-3  | T3            |                                 |
| B14       | 1    | Black | B-4  |               | Starter motor (Magnet)          |
| B16       | 2    | Gray  | B-4  |               | Brake fluid level switch        |
| B17       | 3    | Black | B-3  |               | Vehicle speed sensor (MT model) |
| B18       | 4    | ★     | B-3  |               | Rear oxygen sensor              |
| B21       | 16   | Brown | B-2  | E2            | Engine wiring harness           |
| B22       | 20   | Gray  | B-2  | E3            |                                 |
| B24       | 2    | Gray  | B-3  | T1            | Back-up light switch (MT model) |
| B25       | 2    | Brown | B-3  | T2            | Neutral switch (MT model)       |
| B204      | 1    | Black | B-3  |               | Security horn                   |
| B262      | 4    | Gray  | B-3  |               | Front oxygen (A/F) sensor       |
| B301      | 31   | Black | B-2  |               | ABS control module              |
| B302      | 1    | ★     | C-1  |               | ABS motor ground                |
| B303      | 8    | Black | B-2  |               | Shield ground (ABS)             |
| B305      | 2    | Gray  | B-1  |               | Front turn signal light RH      |
| B306      | 2    | Black | C-1  |               | Front fog light RH              |
| B319      | 2    | Gray  | B-1  |               | Front clearance light RH        |
| B320      | 2    | Black | B-1  |               | Side maker light RH             |
| B328      | 6    | Gray  | B-2  | E58           | Engine wiring harness           |


★: Non-colored

##### • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                     |
|-----------|------|--------|------|---------------|---------------------|
| No.       | Pole | Color  | Area | No.           | Name                |
| AB18      | 2    | Yellow | C-1  |               | Front sub sensor RH |

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

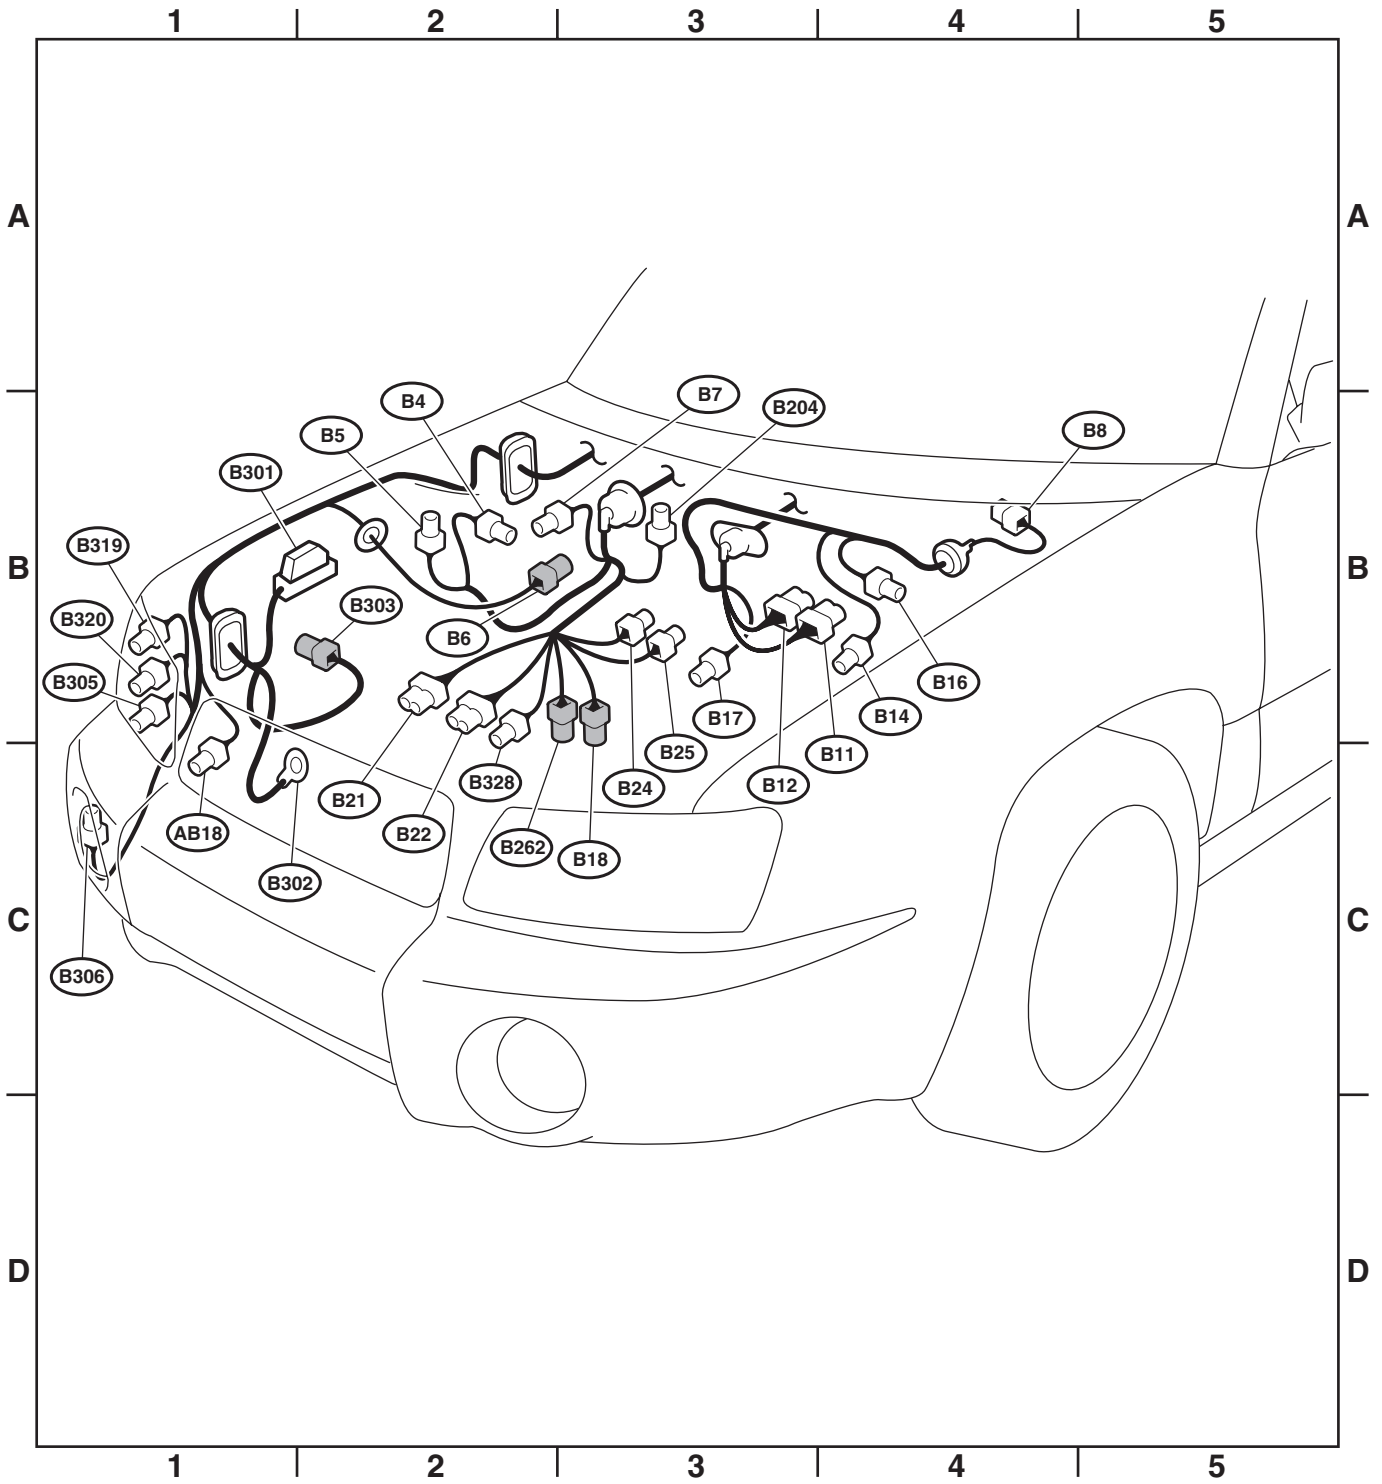

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

## WIRING SYSTEM

### 2. TURBO MODEL

#### • Bulkhead Wiring Harness

| Connector |      |       |      | Connecting to |                                 |
|-----------|------|-------|------|---------------|---------------------------------|
| No.       | Pole | Color | Area | No.           | Name                            |
| B3        | 5    | Black | B-2  |               | Mass air flow meter             |
| B5        | 2    | Gray  | B-2  |               | Daytime running light resistor  |
| B6        | 2    | Brown | B-2  |               | Front ABS wheel speed sensor RH |
| B8        | 5    | Gray  | B-4  |               | Front wiper motor               |
| B11       | 20   | Gray  | B-4  | T4            | Transmission code (AT model)    |
| B12       | 12   | Gray  | B-3  | T3            |                                 |
| B14       | 1    | Black | B-4  |               | Starter motor (Magnet)          |
| B16       | 2    | Gray  | B-4  |               | Brake fluid level switch        |
| B17       | 4    | Black | B-3  |               | Vehicle speed sensor (MT model) |
| B18       | 4    | Gray  | B-3  |               | Rear oxygen sensor              |
| B20       | 10   | Gray  | B-2  | E1            | Engine wiring harness           |
| B127      | 2    | Blue  | B-2  |               | Pressure control solenoid       |
| B128      | 4    | Gray  | B-3  | T9            | Transmission code (MT model)    |
| B204      | 1    | Black | B-3  |               | Security horn                   |
| B262      | 4    | Gray  | B-2  |               | Front oxygen (A/F) sensor       |
| B279      | 2    | Gray  | B-2  |               | Exhaust temperature sensor      |
| B301      | 31   | Black | B-2  |               | ABS control module              |
| B302      | 1    | ★     | C-1  |               | ABS motor ground                |
| B303      | 8    | Black | B-2  |               | Shield ground (ABS)             |
| B305      | 2    | Gray  | B-1  |               | Front turn signal light RH      |
| B306      | 2    | Black | C-1  |               | Front fog light RH              |
| B317      | 4    | Gray  | B-2  | E56           | Engine wiring harness           |
| B319      | 2    | Gray  | B-1  |               | Front clearance light RH        |
| B320      | 2    | Black | B-1  |               | Side maker light RH             |


★: Non-colored

#### • Airbag Wiring Harness

| Connector |      |        |      | Connecting to |                     |
|-----------|------|--------|------|---------------|---------------------|
| No.       | Pole | Color  | Area | No.           | Name                |
| AB18      | 2    | Yellow | C-1  |               | Front sub sensor RH |

# BULKHEAD WIRING HARNESS (IN ENGINE ROOM)

WIRING SYSTEM

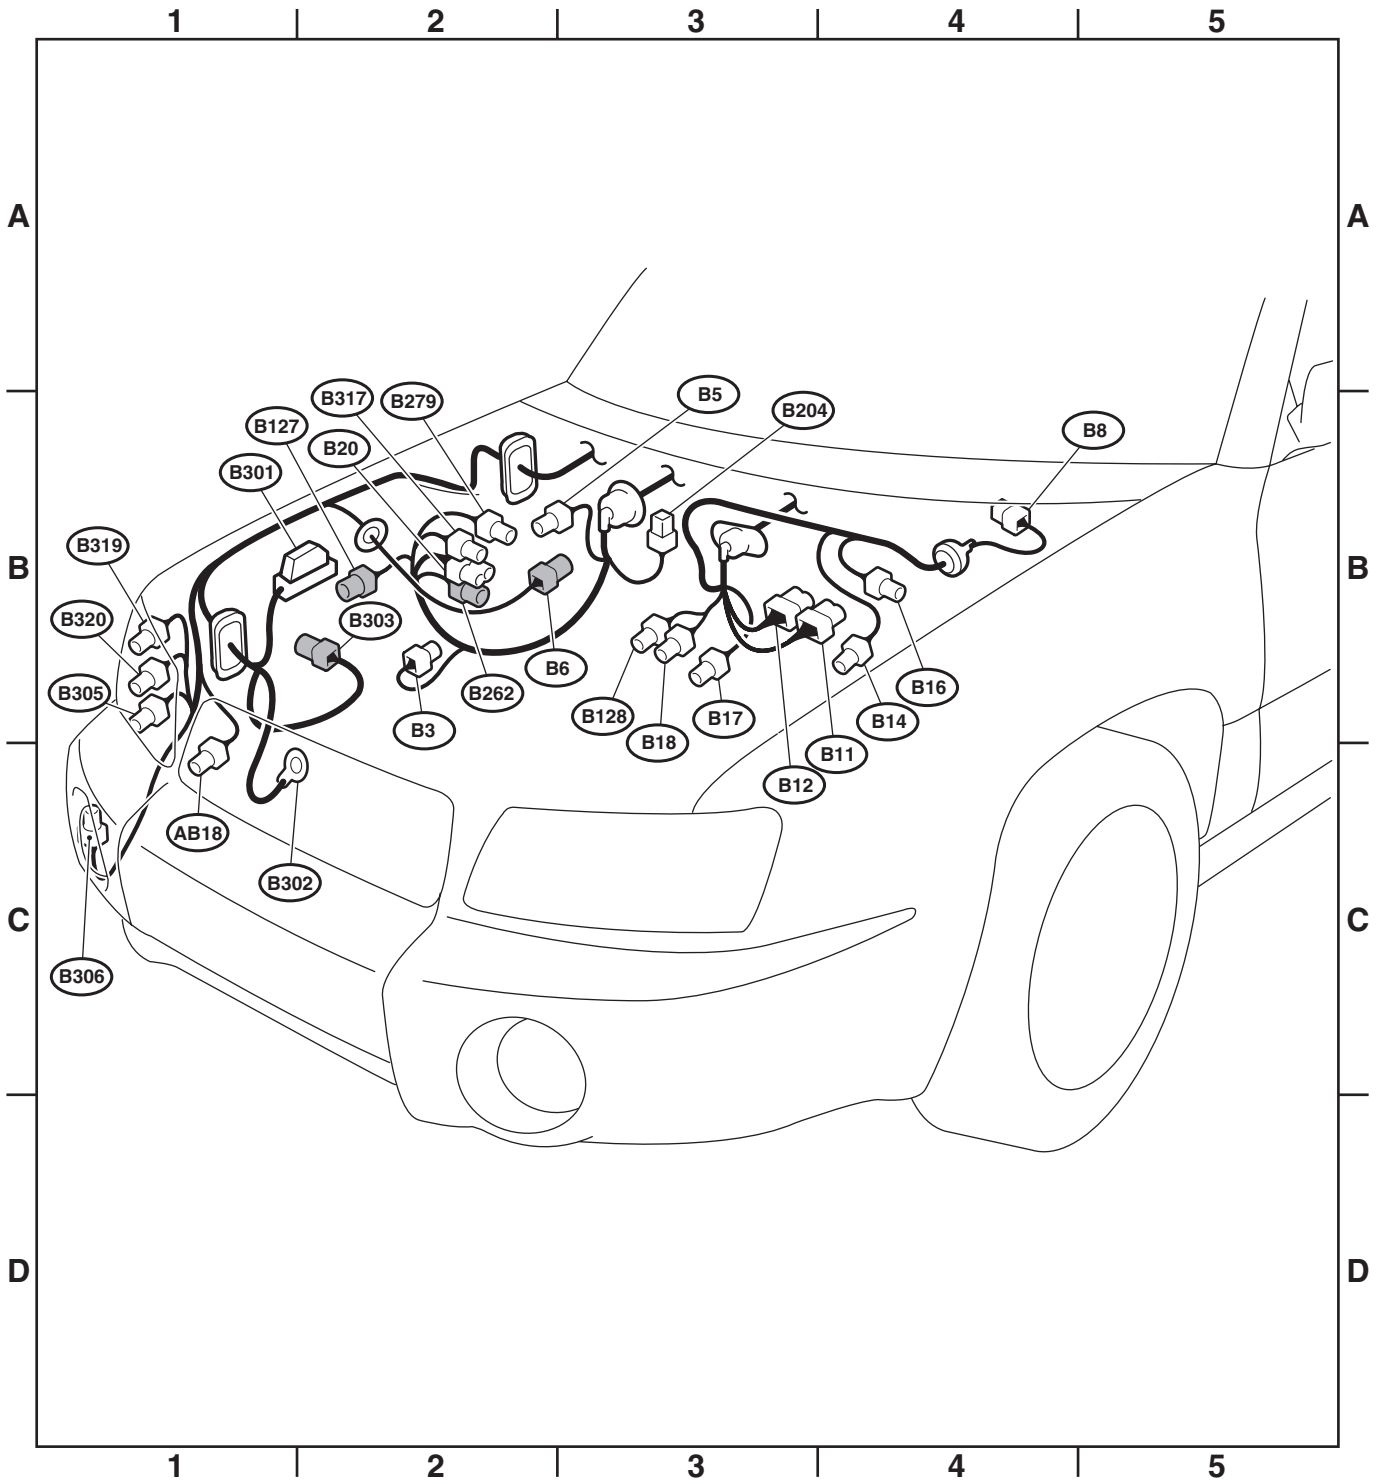

WI-03099