


18. Outer Mirror

A: REPLACEMENT

- 1) Remove the outer mirror assembly. <Ref. to GW-30, REMOVAL, Outer Mirror Assembly.>
- 2) Warm the area around the mirror holder (A) with a hair drier until the edges of the mirror holder become soft (about 2 or 3 minutes with a 1,000 W drier.)
- 3) Use a flat-bladed screwdriver without sharp edges to lift the mirror out of the mirror holder (A). (Also remove the connector from the back of mirrors with heaters.)

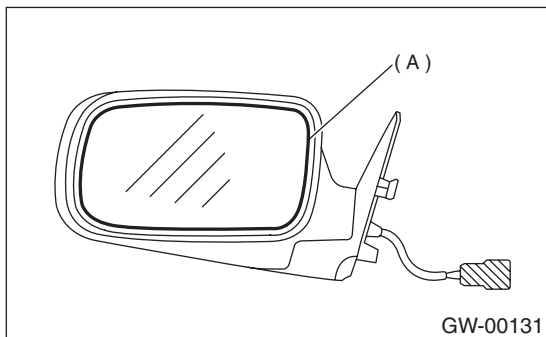

- 4) Warm the area around the mirror holder (A) with a hair drier until the edges of the mirror holder (A) become soft (about 2 or 3 minutes with a 1,000 W drier.)
- 5) With heater models, connect the connector on the back of mirror.
- 6) Remove the backing of the new two-sided tape, and push the mirror in to install it.

CAUTION:

Unless the mirror holder is warmed sufficiently, the mirror holder edges may be damaged or the mirror cracked.