


SUNROOF LID

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

3. Sunroof Lid

A: REMOVAL

- 1) Completely close rear sunroof lid and open sunshade.
- 2) Remove covers (A) then remove nuts (B).

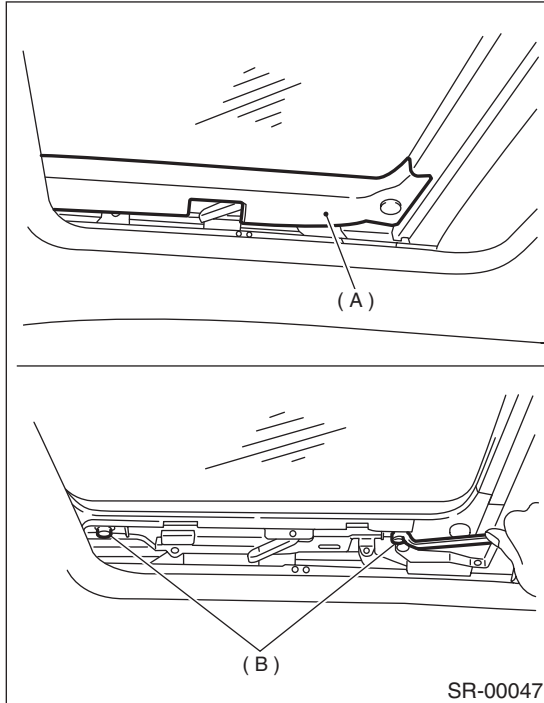

- 3) Remove the sunroof lid carefully.

B: INSTALLATION

Install in the reverse order of removal.

C: ADJUSTMENT

1. ALIGNMENT OF HEIGHT BETWEEN SUNROOF LID AND ROOF PANEL

Loosen sunroof lid mounting nut. Adjust height between sunroof lid and lid bracket by number of shims being inserted into the space.

Number of shims:

Standard : 1 piece

Max. : 3 pieces [1 piece (standard) + 2 pieces (addition)]

Min. : zero piece

Difference in height between sunroof lid and roof panel: L

L: 2.0 ± 0.5 mm (0.079 ± 0.020 in)

