SERVICE PROCEDURE

B: INSTALLATION

CAUTION:


Replace gaskets with new ones.

1) Install rear exhaust pipe bracket to rubber cushion.

NOTE:

To facilitate installation, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.


SUBARU CRC (Part No. 004301003)

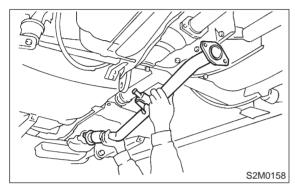

2) Install rear exhaust pipe to muffler.

Tightening torque:


48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

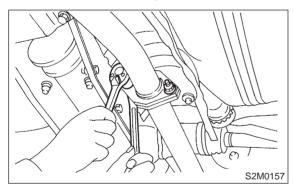

3) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:


18±5 N·m (1.8±0.5 kg-m, 13.0±3.6 ft-lb)

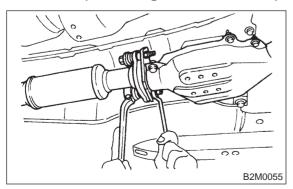

4. Muffler

A: REMOVAL AND INSTALLATION

1) Separate muffler from rear exhaust pipe.

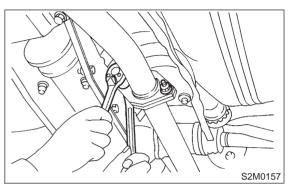

2) Remove left and right rubber cushions.


CAUTION:

Be careful not to pull down muffler.

NOTE

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushions in advance.

SUBARU CRC (Part No. 004301003)

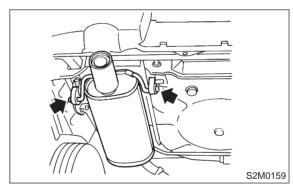


3) Remove front rubber cushion, and detach muffler assembly.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.

SUBARU CRC (Part No. 004301003)

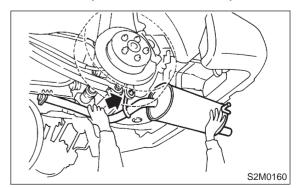


SERVICE PROCEDURE

4) Installation is in the reverse order of removal.

CAUTION:

Replace gasket with a new one.

Tightening torque: 48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

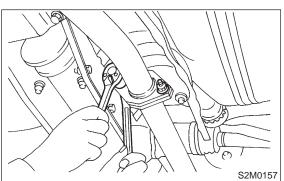

MEMO: