B: INSTALLATION

CAUTION:


Replace gaskets with new ones.

1) Install rear exhaust pipe bracket to rubber cushion.

NOTE:

To facilitate installation, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.


SUBARU CRC (Part No. 004301003)

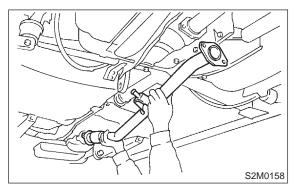

2) Install rear exhaust pipe to muffler.

Tightening torque:


48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

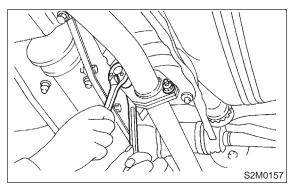

3) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:

18±5 N·m (1.8±0.5 kg-m, 13.0±3.6 ft-lb)

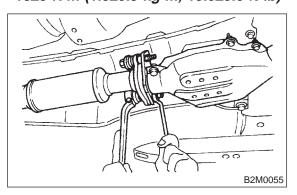


3. Muffler

A: REMOVAL AND INSTALLATION

WARNING:

Be careful, exhaust pipe is hot.

- 1) Lift-up the vehicle.
- 2) Separate muffler from rear exhaust pipe.

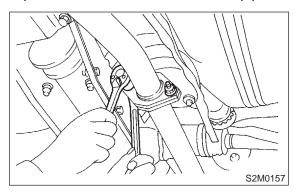

3) Remove left and right rubber cushions.


CAUTION:

Be careful not to pull down muffler.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushions in advance.

SUBARU CRC (Part No. 004301003)

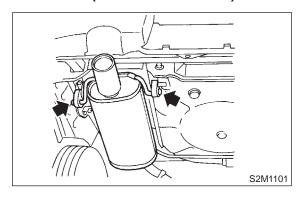


4) Remove front rubber cushion, and detach muffler assembly.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.

SUBARU CRC (Part No. 004301003)

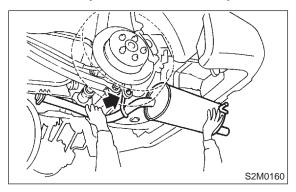


5) Install in the reverse order of removal.

CAUTION:

Replace gasket with a new one.

Tightening torque:

48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

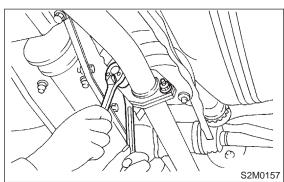

MEMO: