

53. Front Wiring Harness

A: LOCATION

- Front wiring harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
F2	20	Blue	B-4	B100	Bulkhead wiring harness
F5	1	Black	C-3		Horn
F7	6	Gray	B-1		Headlight RH
F9	13	Black	B-3		Secondary air relay holder
F11	2	Gray	B-2		Secondary air pump
F16	2	Gray	C-1		Sub fan motor
F17	2	Gray	C-2		Main fan motor
F19	2	Gray	C-3		Front turn signal light LH
F21	2	Brown	C-3		Front fog light LH
F23	6	Gray	C-3		Headlight LH
F24	1	Black	B-2		A/C compressor
F25	1	★	B-2		Generator terminal B
F26	3	Green	B-2		Generator
F27	36	Black	B-3		A/C relay holder
F32	2	Gray	C-4		Front washer motor
F33	2	Gray	B-3		Rear washer motor
F34	4	Black	B-3		SBF holder
F35	2	Black	B-3		Main fuse box (M/B)
F36	3	★	B-4		
F37	6	Black	B-4		
F38	1	Brown	B-4		
F39	8	★	B-3		Fuse & relay box (F/B)
F40	9	Brown	B-5		
F41	7	Gray	B-5		
F44	8	Black	B-4	B61	Bulkhead wiring harness
F45	24	Black	B-4	B62	
F46	2	Black	B-4	B108	
F53	2	Gray	C-3		Side marker light LH
F58	3	Black	C-3		Headlight beam leveler LH (HID model)
F59	3	Black	B-1		Headlight beam leveler RH (HID model)
F60	16	Brown	C-3	E3	Engine wiring harness (Turbo model)
F61	20	Black	C-3	E2	
F68	4	★	B-4		Main fuse box (M/B)
F74	32	★	B-4	B200	Bulkhead wiring harness (Turbo model)
F78	2	Black	C-1		Ambient sensor
F94	2	Brown	B-2		Front ABS wheel speed sensor LH
F102	2	Black	C-1		Keyless buzzer
F112	2	Black	B-1	B377	Bulkhead wiring harness (Model without VDC)


★: White or natural color

- Front sub sensor harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB14	2	Yellow	B-4	AB13	Airbag wiring harness
AB18	2	Yellow	C-3		Front sub sensor LH

Front Wiring Harness

WIRING SYSTEM

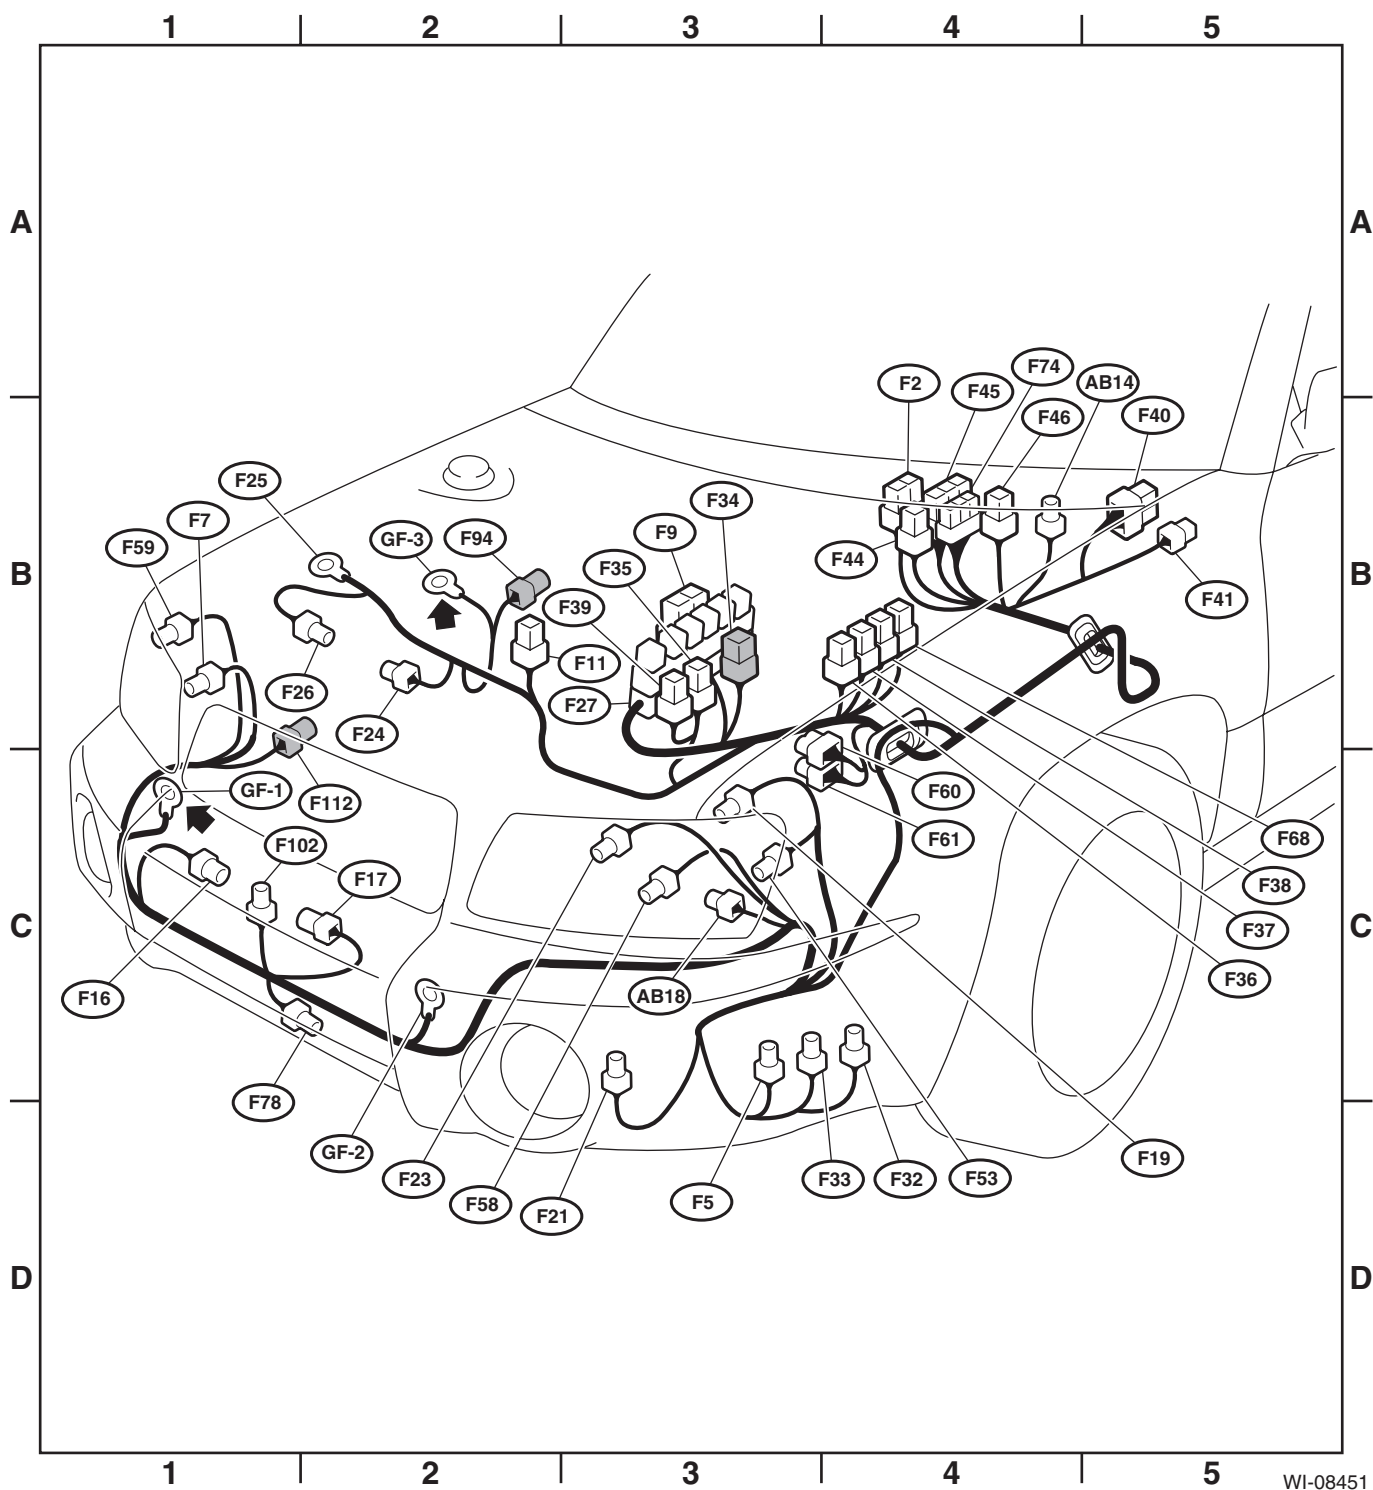

WI-08451