

74. Door Cord RH

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D1	11	★	C-2	B30	Bulkhead wiring harness
D12	2	★	C-2		Front door speaker RH
D13	6	GR	C-3		Front power window motor RH
D15	10	★	B-2		Outer mirror assembly RH (C6 model)
	12	★	B-2		Outer mirror assembly RH (except for C6 model)
D17	8	★	C-3		Front power window sub-switch
D18	10	★	B-3		Front door lock actuator RH
D20	2	★	C-3		Door step light RH
D28	8	★	B-4	R13	Rear wiring harness RH
D29	2	★	B-4		Rear door speaker RH
D30	6	GR	B-4		Rear power window motor RH
D31	8	★	B-4		Rear power window switch RH
D32	10	★	B-5		Rear door lock actuator RH
D56	6	★	B-3		Outer handle RH
D83	28	★	C-2	i76	Instrument panel wiring harness
D106	2	B	B-4		Rear door sub speaker RH
D125	5	★	C-3		Passenger's seat door lock switch

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB63	2	★	C-2	R124	Rear wiring harness
AB64	2	Y	B-3		Front door impact sensor RH

Door Cord RH

WIRING SYSTEM

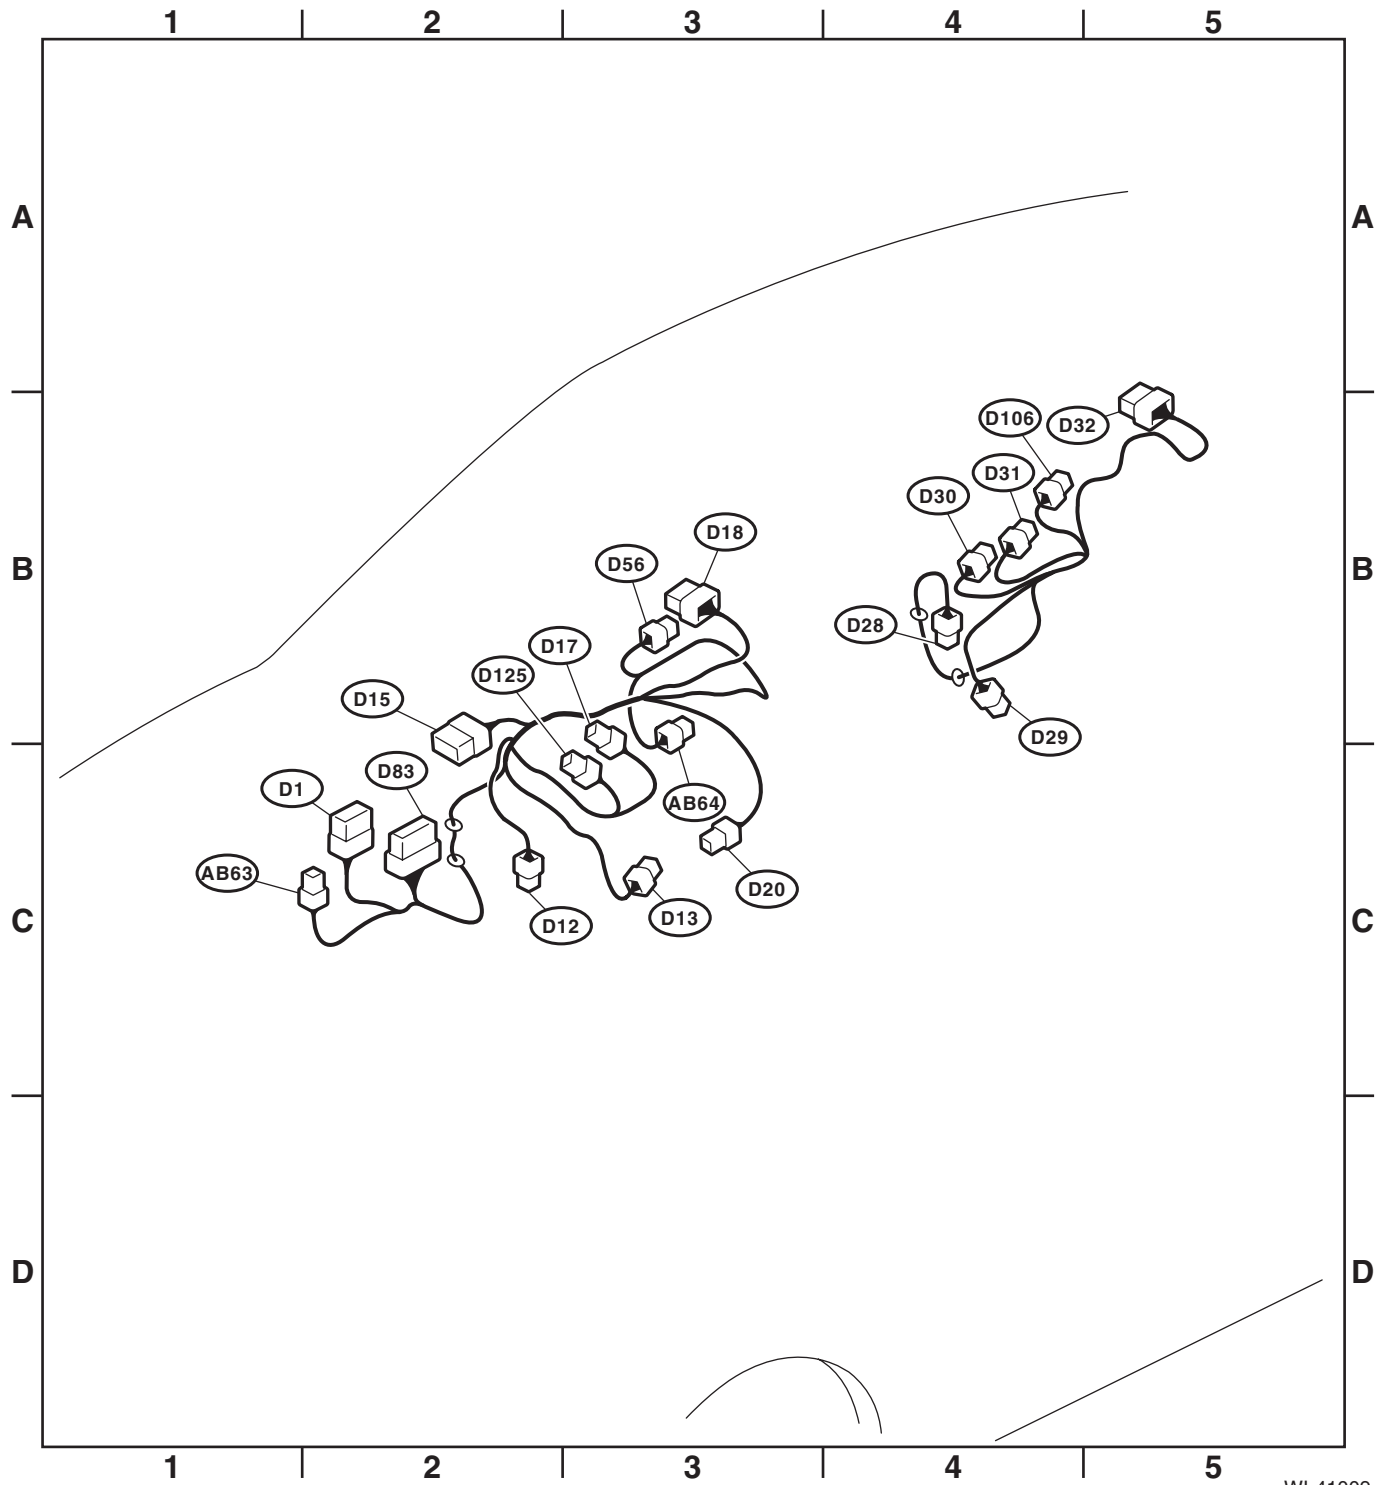

WI-41009