

## 75. Door Cord LH

### A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D2	2	★	C-3		Front door speaker LH
D3	6	GR	D-3		Front power window motor LH
D5	10	★	C-2		Outer mirror assembly LH (C6 model)
	12	★	C-2		Outer mirror assembly LH (except for C6 model)
D7	16	★	C-3		Power window main switch
D10	2	★	C-3		Door step light LH
D11	11	★	C-2	B101	Bulkhead wiring harness
D22	8	★	C-4	R10	Rear wiring harness LH
D23	2	★	C-5		Rear door speaker LH
D24	6	GR	C-4		Rear power window motor LH
D25	8	★	C-5		Rear power window switch LH
D26	10	★	B-5		Rear door lock actuator LH
D66	6	★	C-3		Outer handle LH
D72	10	★	C-4		Front door lock actuator LH
D84	28	★	C-2	i101	Instrument panel wiring harness
D102	3	★	C-3		Power window main switch
D105	2	B	B-5		Rear door sub speaker LH
D149	16	★	C-3		Remote control mirror switch

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB58	2	Y	C-3		Front door impact sensor LH
AB62	4	Y	D-2	R123	Rear wiring harness

# Door Cord LH

WIRING SYSTEM

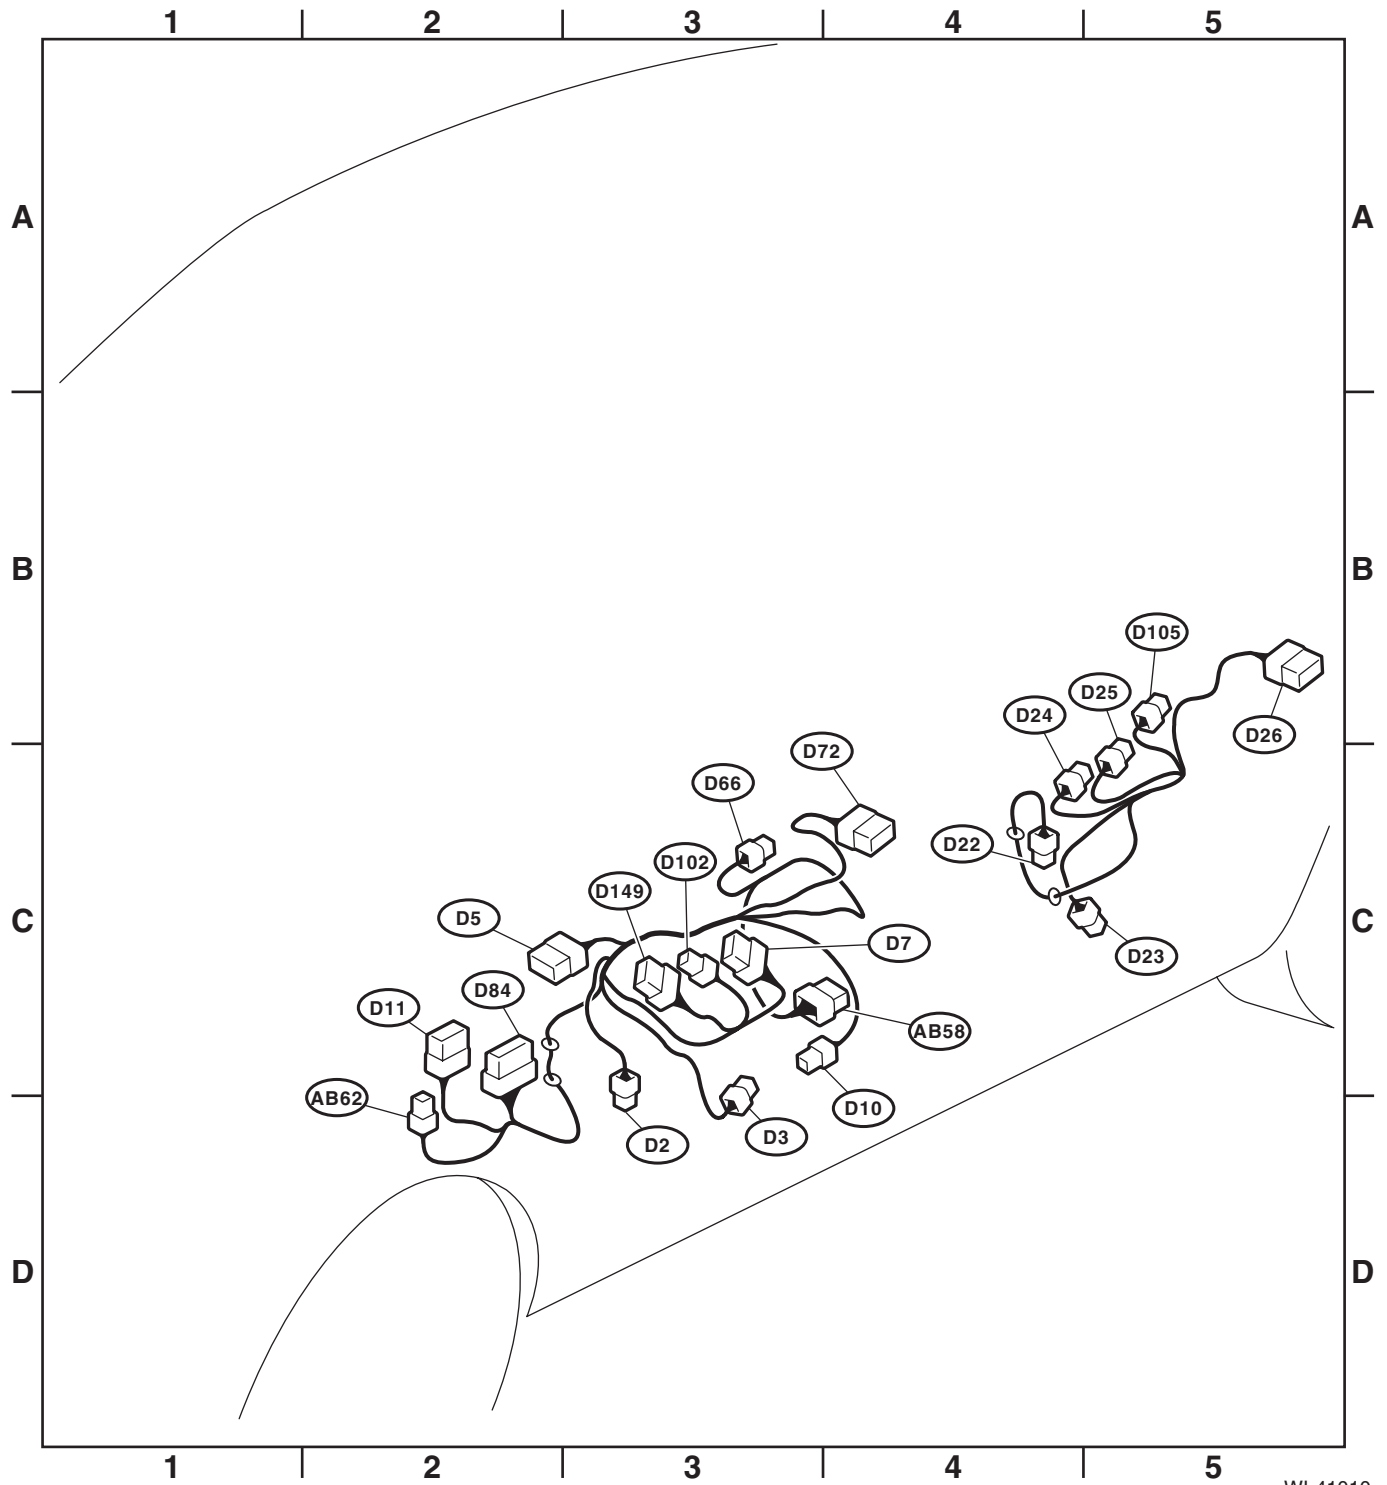

WI-41010