

# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

WIRING SYSTEM

## 48. Bulkhead Wiring Harness (In Compartment)

### A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B30	25	★	C-1	D1	Front door cord LH
B31	6	Yellow	D-1	AB1	SRS (Airbag) harness
B32	3	Black	B-2		Turn & hazard module
B36	20	★	B-3	i1	Instrument panel wiring harness
B37	24	Brown	B-3	i2	
B40	16	★	C-3		Data link connector
B41	2	★	C-1		Power window circuit breaker
B42	5	★	C-2		Power window relay (Relay block)
B46	4	Green	B-5		Fuel pump relay
B47	6	Brown	B-5		Main relay
B48	5	★	C-2		Front fog light relay (Relay block)
B50	4	★	C-1		Blower fan motor relay
B51	8	Blue	C-1		Fuse & relay box (F/B)
B52	7	★	C-1		
B53	12	Black	C-2		Shield joint connector (AT-turbo engine model)
	8	★	C-2		Shield joint connector (AT-non-turbo engine model)
B54	24	★	B-2		Transmission control module
B55	24	Gray	B-2		
B56	24	Green	B-2		Transmission control module (Turbo engine model)
B59	6	★	B-3		Interrupt relay (Security)
B61	8	★	B-2	F44	Front wiring harness
B62	24	★	B-2	F45	
B64	2	Black	B-2		Stop light switch (Without cruise control model)
B65	4	Black	B-2		Stop light and brake switch (With cruise control model)
B68	5	Black	C-3		Cruise control sub switch
B69	4	★	C-3		Combination switch
B70	18	★	C-3		
B71	17	★	C-3		
B72	4	Blue	B-3		Ignition switch
B73	2	★	B-3		Key lock solenoid (AT)
B74	2	Black	C-3		Key warning switch
B75	2	Green	C-2	B76	Test mode connector
B76	2	Green	C-2	B75	
B79	14	Gray	C-3		Check connector

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B81	1 × 2	★	C-2		Diagnosis terminal (Ground)
B82	6	Black	C-2		Diagnosis connector
B83	8	★	C-5		Shield & sensor ground joint connector (E/G-turbo engine model)
B84	17	★	C-4		Engine control module (Turbo engine model)
B86	4	Brown	B-4		Blower fan motor resistor
B87	2	★	B-4		Blower fan motor
B88	4	Brown	B-4		Evaporation thermostat
B90	6	★	B-5	R50	Roof cord
B93	18	★	B-4		Security control module
B94	20	Black	C-1		Cruise control module
B95	2	★	B-4		Diode (Daytime running light)
B96	10	★	B-5		Daytime running light control module
B101	25	★	C-5	D11	Front door cord RH
B102	5	★	B-5		Daytime running light relay
B103	4	★	B-5		Hi-beam relay (Daytime running light)
B104	5	★	C-2		Starter interlock relay (MT-relay block)
B105	5	★	C-2		Rear 12V accessory relay (Relay block)
B106	2	★	B-2		Clutch switch (MT)
B107	2	Blue	B-2		Clutch switch (MT-cruise control)
B108	2	Black	B-1	F46	Front wiring harness
B112	2	★	B-3		Diode (Front fog light)
B116	6	★	C-4		AT Select lever
B118	2	★	B-4		Compact disc player illumination light
B119	4	★	C-4		Front accessory power supply socket
B120	14	★	B-4		Radio
B121	1	Black	B-4		Audio bracket ground
B122	6	★	C-5		Sensor ground joint connector (E/G-non-turbo engine model)
B125	1	Green	B-5	B126	Line end connector
B126	1	Green	B-5	B125	

★: Non-colored

# BULKHEAD WIRING HARNESS (IN COMPARTMENT)


WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B134	22	★	B-4		Engine control module (Turbo engine model)
	28	★	B-4		Engine control module (Non-turbo engine model)
B135	28	★	B-4		Engine control module (Turbo engine model)
	20	★	B-4		Engine control module (Non-turbo engine model)
B136	24	★	B-4		Engine control module (Turbo engine model)
	26	★	B-4		Engine control module (Non-turbo engine model)
B137	31	★	C-4		Engine control module (Turbo engine model)
	35	★	C-4		Engine control module (Non-turbo engine model)
B152	12	★	C-1		Fuse & relay box (F/B)
B157	5	★	C-2		Ignition relay (Relay block)
B158	10	Gray	C-1		Fuse & relay box (F/B)
B160	6	Gray	C-1		Front fog light switch
B161	6	Brown	C-1		Cruise control main switch
B168	10	★	C-4		Mode control panel
B169	6	★	C-4		Blower fan switch
B171	5	★	C-2		Mirror heater relay (Relay block)
B176	16	★	C-1		Keyless entry control module
B183	1	★	D-1	B184	Joint connector (Security)
B184	1	★	D-1	B183	
B198	5	★	C-5	GB-3	Ground joint connector
B208	2	Black	B-5		Glove box illumination light
B209	40	Gray	B-1	F76	Front wiring harness (SMJ-turbo engine model)
B224	2	★	C-3		Key illumination light (Turbo engine model)
B225	8	★	C-2		Fuse (Relay block)
B243	6	★	B-3		Security horn relay
B250	6	★	C-2		Flash memory connector
B264	4	Red	C-1		ABS relay
B271	12	Blue	C-1		Fuse & relay box (F/B)
B280	20	Gray	B-3		Integrated module
B281	16	Blue	B-3		
B284	10	★	D-5		Remote controlled rearview mirror switch

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B292	3	★	D-5		ABS G sensor
★: Non-colored					

# BULKHEAD WIRING HARNESS (IN COMPARTMENT)

WIRING SYSTEM

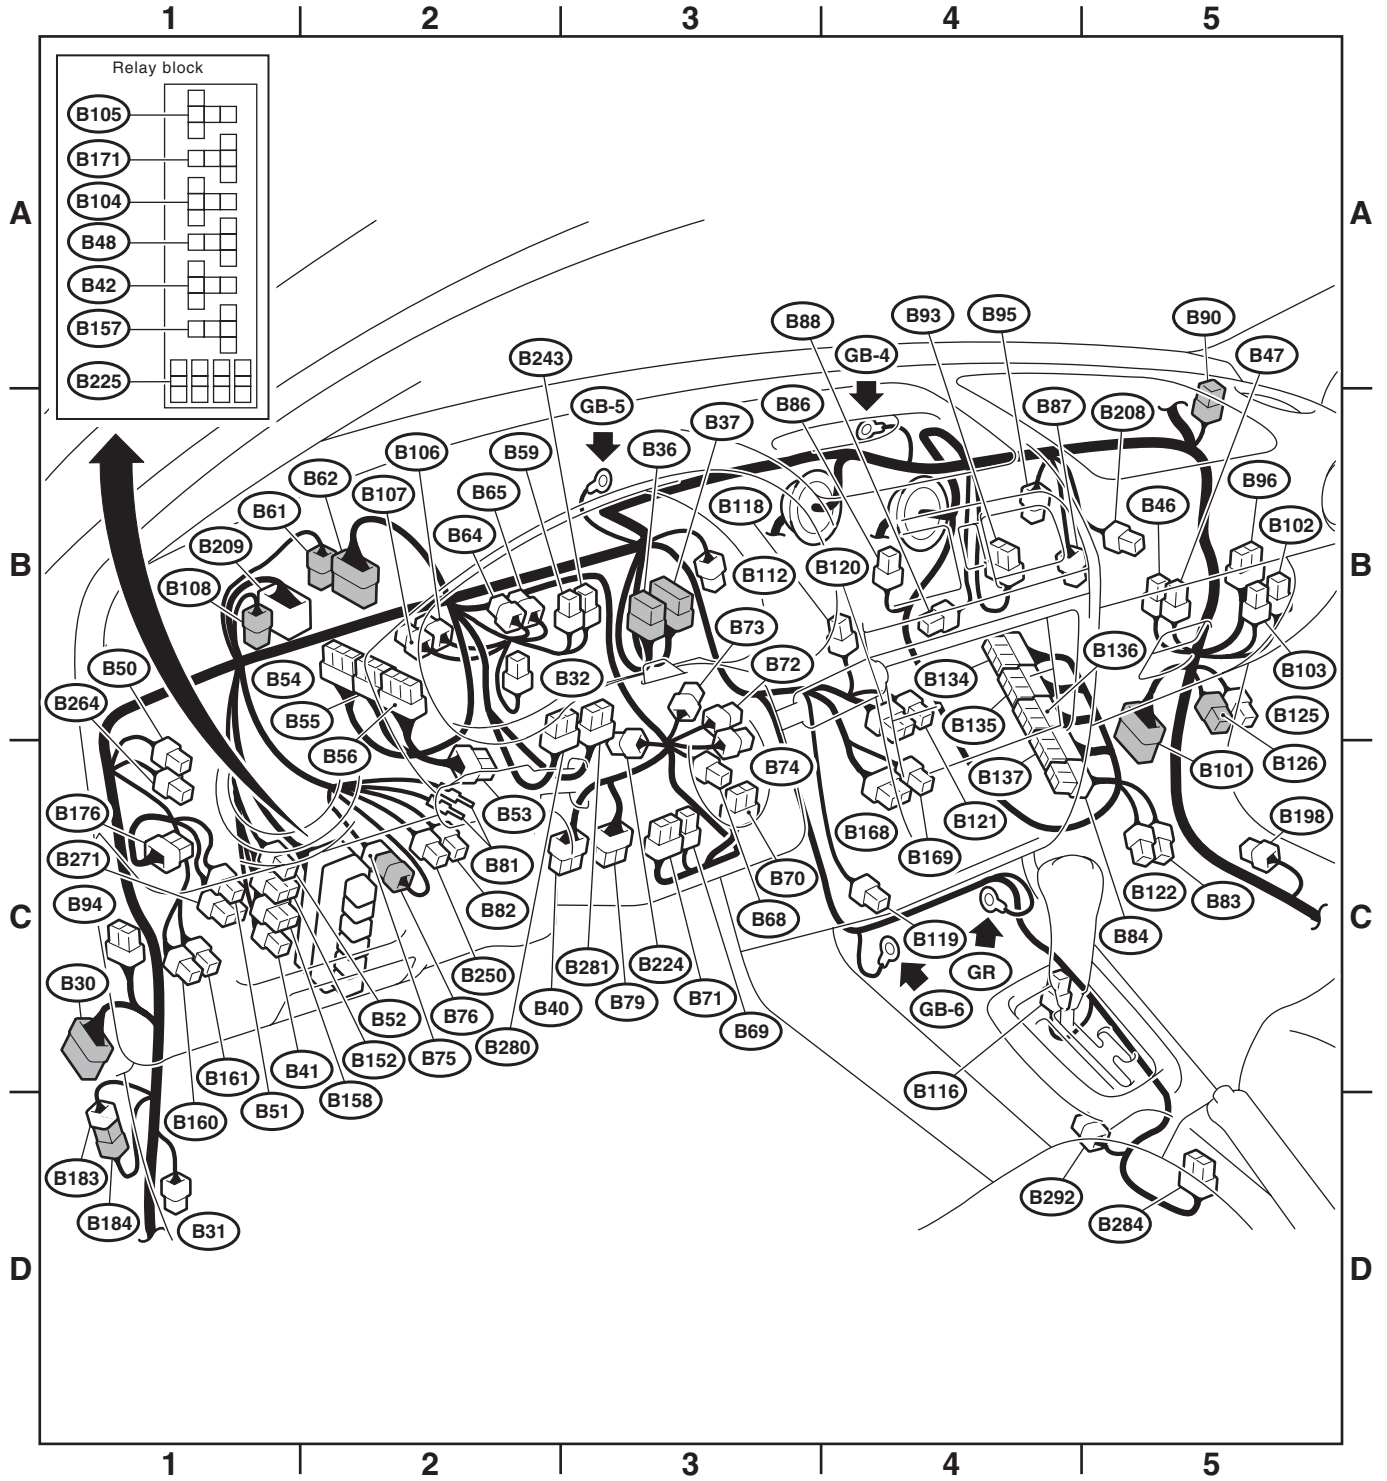

WI-01179