

62.Rear Wiring Harness and Trunk Lid Cord

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R16	3	★	B-3		Rear door switch RH
R19	2	Blue	B-3		High-mounted stop light
R20	2	Black	B-4		Trunk room light
R22	3	★	B-1		Rear door switch LH
R24	12	★	B-5	R60	Trunk lid cord
R26	6	★	B-5		Rear combination light RH (4 door model)
		Gray			Rear combination light RH (5 door model/XV model)
R28	6	★	C-3		Rear combination light LH (4 door model)
		Gray			Rear combination light LH (5 door model/XV model)
R29	3	Black	C-3		Rear vehicle height sensor
R58	6	★	C-4		Fuel pump assembly
R59	2	★	C-3		Fuel sub level sensor
R60	12	★	B-5	R24	Rear wiring harness RH
R65	1	Black	B-2		Rear defogger
R66	2	★	B-5		High-mounted stop light (rear spoiler)
R72	2	Light gray	B-2		Rear ABS wheel speed sensor RH
R73	2	Light gray	C-2		Rear ABS wheel speed sensor LH
R76	2	★	C-4		License plate light LH
R77	2	★	C-4		License plate light RH
R80	8	★	C-3		Keyless entry CM
R97	1	★	B-2		Antenna feeder cord
R174	1	★	B-4		Rear defogger
R186	3	★	C-4		Trunk lid lock actuator & switch
R221	12	★	C-3		TPMS & keyless entry CM
R400	8	Gray	C-3		ELCM

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Black	B-2		Curtain airbag module LH
AB32	4	Yellow	B-1		Curtain airbag sensor LH
AB33	2	Black	B-4		Curtain airbag module RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH
AB41	2	Yellow	C-3		Satellite safing sensor

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

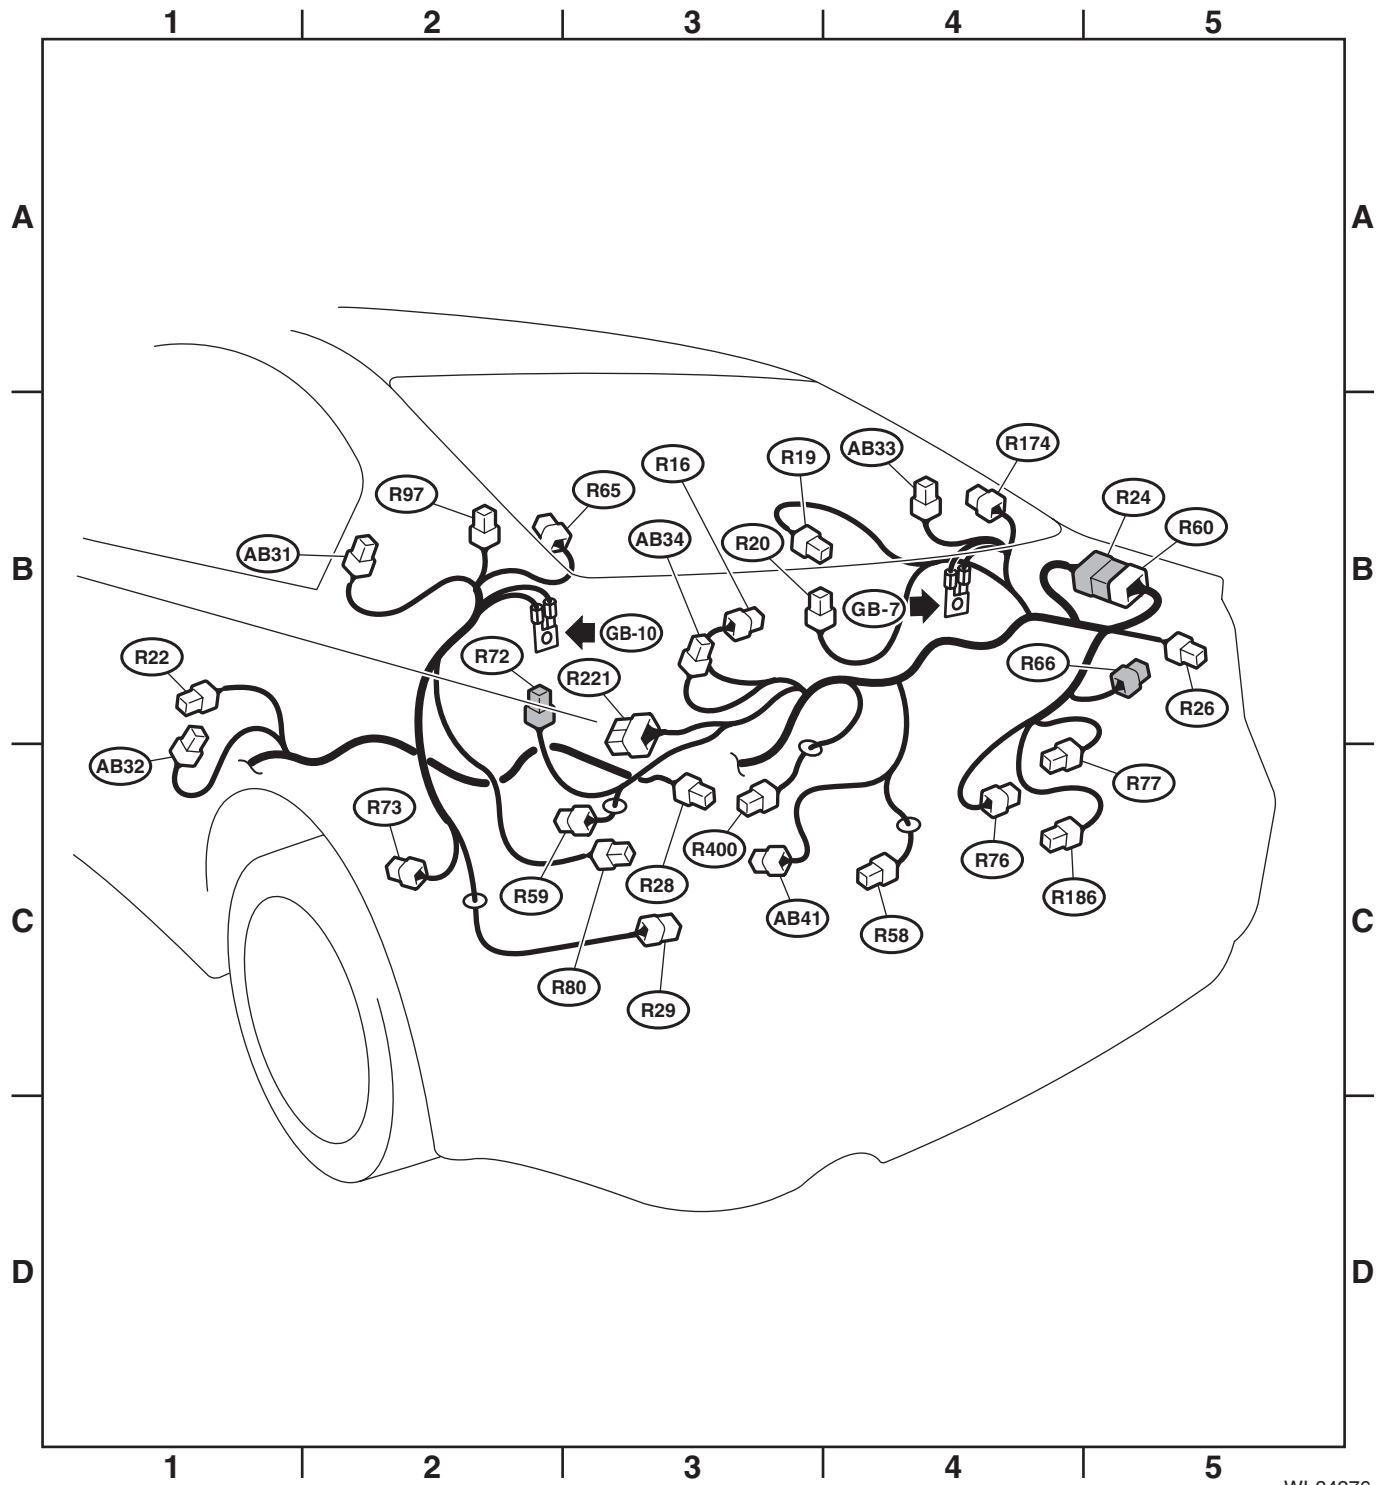

WI-34276