

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

57. Bulkhead Wiring Harness (In Compartment)

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B27	4	★	B-4		Blower Resistor (manual A/C)
B30	8	Black	C-5		Front door cord RH
B31	10	Gray	C-1	AB1	Airbag wiring harness
B32	8	★	B-2		Turn signal and hazard unit
B40	16	Black	C-1		Data link connector
B41	2	★	C-2		Power window circuit breaker
B52	24	★	D-1		F/B
B54	26	Green	B-2		TCM
B55	22	Green	B-2		
B57	4	★	B-4		Power transistor (auto A/C)
B65	4	★	B-2		Stop light and brake switch
B68	14	★	B-3		Roll connector
B70	10	★	B-3		Combination switch
B71	20	★	B-3		
B72	6	★	C-3		Ignition switch
B77	6	★	C-4		Mode door actuator (auto A/C)
B83	8	★	B-4		J/C
B87	2	★	B-5		Blower motor
B88	2	Brown	C-4		Evaporator sensor (auto A/C)
	3	★	C-4		Evaporator sensor (manual A/C)
B89	2	Black	B-5		Blower diode
B90	17	★	B-5	R50	Roof cord
B97	20	★	C-5	R1	Rear wiring harness RH
B98	20	★	C-5	R2	
B99	20	★	D-1	R3	Rear wiring harness LH
B101	8	Black	C-1		Front door cord LH
B106	2	★	C-3		Clutch start switch
B107	2	Blue	C-3		Clutch switch
B116	8	★	C-4		AT select lever
B122	8	★	B-5		J/C
B123	2	Black	C-1	B124	Key lock
B124	2	Black	C-1	B123	
B134	34	★	C-4		ECM
B135	35	★	C-5		
B136	35	★	C-5		
B137	31	★	C-5		
B150	24	★	C-1		Auto headlight beam leveler CM
B152	10	Gray	D-1		F/B
B158	8	★	D-1		
B159	9	Brown	D-2		
B162	2	★	D-2		
B163	6	Black	B-5		Intake door actuator
B180	4	★	C-2		Remote engine start CM
B181	2	★	C-2	B182	Bulkhead wiring harness
B182	2	★	C-2	B181	

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B220	44	★	B-5		Relay holder
B225	44	★	C-2		
B231	5	★	B-3		Steering angle sensor
B235	6	★	C-4		Air mix door actuator LH (with left/right independent air conditioner)
B239	6	★	B-4		Air mix door actuator (without left/right independent air conditioner)
					Air mix door actuator RH (with left/right independent air conditioner)
B280	34	★	C-1		Body integrated unit
B281	35	★	C-2		
B315	6	Black	C-4		Accelerator pedal position sensor
B358	2	★	C-4		AT select lever illumination
B367	8	★	C-2		Impact sensor
B386	4	★	B-5		Blower motor relay
B415	7	Black	C-3		Immobilizer antenna
B475	4	★	D-1		Wiper relay unit
B550	20	★	D-2		Fuse holder
B551	12	★	C-2	i229	Instrument panel wiring harness LH
B552	17	★	C-2	i230	
B553	20	★	D-2	i231	
B555	2	★	C-3		Key warning switch
B556	2	★	C-4	AB65	Airbag wiring harness
B557	2	★	C-3		Key lock solenoid
B558	7	★	B-3		Combination switch
B559	5	★	B-3		Security CM
B583	12	★	B-5	i237	Instrument panel wiring harness RH
B584	20	★	B-5	i238	


★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	10	Gray	C-1	B31	Bulkhead wiring harness
AB2	4	Yellow	B-3	AB7	Driver's airbag module
AB6	30	Yellow	C-4		Airbag CM
AB9	4	Yellow	C-4		Passenger's airbag module
AB65	2	★	C-4	B556	Bulkhead wiring harness
AB66	2	Black	D-2		Driver's knee airbag module

★ : White or natural color

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

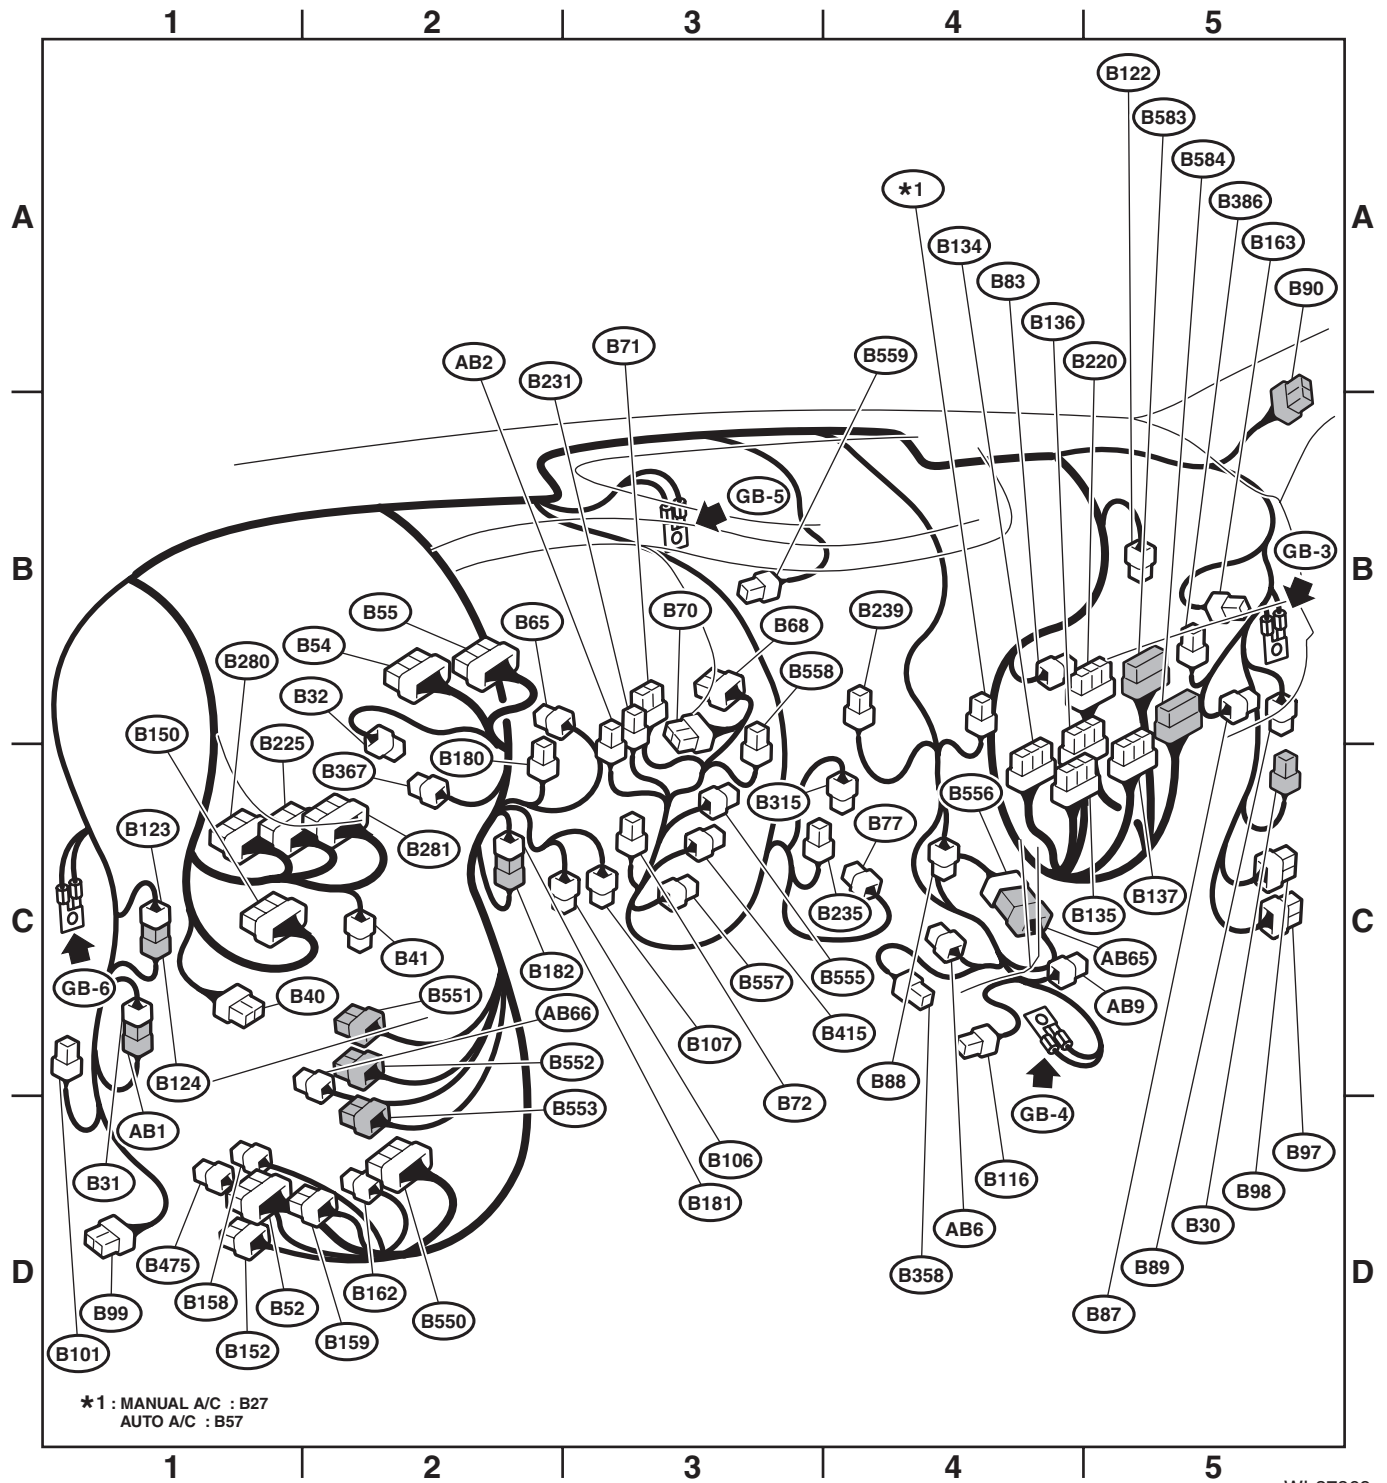

*1 : MANUAL A/C : B27
AUTO A/C : B57

WI-37869