

٦'n

0)

19. Rear Spoiler (4 Door Sedan 2500 cc GT model only)

A: REMOVAL AND INSTALLATION

1) Open trunk lid.

2) Disconnect high-mount stop light connector located inside the trunk lid.

3) Remove rubber caps.


4) Remove rear spoiler mounting nuts.


CAUTION:


B5M0414

When removing nuts, be careful not to drop them inside rear gate.

5) Installation is in the reverse order of removal.



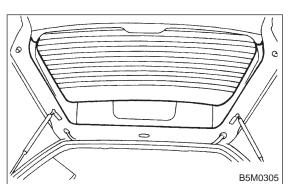

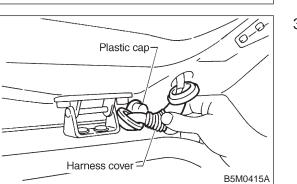


20. Roof Spoiler (Station Wagon 2500 cc GT model only)


A: REMOVAL AND INSTALLATION

1) Open rear gate and remove rear gate trim upper and side.

2) Remove high-mount stop light. <Ref. to 6-2 [W5A4].>

3) Remove plastic caps and harness covers.

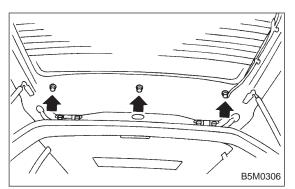

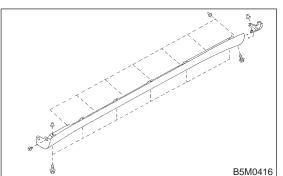

Remove roof spoiler mounting nuts.

CAUTION:

• When removing nuts, be careful not to drop them inside rear date.

• Be careful since two-sided tape is placed between roof spoiler and body panel.

5) Installation is in the reverse order of removal.


Tightening torque:

7.4±2.0 N·m (0.75±0.2 kg-m, 5.4±1.4 ft-lb)

21. Side Spoiler (2500 cc GT model only)

A: REMOVAL AND INSTALLATION


- 1) Remove tapping screws, clip and end cover.
- 2) Installation is in the reverse order of removal.

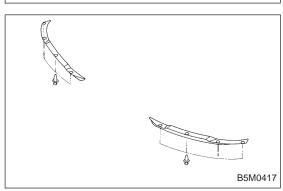

22. Front Under Spoiler (All models except 2500 cc GT)

A: REMOVAL AND INSTALLATION


- 1) Remove clips.
- 2) Installation is in the reverse order of removal.

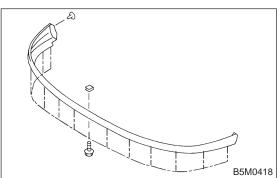

23. Airdam Skirt (2500 cc GT model only)

A: REMOVAL AND INSTALLATION

- 1) Remove airdam skirt mounting bolts and clips.
- 2) Installation is in the reverse order of removal.

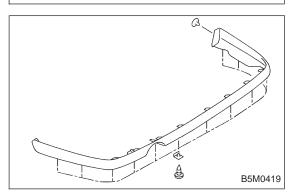

24. Rear Under Spoiler (2500 cc GT model only)

A: REMOVAL AND INSTALLATION

1) Remove tapping screws and clips.

2) Installation is in the reverse order of removal. NOTE:

- 12 tapping screws are used for 4 Door Sedan.
- 14 tapping screws are used for Station Wagon.