


## 2. Automatic Transmission

### 1. LHD MODEL

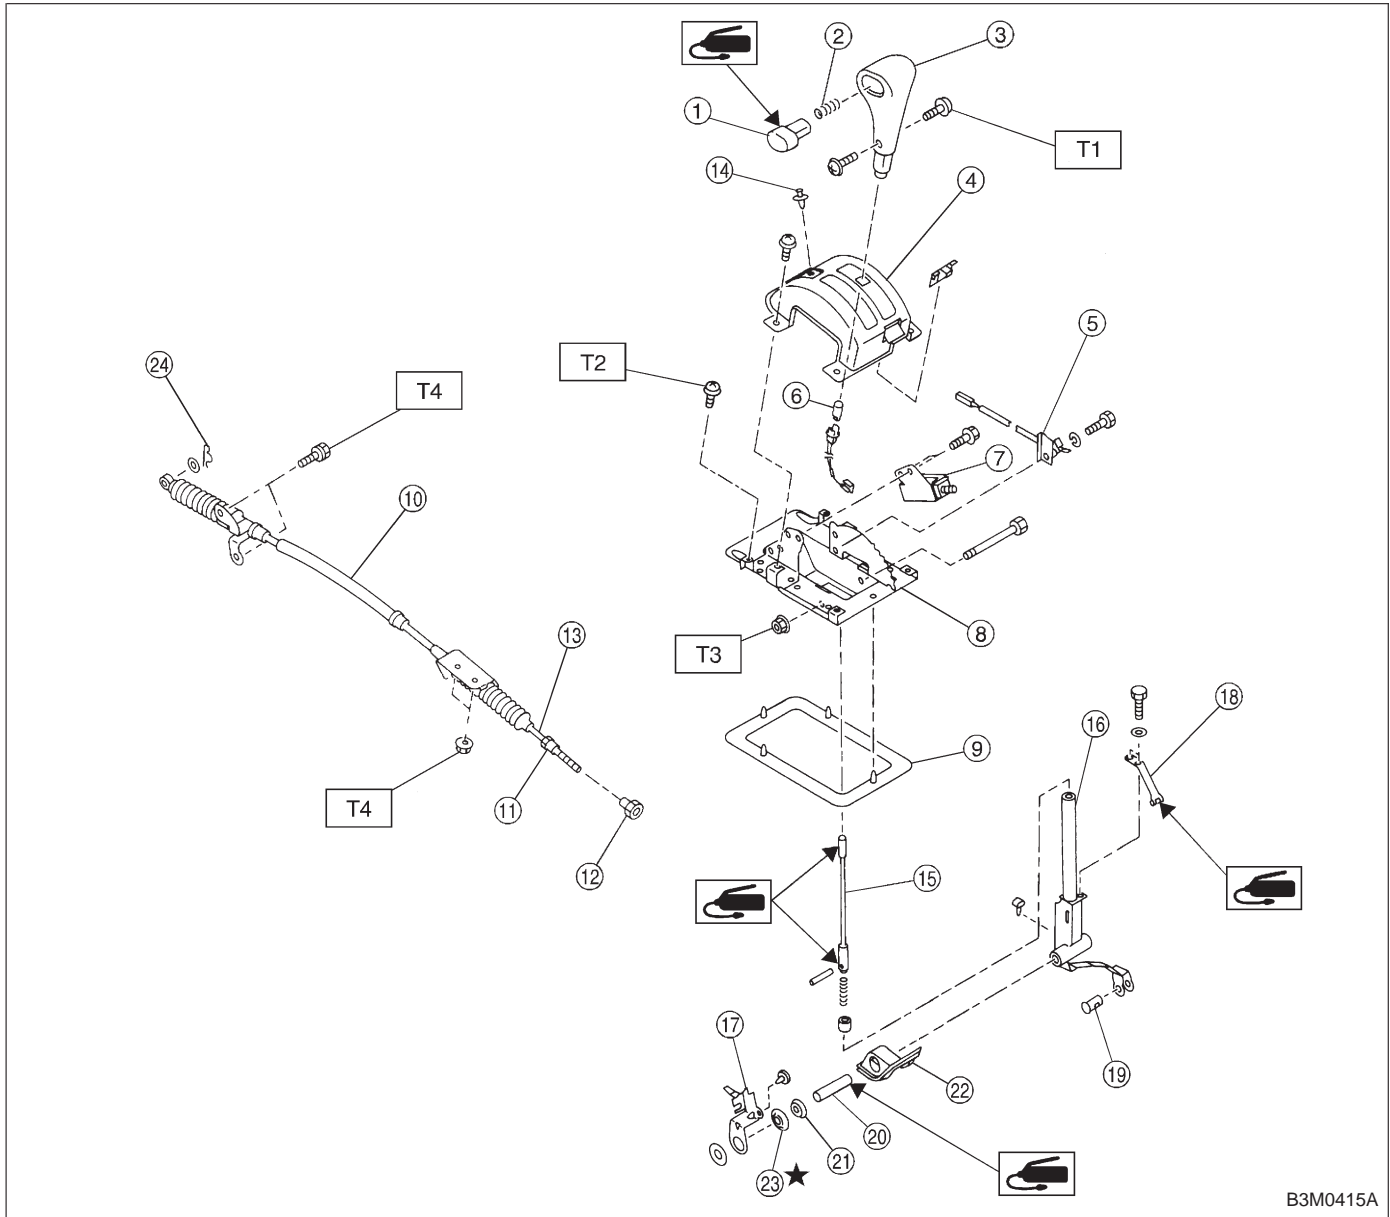

B3M0415A

- ① Button
- ② Spring
- ③ Grip
- ④ Indicator cover
- ⑤ "P" position switch
- ⑥ Indicator light bulb
- ⑦ Shift-lock solenoid
- ⑧ Plate
- ⑨ Packing
- ⑩ Outer cable
- ⑪ Nut
- ⑫ Nut
- ⑬ Inner cable
- ⑭ Clip
- ⑮ Rod
- ⑯ Selector lever

- ⑰ Lock plate
- ⑱ Detention spring
- ⑲ Pin
- ⑳ Spacer
- ㉑ Washer
- ㉒ Boot
- ㉓ Spacer
- ㉔ Snap pin

**Tightening torque: N.m (kg-m, ft-lb)**


**T1: 2.0±0.7 (0.2±0.07, 1.4±0.5)**

**T2: 4.4±1.5 (0.45±0.15, 3.3±1.1)**

**T3: 12±3 (1.2±0.3, 8.7±2.2)**

**T4: 18±5 (1.8±0.5, 13.0±3.6)**

### 2. RHD MODEL

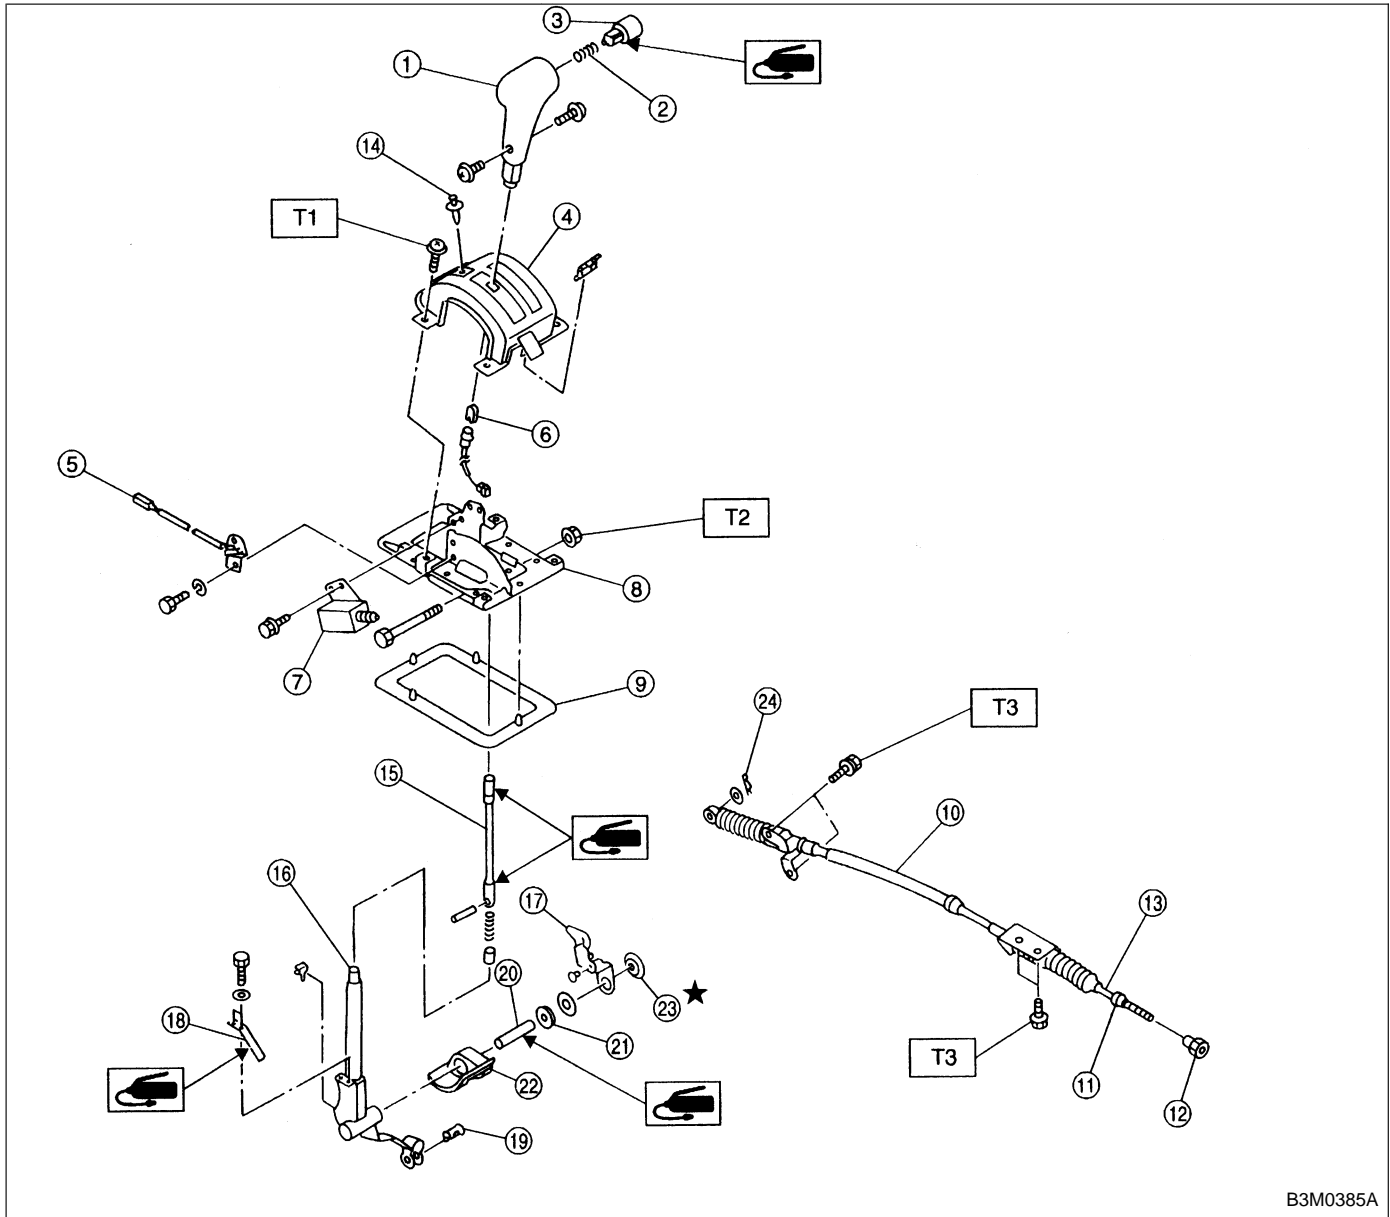

B3M0385A

- ① Grip
- ② Spring
- ③ Button
- ④ Indicator cover
- ⑤ "P" position switch
- ⑥ Indicator light bulb
- ⑦ Shift-lock solenoid
- ⑧ Plate
- ⑨ Packing
- ⑩ Outer cable
- ⑪ Nut
- ⑫ Nut
- ⑬ Inner cable
- ⑭ Clip
- ⑮ Rod

- ⑯ Selector lever
- ⑰ Lock plate
- ⑱ Detent spring
- ⑲ Pin
- ⑳ Spacer
- ㉑ Washer
- ㉒ Boot
- ㉓ Spacer
- ㉔ Snap pin

**Tightening torque: N·m (kg·m, ft·lb)**

**T1: 4.4±1.5 (0.45±0.15, 3.3±1.1)**

**T2: 12±3 (1.2±0.3, 8.7±2.2)**

**T3: 18±5 (1.8±0.5, 13.0±3.6)**