
1. Fuel Tank

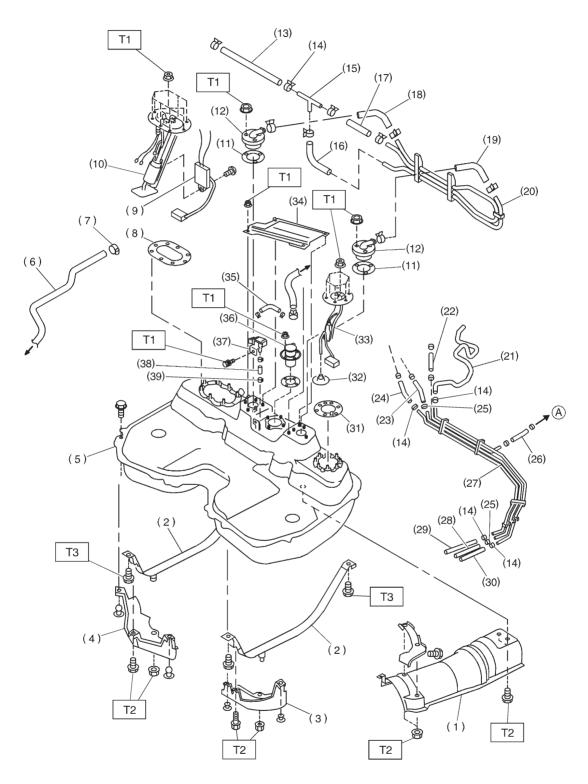

B2M2379A

2-8 [C100] 1. Fuel Tank

COMPONENT PARTS

- (1) Heat sealed cover
- (2) Fuel tank band
- (3) Protector LH
- (4) Protector RH
- (5) Fuel tank
- (6) Canister hose A
- (7) Clamp
- (8) Fuel pump gasket
- (9) Main fuel meter unit
- (10) Fuel pump ASSY
- (11) Fuel cut valve gasket
- (12) Fuel cut valve
- (13) Evaporation hose A
- (14) Clip
- (15) Joint pipe

- (16) Evaporation hose C
- (17) Evaporation hose B
- (18) Evaporation hose D
- (19) Evaporation hose E
- (20) Evaporation pipe ASSY
- (21) Canister hose B
- (22) Jet pump hose A
- (23) Fuel delivery hose A
- (24) Fuel return hose A
- (25) Clamp
- (26) Jet pump hose B
- (27) Fuel pipe ASSY
- (28) Fuel delivery hose B
- (29) Fuel return hose B
- (30) Evaporation hose F

- (31) Fuel sub meter gasket
- (32) Jet pump filter
- (33) Fuel sub meter unit
- (34) Protector cover
- (35) Vent valve hose
- (36) Vent valve
- (37) Fuel tank pressure sensor
- (38) Fuel tank pressure sensor hose
- (39) Vent valve gasket

Tightening torque: N-m (kg-m, ft-lb)

T1: 4.4±1.5 (0.45±0.15, 3.3±1.1)

T2: 7.4±2.0 (0.75±0.2, 5.4±1.4)

T3: 33±10 (3.4±1.0, 25±7)