### **INTERIOR LIGHT SYSTEM**

# 7. Interior Light System S914418

A: SCHEMATIC S914418A21


#### 1. INTERIOR LIGHT S914418A2101

<Ref. to WI-122, SCHEMATIC, In Compartment Light System.>

## B: INSPECTION S914418A10

### 1. DOOR SWITCH S914418A1001

Measure door switch resistance.

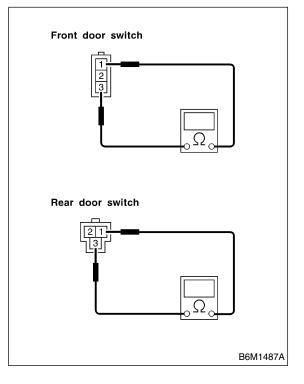

Switch position	Terminal No.	Standard
When door is opened	1 and 3	Less than 1 $\Omega$
When door is closed		More than 1 M $\Omega$

### 2. REAR GATE LATCH SWITCH S914418A1002

Measure rear gate latch switch.

Switch position	Terminal No.	Standard
When rear gate is opened	1 and 2	Less than 1 $\Omega$
When rear gate is closed		More than 1 M $\Omega$

### 3. TRUNK ROOM LIGHT SWITCH S914418A1003

Measure trunk room light switch.

Switch position	Terminal No.	Standard
When trunk lid is opened	1 and 2	Less than 1 $\Omega$
When trunk lid is closed		More than 1 $M\Omega$