
1. General Description S902007

A: SPECIFICATIONS \$902001E49

Front wiper motor	Input	12 V — 72 W or less
Rear wiper motor	Input	12 V — 42 W or less
Front washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less
Rear washer motor	Pump type	Centrifugal
	Input	12 V — 36 W or less

B: COMPONENT S902001A05

1. FRONT WIPER S902001A0501

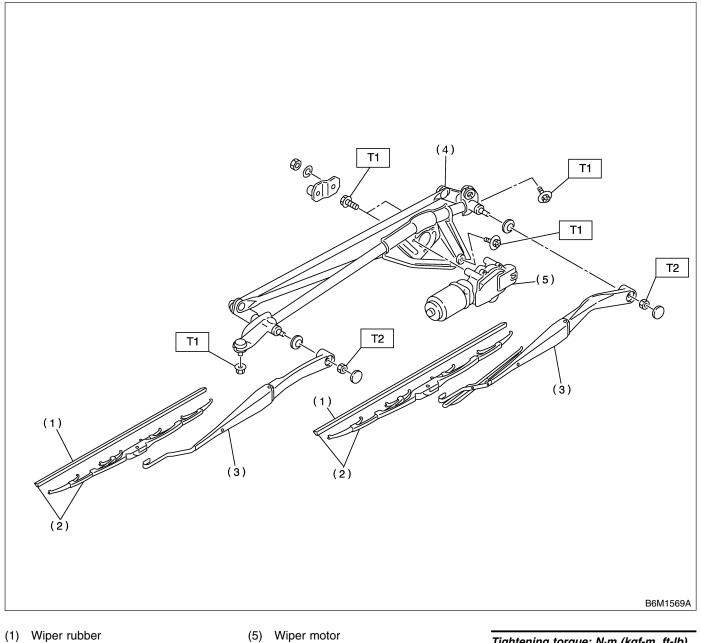


(1) Wiper rubber

- (2) Wiper blade ASSY
- (3) Wiper arm
- (4) Wiper link

Tightening torque: N·m (kgf-m, ft-lb) T1: 5.9 (0.6, 4.3) T2: 20 (2.0, 14.5)

2. REAR WIPER \$902001A0502

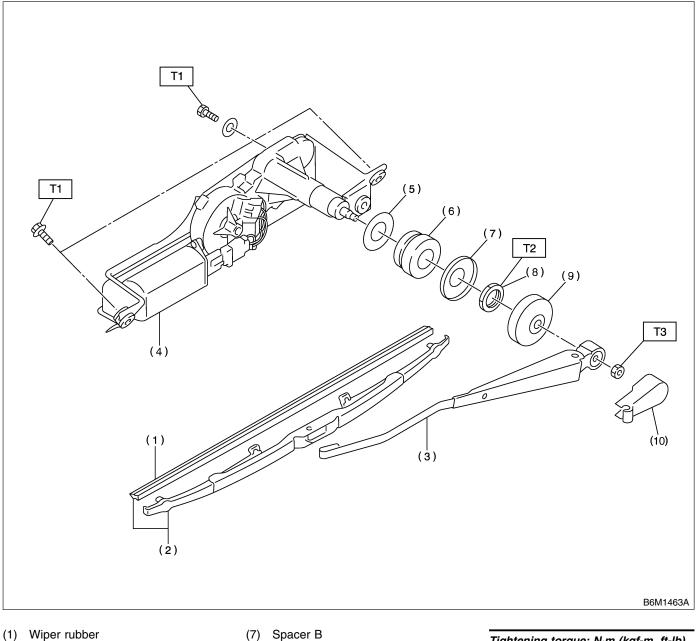


- (2) Wiper blade ASSY
- (3) Wiper arm
- (4) Wiper motor
- (5) Spacer A
- (6) Cushion

- (8) Nut
- (9) Cap
- (10) Wiper arm cover

Tightening torque: N·m (kgf-m, ft-lb) T1: 5.9 (0.6, 4.3) T2: 7.4 (0.75, 5.4) T3: 7.8 (0.8, 5.8)

3. WASHER TANK S902001A0503

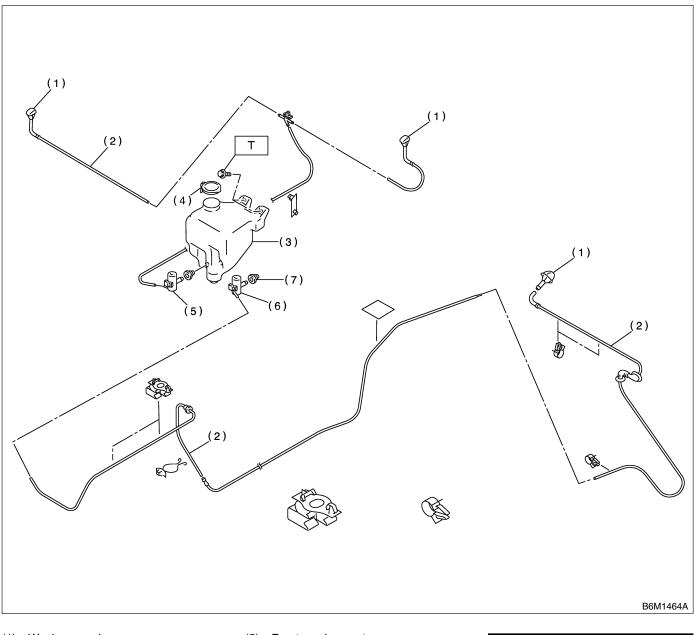

- (1) Washer nozzle
- (2) Washer hose
- (3) Washer tank
- (4) Washer tank cap

- (5) Front washer motor
- (6) Rear washer motor
- (7) Grommet

Tightening torque: N·m (kgf-m, ft-lb) T: 5.9 (0.6, 4.3)

C: CAUTION 5902001A03

• Reconnect connectors and hoses securely.

- After reconnecting, confirm that each function operates normally.
- Be careful that wire harnesses of airbag system pass near electrical parts and switches.
- The harness and connector of all airbag systems are colored with yellow. Do not use a tester on these circuits.
- Care must be taken when installing the piping hose so that no bending, jamming, etc. are caused.
- If even a little oil or grease such as silicon oil gets in the tank and washer passages, an oil film easily forms on the glass, causing the wiper to chatter and judder. Therefore, be careful not to let this happen.