

62. Instrument Panel Wiring Harness

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i1	57	★	B-1	B36	Bulkhead wiring harness
i2	22	★	C-1	R339	Rear wiring harness LH
i3	19	★	B-4	B38	Bulkhead wiring harness
i5	20	★	C-1		F/B
i6	16	★	C-2		Remote control mirror switch
i10	40	★	B-2		Combination meter
i15	6	★	C-3		Blower fan switch
i23	2	★	B-4		Glove box light
i24	2	★	B-3		Front accessory power supply socket
i25	3	★	B-3		Keyless access interior antenna (front)
i26	20	★	B-3		Audio connector
					Audio (normal audio)
	10	★	B-3		Audio (display audio)
i50	10	★	B-3		Navigation unit
i53	14	★	C-5	R98	Rear wiring harness RH
i54	16	★	C-1	R99	Rear wiring harness LH
i59	10	★	B-3		Clock
i76	28	★	C-5	D83	Front door cord RH
i79	6	★	B-2		Illumination control switch
i80	26	★	C-4		A/C CM
i82	12	★	B-1		J/C
i84	35	★	C-2		Body integrated unit
i87	28	★	B-3		Navigation unit
i88	12	★	C-4		A/C control panel
i97	12	★	B-4		J/C
i100	12	★	B-4		
i101	28	★	C-1	D84	Front door cord LH
i102	14	★	C-1	R167	Rear wiring harness LH
i131	16	★	B-3		Navigation unit
	16	★	B-3		Audio (normal audio)
	6	★	A-3		Audio (display audio)
i140	4	★	B-3		J/C
i141	4	★	B-3		
i147	6	★	B-3		Navigation unit
i149	6	★	C-3		AUX input terminal
i150	14	★	B-3		Push button ignition switch
i152	20	★	C-1		F/B
i153	16	★	C-5	R331	Rear wiring harness RH
i154	18	★	C-5	R332	
i155	11	★	C-5	R333	
i156	5	★	C-2		Hill hold switch
i157	16	★	A-5	R50	Roof cord (without EyeSight)
	24	★	A-5	R50	Roof cord (with EyeSight)

Instrument Panel Wiring Harness


WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
i158	2	★	B-1		Side tweeter LH (premium audio)
					Side tweeter LH (premium navigation)
	4	★	B-1		Side tweeter LH (except for premium audio)
					Side tweeter LH (standard navigation)
i159	2	★	B-5		Side tweeter RH (premium audio)
					Side tweeter RH (premium navigation)
	4	★	B-5		Side tweeter RH (except for premium audio)
					Side tweeter RH (standard navigation)
i160	11	★	B-1		Relay block
i161	11	★	B-2		
i162	6	★	C-1		Lower cover switch
i163	10	★	C-2		EPB control switch
i164	12	★	B-2		J/C
i165	4	★	B-1		
i166	12	★	B-1		
i167	4	★	B-2		
i168	4	★	B-2		
i169	22	★	B-5		
i170	8	★	B-2		
i171	31	★	C-2		Body integrated unit
i172	2	★	B-2		Evaporator sensor
i173	2	★	C-3		In-vehicle sensor
i174	7	Green	B-3		Air mix door actuator (manual A/C)
	7	Green	B-3		Air mix door actuator (driver's seat) (auto A/C)
i175	7	Green	B-4		Air mix door actuator (passenger's seat) (auto A/C)
i176	5	★	B-3		Mode door actuator
i177	7	Green	B-3		Rear vent actuator (rear seat)
i181	24	★	C-4		A/C CM
i182	4	★	B-4		Blower resistor
i183	5	★	B-4		Power transistor (auto A/C)
i184	7	★	B-4		Blower motor relay
i185	2	★	C-5		Blower motor
i186	7	Green	B-4		Intake door actuator
i187	2	★	A-5		Wiper deicer
i188	8	★	B-5		Impact sensor
i189	2	★	C-4		Rear accessory power supply socket (console box)
i190	14	★	C-1	R340	Rear wiring harness LH
i191	2	★	B-4		Trunk opener cancel button
i192	28	★	A-3		Audio (display audio)
i193	2	Black	C-1		F/B
i194	6	★	B-5		Light control sensor
i196	10	★	C-3	R385	Adapter cord (audio amplifier)
i197	12	★	C-1	D148	Front door cord LH
i210	4	★	B-5		J/C
i211	4	★	A-5		
i225	4	★	B-2		
i241	28	★	B-1		Keyless access CM
i242	30	★	B-2		
i252	4	★	B-4		J/C

★ : White or natural color

Instrument Panel Wiring Harness

WIRING SYSTEM

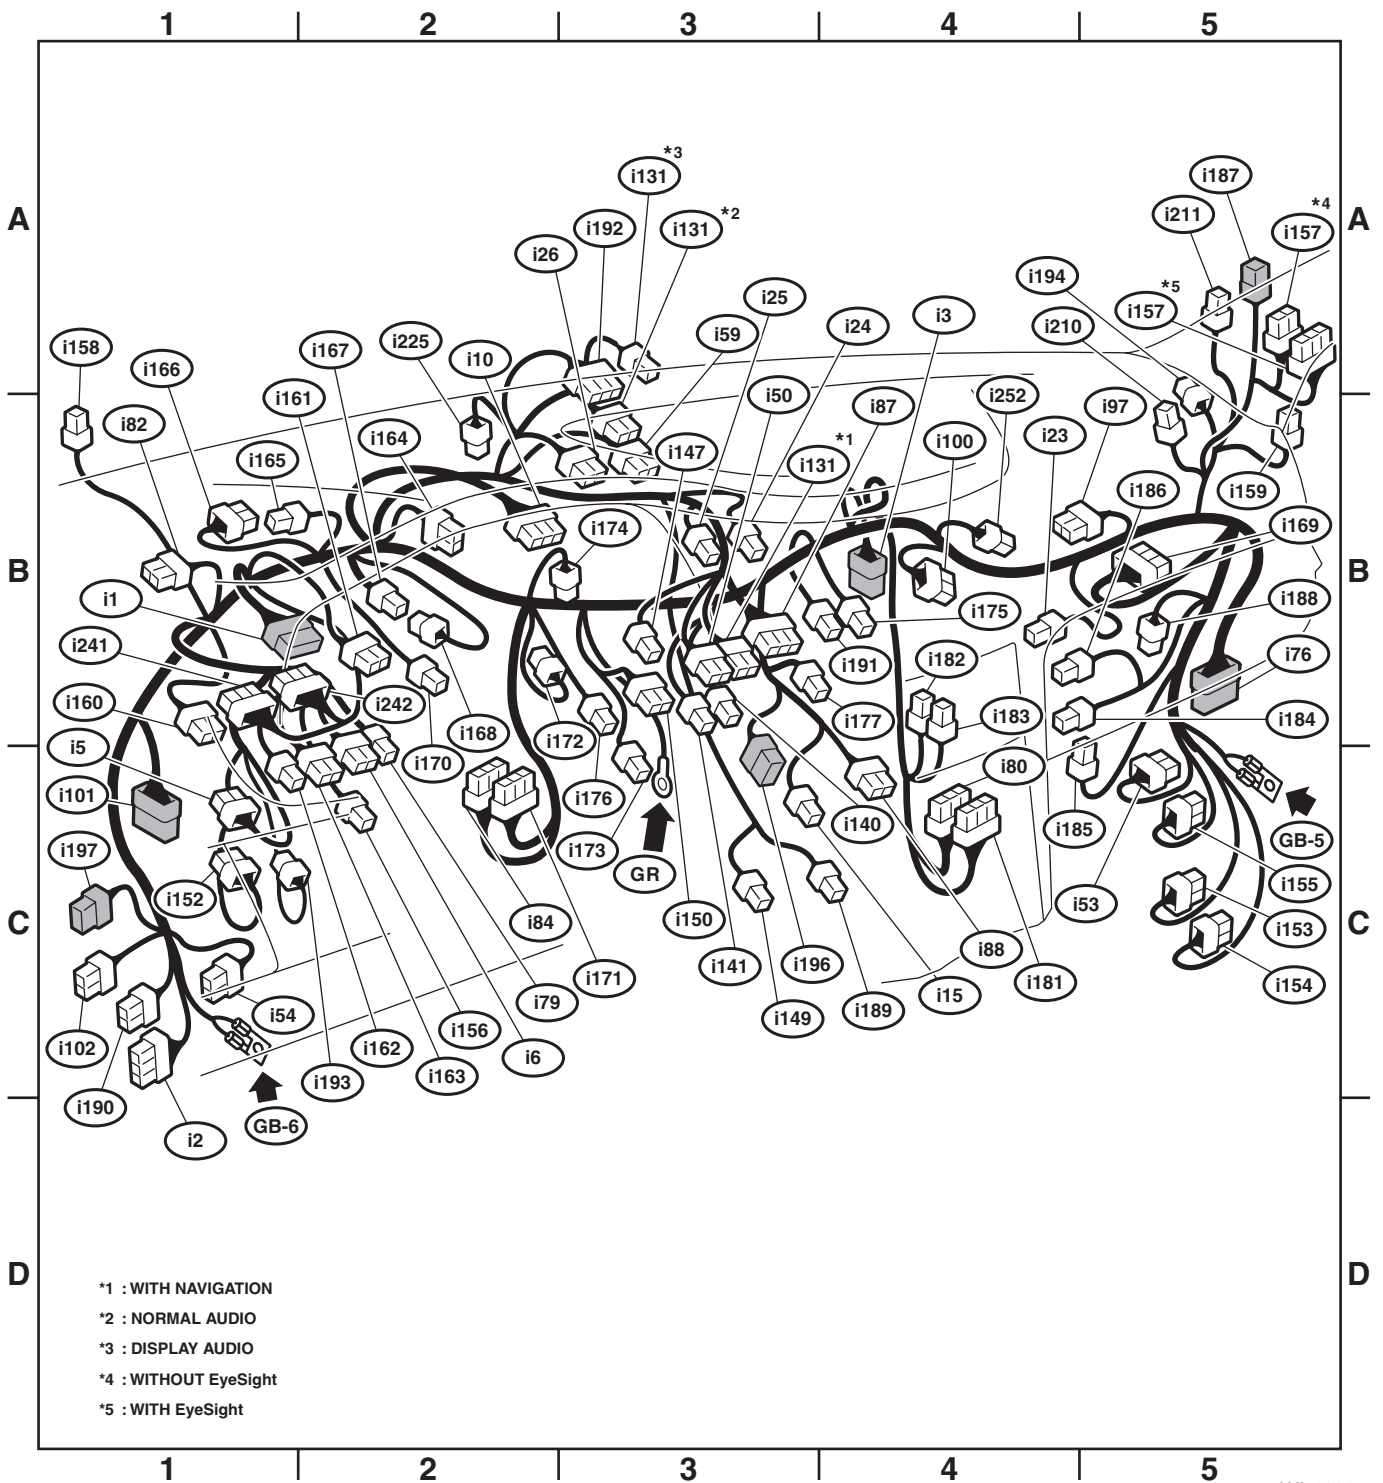

WI-41395