

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

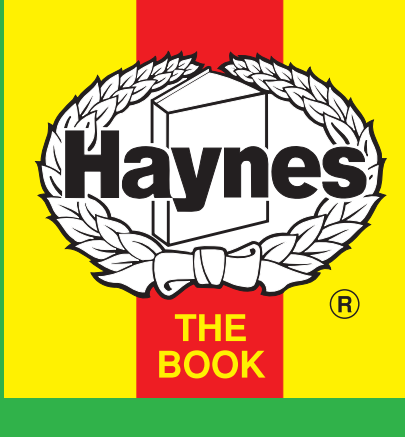

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemAX 1.4i CAT & 4x41992 to 1996

Type		TU3FMC/L/Z (KDX) 55kW EEC93
Capacity (cm³) / number of cylinders		1360 / 4
Compression ratio / pressure	bar	9.3 / _
Oil pressure	bar	[4.0]
Oil temperature	°C	90
Valve clearance - inlet	mm	0.20±0.05
Valve clearance - exhaust	mm	0.40±0.05
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	90 to 95
Radiator cap pressure	bar	1.0. 92 ►: 1.4

Fuel systemAX 1.4i CAT & 4x41992 to 1996

Idle speed - manual [auto]	rpm	850±50 N/A
Fast idle speed - manual [auto]	rpm	1300±50 N/A
CO @ idle speed [3000 rpm] - see page VI	%	_
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	≥11.0
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Bosch
Type / ref		MA3.0 Mono-Motronic SPI
Main jet / needle		_
Injection pressure	bar	0.9 to 1.1
Pump pressure	bar	2.5
Octane rating	RON	95[U]

Ignition systemAX 1.4i CAT & 4x41992 to 1996

Type		Static
Ignition coil		2xValeo. Bosch. 4 output
Primary resistance	ohms	0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	6±3 BTDC @ 850±50 N/A
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Bosch/Eyquem
Type		FR7LDC / RFC52LSP
Electrode gap	mm	0.90

Electrical systemAX 1.4i CAT & 4x41992 to 1996

Battery	V / CC / RC	12 / 150 / _
Alternator voltage / full load current / engine rpm		13.5 / 70 / 3650
Starter motor current / voltage - cranking	A / V	275 / 12
- locked	A / V	220 / _

Running gearAX 1.4i CAT & 4x41992 to 1996

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	155/70x13
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	1.9 / 1.9
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-0.5 to -3.5. 4x4: -1.0 to -40
Camber		-30'±30'. 4x4: 0±30'
Castor		+2°15'±1°. 4x4: +2°10'±30'
King pin inclination		+12.58°

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+1.8 to 5.4. 4x4: +1.0 to 8.0
Camber		-1°15'±30'


Torque wrench settingsAX 1.4i CAT & 4x41992 to 1996

Cylinder head - stage 1	Nm	20
- stage 2	Nm	+ 120°
Cylinder head - stage 3	Nm	+ 120°
- stage 4	Nm	_
Big-end bearings	Nm	40
Main bearings	Nm	20 + 45°
Clutch cover	Nm	13
Flywheel [driveplate]	Nm	65 LkC
Front hubs	Nm	250
Rear hubs	Nm	140
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	25

CapacitiesAX 1.4i CAT & 4x41992 to 1996

Engine oil & filter	litres	3.5
Gearbox - 4-speed [5-speed]	litres	2.0. 4x4: 2.6
Automatic transmission - refill	litres	_
Final drive	litres	WT. 4x4 rear: 0.8
Cooling system	litres	4.8
Fuel tank	litres	43

Notes and Illustrations

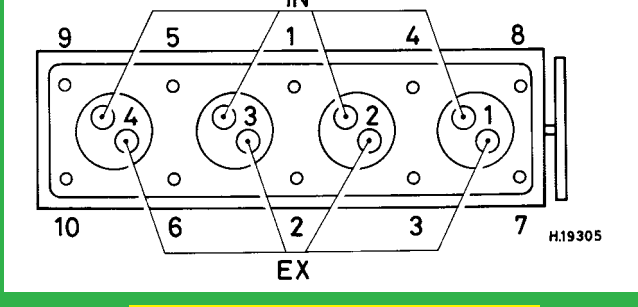

1360 cm³