


Engine & CoolingFuelIgnitionElectricalRunning gearTorque settingsCapacitiesNotes & Illustrations

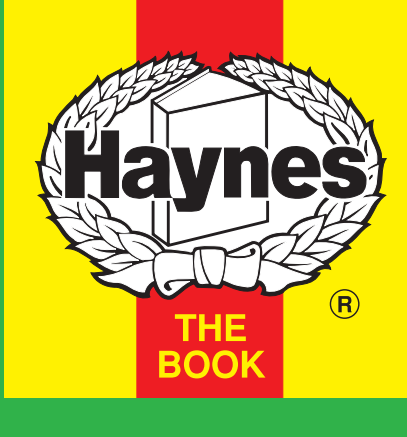

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENUHELP

Engine and cooling system

XJ-S V12 & Convertible

1988 to 1991

Type		V12
Capacity (cm³) / number of cylinders		5345 / 12
Compression ratio / pressure	bar	11.5 / 13.8
Oil pressure	bar	1.4
Oil temperature	°C	80
Valve clearance - inlet	mm	0.25 to 0.30
Valve clearance - exhaust	mm	0.25 to 0.30
Firing order		1-12-5-8-3-10-6-7-2-11-4-9
No 1 cylinder position		FR
Thermostat opening temperature	°C	88
Radiator cap pressure	bar	1.0

Fuel system

XJ-S V12 & Convertible

1988 to 1991

Idle speed - manual [auto]	rpm	750±25
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	1.0 to 2.0
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Lucas
Type / ref		Digital P
Main jet / needle		—
Injection pressure	bar	2.5
Pump pressure	bar	2.5
Octane rating	RON	95[E 95 RON]

Ignition system

XJ-S V12 & Convertible

1988 to 1991

Type		Computerized
Ignition coil		Marelli BAE 504DK
Primary resistance	ohms	0.45
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Marelli
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	10 to 13 BTDC @ idle
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BR7EFS / RS5C
Electrode gap	mm	0.64

Electrical system

XJ-S V12 & Convertible

1988 to 1991

Battery	V / CC / RC	12 / 68Ah
Alternator voltage / full load current / engine rpm		13.8 to 15.0 / _ / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

XJ-S V12 & Convertible

1988 to 1991

Brakes -		
Front (min. friction material thickness)	mm	—
Rear (min. friction material thickness)	mm	—

Tyres		
Saloon	Size	215/70x15: 235/60x15
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.8 / 1.8¹
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0 to +1.6³
Camber		-30'±15'
Castor		+3°30'±15'
King pin inclination		+1°30'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0±0.8³
Camber		-45'±15'

Torque wrench settings

XJ-S V12 & Convertible

1988 to 1991

Cylinder head - stage 1	Nm	0.438 in. nut: 68
- stage 2	Nm	0.375 in. nut: 38
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	55
Main bearings	Nm	0.5 in. nut: 83²
Clutch cover	Nm	—
Flywheel [driveplate]	Nm	88
Front hubs	Nm	WSM
Rear hubs	Nm	136 to 163
Wheel nuts / bolts	Nm	61
Spark plugs	Nm	—

Capacities

XJ-S V12 & Convertible

1988 to 1991

Engine oil & filter	litres	10.0
Gearbox - 4-speed [5-speed]	litres	—
Automatic transmission - refill	litres	9.1
Final drive	litres	1.6
Cooling system	litres	19.8
Fuel tank	litres	91. Convert: 82


Notes and Illustrations

¹235/60x15: 1.9 / 1.9


²0.375 in. nut: 38

³L


1: Idle speed2: CO / Mixture

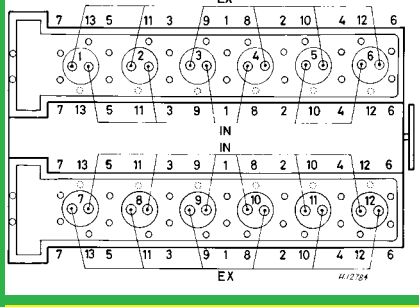

5345 cm³

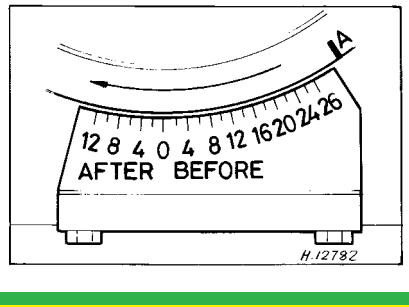

5345 cm³

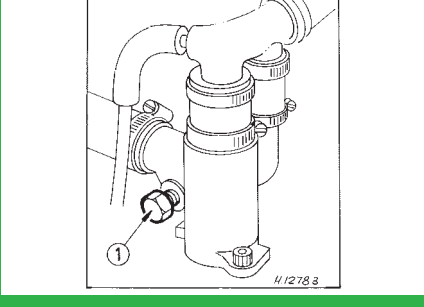

Digital P, 5345 cm³