

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

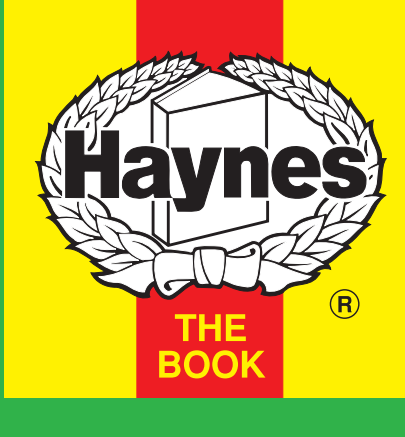

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

Carisma 1.8

1996 to 1997

Type		4G93 DOHC 16V
Capacity (cm ³) / number of cylinders		1834 / 4
Compression ratio / pressure	bar	10.5 / ≥10.0
Oil pressure	bar	—
Oil temperature	°C	—
Valve clearance - inlet	mm	H: 0.20
Valve clearance - exhaust	mm	H: 0.30
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	82
Radiator cap pressure	bar	0.75 to 1.05

Fuel system

Carisma 1.8

1996 to 1997

Idle speed - manual [auto]	rpm	800±100 N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		_Mitsubishi
Type / ref		MPI
Main jet / needle		—
Injection pressure	bar	2.6
Pump pressure	bar	3.2
Octane rating	RON	95[U]

Ignition system

Carisma 1.8

1996 to 1997

Type		DIS
Ignition coil		2 x Twin output
Primary resistance	ohms	—
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	5°±3° BTDC @ 800±100 N/A
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Nippon Denso
Type		BKR6E-11 / K20PRU11
Electrode gap	mm	1.1

Electrical system

Carisma 1.8

1996 to 1997

Battery	V / CC / RC	—
Alternator voltage / full load current / engine rpm		14.6 / 90A
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

Carisma 1.8

1996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	195/60x14:205/50x15
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	Refer to vehicle
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	1.0±2.0
Camber		0°00'±30'
Castor		2°12'
King pin inclination		12°41'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	3.0±2.0
Camber		-0°41'±30'

Torque wrench settings

Carisma 1.8

1996 to 1997

Cylinder head - stage 1	Nm	74 oiled ¹
- stage 2	Nm	Slacken
Cylinder head - stage 3	Nm	20 +90°
- stage 4	Nm	+90°
Big-end bearings	Nm	20 +90°
Main bearings	Nm	25 +90°
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	93 to 103
Front hubs	Nm	216 to 255 N
Rear hubs	Nm	172 N
Wheel nuts / bolts	Nm	98 to 117
Spark plugs	Nm	25

Capacities


Carisma 1.8

1996 to 1997

Engine oil & filter	litres	3.8
Gearbox - 4-speed [5-speed]	litres	3.4
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	6.0
Fuel tank	litres	—

Notes and Illustrations

¹Bolt shank length: ≤96.4 mm

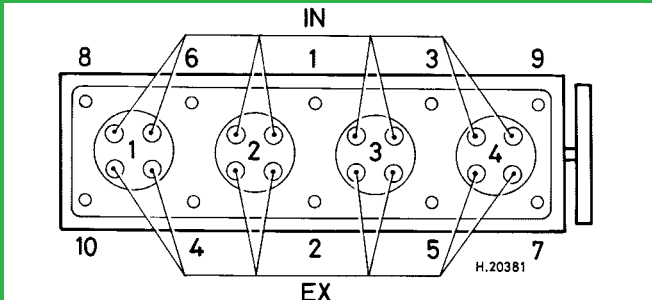

1834 cm³ 16V