


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

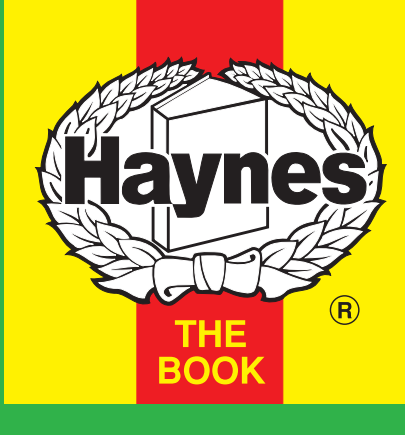

Automotive
Technical
DATA
BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system19, 1.4i CAT(B/C/L53A)1991 to 1996

Type		E7J-7-00 60kW
Capacity (cm ³) / number of cylinders		1390 / 4
Compression ratio / pressure	bar	9.5 / _
Oil pressure	bar	1.0 [3.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.10
Valve clearance - exhaust	mm	0.25
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	86
Radiator cap pressure	bar	1.2

Fuel system19, 1.4i CAT(B/C/L53A)1991 to 1996

Idle speed - manual [auto]	rpm	800±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	≥14.5
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Siemens Bendix
Type / ref		Bosch Monopoint SPI
Main jet / needle		_
Injection pressure	bar	1.0±0.02
Pump pressure	bar	1.06±0.1
Octane rating	RON	95[U]

Ignition system19, 1.4i CAT(B/C/L53A)1991 to 1996

Type		Computerized
Ignition coil		Renix
Primary resistance	ohms	0.4 to 0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		NGK/Eyquem
Type		BCP5ES / FC52LS
Electrode gap	mm	0.90±0.05

Electrical system19, 1.4i CAT(B/C/L53A)1991 to 1996

Battery	V / CC / RC	12 / 35Ah
Alternator voltage / full load current / engine rpm		13.5 to 15.0 / _ / 3000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	350 to 460 / _

Running gear19, 1.4i CAT(B/C/L53A)1991 to 1996

Brakes -		
Front (min. friction material thickness)	mm	6.0 with backing
Rear (min. friction material thickness)	mm	2.5

Tyres		
Saloon	Size	145x13: 165/70x13
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.0 / 2.2
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-1.0±1.0
Camber		-5'±30'
Castor		+1°55'. PAS: +4°
King pin inclination		+12°55'±30'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+0.5 to 2.5
Camber		-50'±30'


Torque wrench settings19, 1.4i CAT(B/C/L53A)1991 to 1996

Cylinder head - stage 1	Nm	20
- stage 2	Nm	+ 97±2°
Cylinder head - stage 3	Nm	Wait 3 mins. Slacken in turn
- stage 4	Nm	20 + 97±2°
Big-end bearings	Nm	40 to 45
Main bearings	Nm	60 to 65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	50 to 55
Front hubs	Nm	250
Rear hubs	Nm	160
Wheel nuts / bolts	Nm	80
Spark plugs	Nm	_

Capacities19, 1.4i CAT(B/C/L53A)1991 to 1996

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	3.4
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	5.2
Fuel tank	litres	55

Notes and Illustrations

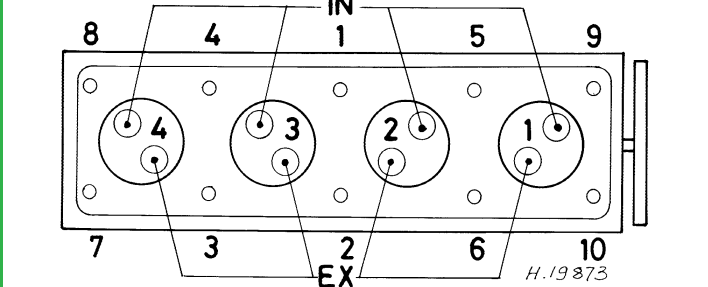

1390 cm³, E7J