


Engine & CoolingFuelIgnitionElectricalRunning gearTorque settingsCapacitiesNotes & Illustrations

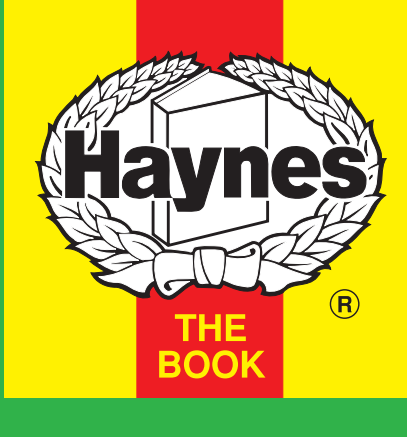

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENUHELP

Engine and cooling system

21, 1.7 (X482)

1986 to 1988

Type		F2N-C7-10
Capacity (cm³) / number of cylinders		1721 / 4
Compression ratio / pressure	bar	10.0 / _
Oil pressure	bar	2.0 [3.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20
Valve clearance - exhaust	mm	0.40
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	89 to 101
Radiator cap pressure	bar	1.2

Fuel system

21, 1.7 (X482)

1986 to 1988

Idle speed - manual [auto]	rpm	700±50
Fast idle speed - manual [auto]	rpm	950±50
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Solex
Type / ref		28-34 Z10 889
Main jet / needle		100, 145
Injection pressure	bar	_
Pump pressure	bar	0.17 to 0.33
Octane rating	RON	98[L]

Ignition system

21, 1.7 (X482)

1986 to 1988

Type		AEI
Ignition coil		Renix
Primary resistance	ohms	0.4 to 0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		Renix
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	7±2 BTDC @ idle
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	RE232
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	5 to 9 @ 750
	° Crankshaft @ rpm	8 to 12 @ 1550
	° Crankshaft @ rpm	26 to 29 @ 4050
Vacuum range check	mbar	300 @ 4550 rpm
Maximum vacuum advance	° Crankshaft	≥8
Spark plugs		AC/Champion
Type		C41CXLS / N279YC
Electrode gap	mm	0.75 to 0.85

Electrical system

21, 1.7 (X482)

1986 to 1988

Battery	V / CC / RC	12 / 210 / 65
Alternator voltage / full load current / engine rpm		13.5 to 14.8 / _ / 3000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gear

21, 1.7 (X482)

1986 to 1988

Brakes -		
Front (min. friction material thickness)	mm	6.0 with backing
Rear (min. friction material thickness)	mm	2.5 with backing

Tyres		
Saloon	Size	175/70x13: 175/65x14
Estate / Van	Size	175/70x13: 175/65x14
Pressure - front / rear - Saloon	bar	2.0 / 2.2
- Estate / Van	bar	2.0 / 2.6

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-1.0±1.0
Camber		0±30'
Castor		+2°±30'
King pin inclination		+11°40'±30'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+2.0 to 5.0
Camber		-40'±10'

Torque wrench settings

21, 1.7 (X482)

1986 to 1988

Cylinder head - stage 1	Nm	30
- stage 2	Nm	70, wait 3 min. Slacken
Cylinder head - stage 3	Nm	20
- stage 4	Nm	+ 123±2°
Big-end bearings	Nm	45 to 50
Main bearings	Nm	60 to 65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	50 to 55
Front hubs	Nm	250
Rear hubs	Nm	160
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	_

Capacities

21, 1.7 (X482)

1986 to 1988


Engine oil & filter	litres	5.2
Gearbox - 4-speed [5-speed]	litres	3.3 [3.4]
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	5.2
Fuel tank	litres	66

Notes and Illustrations




1: Idle speed


2: CO / Mixture

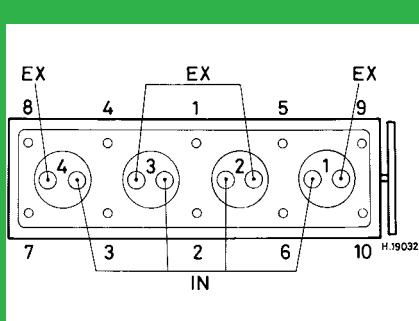

1721 cm³

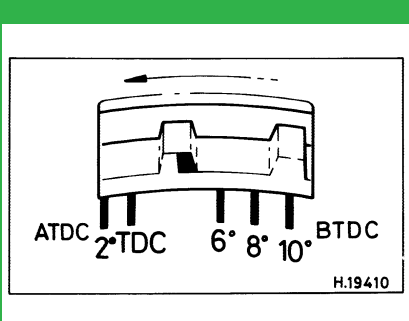

1721 cm³, F2N

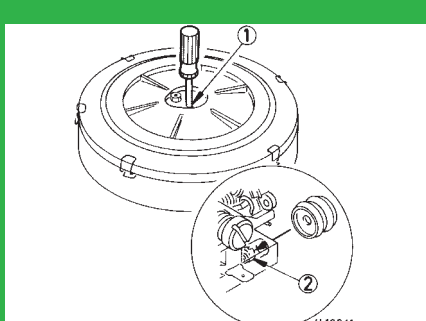

Solex Z10