

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

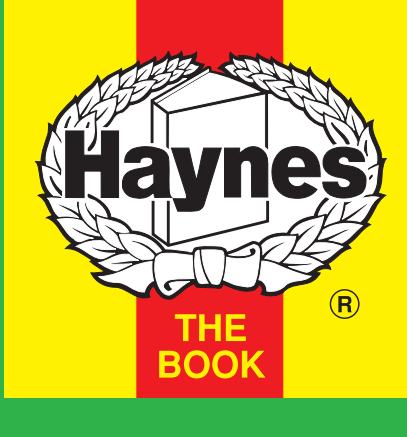

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system21, 2.0 & 4x4¹1986 to 1992

Type		J7R-A7-50 or J7R-A7-51 90kW
Capacity (cm ³) / number of cylinders		1995 / 4
Compression ratio / pressure	bar	10.0 / _
Oil pressure	bar	0.8 [3.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.10 to 0.15
Valve clearance - exhaust	mm	0.20 to 0.25
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	89 to 101
Radiator cap pressure	bar	1.2

Fuel system21, 2.0 & 4x4¹1986 to 1992

Idle speed - manual [auto]	rpm	775±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Bendix
Type / ref		Renix electronic MPI
Main jet / needle		_
Injection pressure	bar	2.0±0.2
Pump pressure	bar	3.0±0.2
Octane rating	RON	98[R] ²

Ignition system21, 2.0 & 4x4¹1986 to 1992

Type		AEI
Ignition coil		Bendix
Primary resistance	ohms	0.4 to 0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		Bendix
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	AEI control
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	AEI control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	AEI control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Eyquem/Champion
Type		C82LJS / S6YC
Electrode gap	mm	0.90±0.05

Electrical system21, 2.0 & 4x4¹1986 to 1992

Battery	V / CC / RC	12 / 210 / 65
Alternator voltage / full load current / engine rpm		13.5 to 14.8 / _ / 3000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gear21, 2.0 & 4x4¹1986 to 1992

Brakes -		
Front (min. friction material thickness)	mm	6.0 with backing
Rear (min. friction material thickness)	mm	2.5 with backing ³

Tyres		
Saloon	Size	185/65x14: 185/55x15
Estate / Van	Size	185/65x14
Pressure - front / rear - Saloon	bar	2.0 / 2.2 ⁴
- Estate / Van	bar	2.3 / 2.6 ⁵

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-2.0±1.0
Camber		+30'±30' [87 ►: -25'±30']
Castor		+2°30'±30'
King pin inclination		+12°45'±30'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+2.0 to 5.0 ⁶
Camber		-40'±10' ⁷

Torque wrench settings21, 2.0 & 4x4¹1986 to 1992


Cylinder head - stage 1	Nm	20
- stage 2	Nm	20 + 105° + 105°
Cylinder head - stage 3	Nm	Run for 15 min.
- stage 4	Nm	Cool for 3 hours, then +20°
Big-end bearings	Nm	45 to 50
Main bearings	Nm	88 to 98
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60 [65 to 70]
Front hubs	Nm	250
Rear hubs	Nm	160. 4x4: 210
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	_

Capacities21, 2.0 & 4x4¹1986 to 1992

Engine oil & filter	litres	6.2
Gearbox - 4-speed [5-speed]	litres	2.2. 4x4: 2.4
Automatic transmission - refill	litres	2.5 [AR4: 4.0]
Final drive	litres	AR4: 0.8 ⁸
Cooling system	litres	6.8 [AT: 7.2]
Fuel tank	litres	66. 4x4: 62

Notes and Illustrations

¹B,K,L483
²Engine no. 12500 ►: [E 95 RON]
³ABS: 6.0
⁴AT: 2.1 / 2.2
⁵AT: 2.4 / 2.6
⁶4x4: +3.0 to 5.0
⁷89 ►: -20'±10'. 4x4: -30'±10'
⁸4x4 rear: 1.3

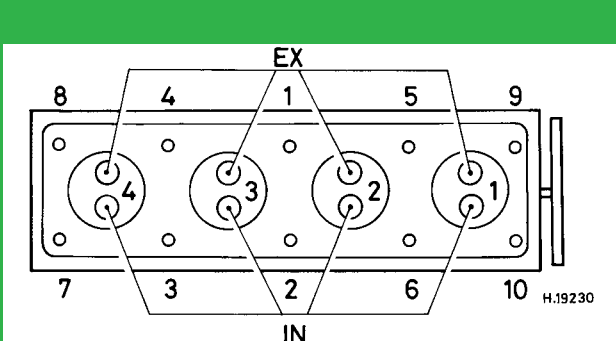

1995 cm³