

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemMetro / 114 1.4i & Cabrio CAT1991 to 1994

Type		K8 SOHC 56kW
Capacity (cm³) / number of cylinders		1397 / 4
Compression ratio / pressure	bar	9.75 / _
Oil pressure	bar	1.0
Oil temperature	°C	_
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	76 to 80
Radiator cap pressure	bar	0.9 to 1.0

Fuel systemMetro / 114 1.4i & Cabrio CAT1991 to 1994

Idle speed - manual [auto]	rpm	875±50
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.75 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Rover
Type / ref		Indirect SPI with MEMS
Main jet / needle		_
Injection pressure	bar	1.00 to 1.10
Pump pressure	bar	2.7
Octane rating	RON	95[U]

Ignition systemMetro / 114 1.4i & Cabrio CAT1991 to 1994

Type		MEMS
Ignition coil		AUU1326 or ADU8779
Primary resistance	ohms	0.71 to 0.81
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		Lucas
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	10±1 BTDC @ 850
V = Vacuum NV = No Vacuum		V
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Unipart/Champion
Type		GSP6662 / RC9YCC
Electrode gap	mm	0.85

Electrical systemMetro / 114 1.4i & Cabrio CAT1991 to 1994

Battery	V / CC / RC	12 / 280 / 50 or 360 / 60
Alternator voltage / full load current / engine rpm		14.0 / 65 / 3000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gearMetro / 114 1.4i & Cabrio CAT1991 to 1994

Brakes -		
Front (min. friction material thickness)	mm	3.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	155/65x13: 185/55x13
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.1 / 2.1 185: 2.0 / 2.0
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	[0 to -25']
Camber		+18'±37'. GTa: +10'±37'
Castor		+23'±55'. GTa: +2°±55'
King pin inclination		+10°52'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	[+10' to 50']
Camber		-1°±30'


Torque wrench settingsMetro / 114 1.4i & Cabrio CAT1991 to 1994

Cylinder head - stage 1	Nm	20
- stage 2	Nm	+ 180°
Cylinder head - stage 3	Nm	+ 180°
- stage 4	Nm	_
Big-end bearings	Nm	20 + 45°
Main bearings	Nm	WSM
Clutch cover	Nm	18
Flywheel [driveplate]	Nm	85 N
Front hubs	Nm	210
Rear hubs	Nm	90
Wheel nuts / bolts	Nm	60 to 75
Spark plugs	Nm	25

CapacitiesMetro / 114 1.4i & Cabrio CAT1991 to 1994

Engine oil & filter	litres	4.5
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	4.5
Final drive	litres	WT
Cooling system	litres	4.5
Fuel tank	litres	33

Notes and Illustrations

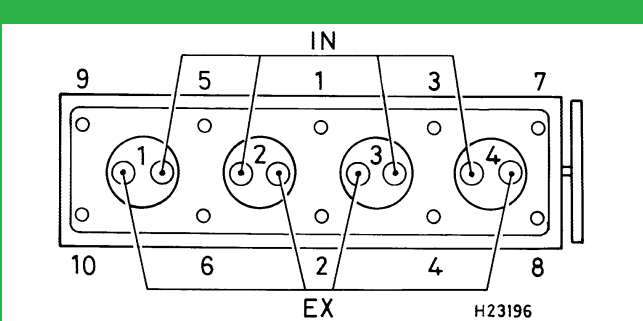

1397 cm³, 8V