




Transmission Assembly

Installation


1. Place the transmission on the transmission jack, and raise to the engine level.
2. Check that the 4 dowel pins are installed.
3. Install the 3 transmission housing mounting bolts.

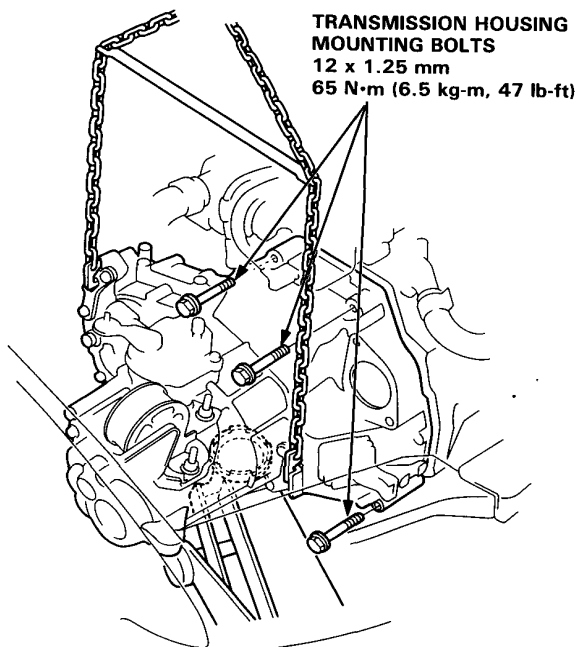

4. Install the transmission mount and mount bracket.


NOTE: Torque mounting bolt and nuts in sequence shown.

CAUTION: Check that the bushings are not twisted or offset.

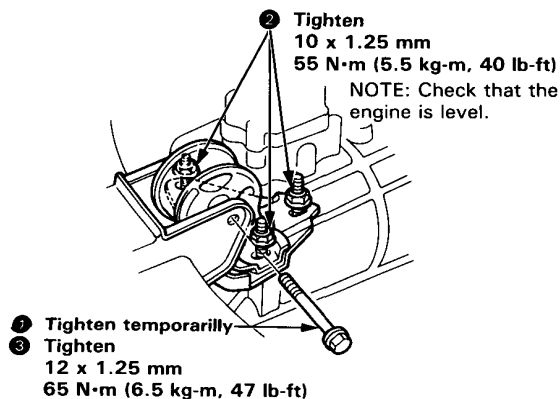


5. Install the transmission housing mounting bolts (Engine side).
6. Install the 3 rear engine bracket mounting bolts.
7. Install the rear engine mount bracket stay.

NOTE: Loosely install the stay mounting bolt and nut, then torque in the sequence shown.

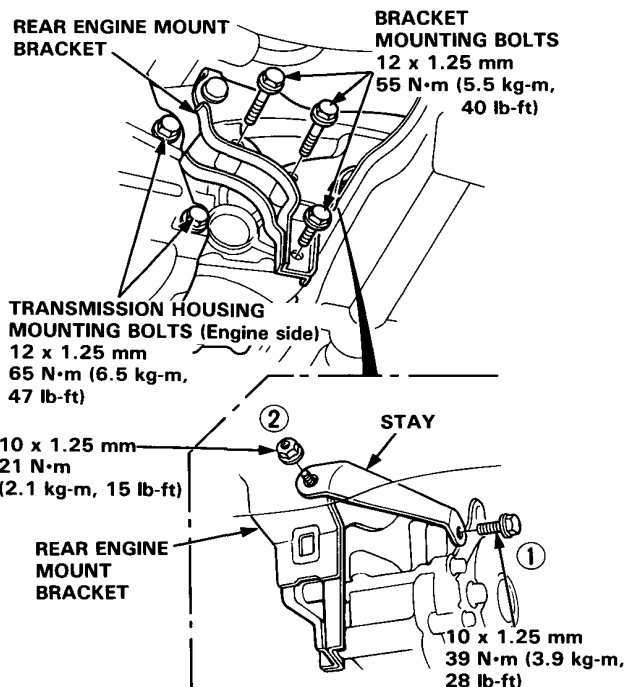

8. Install the intake manifold bracket.

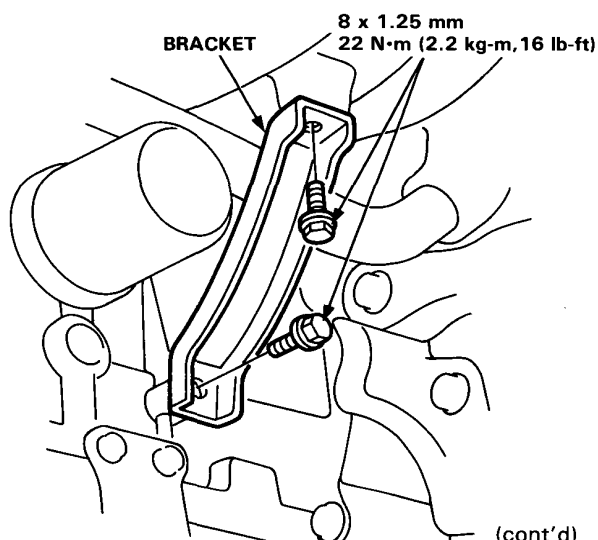

(cont'd)