


(Cont. next page)


4 ES 350 / ES 250 / ES 200

Entry & Start System (LHD), Immobiliser System (LHD),
Starting (LHD), Steering Lock (LHD) and Wireless Door Lock Control (LHD)

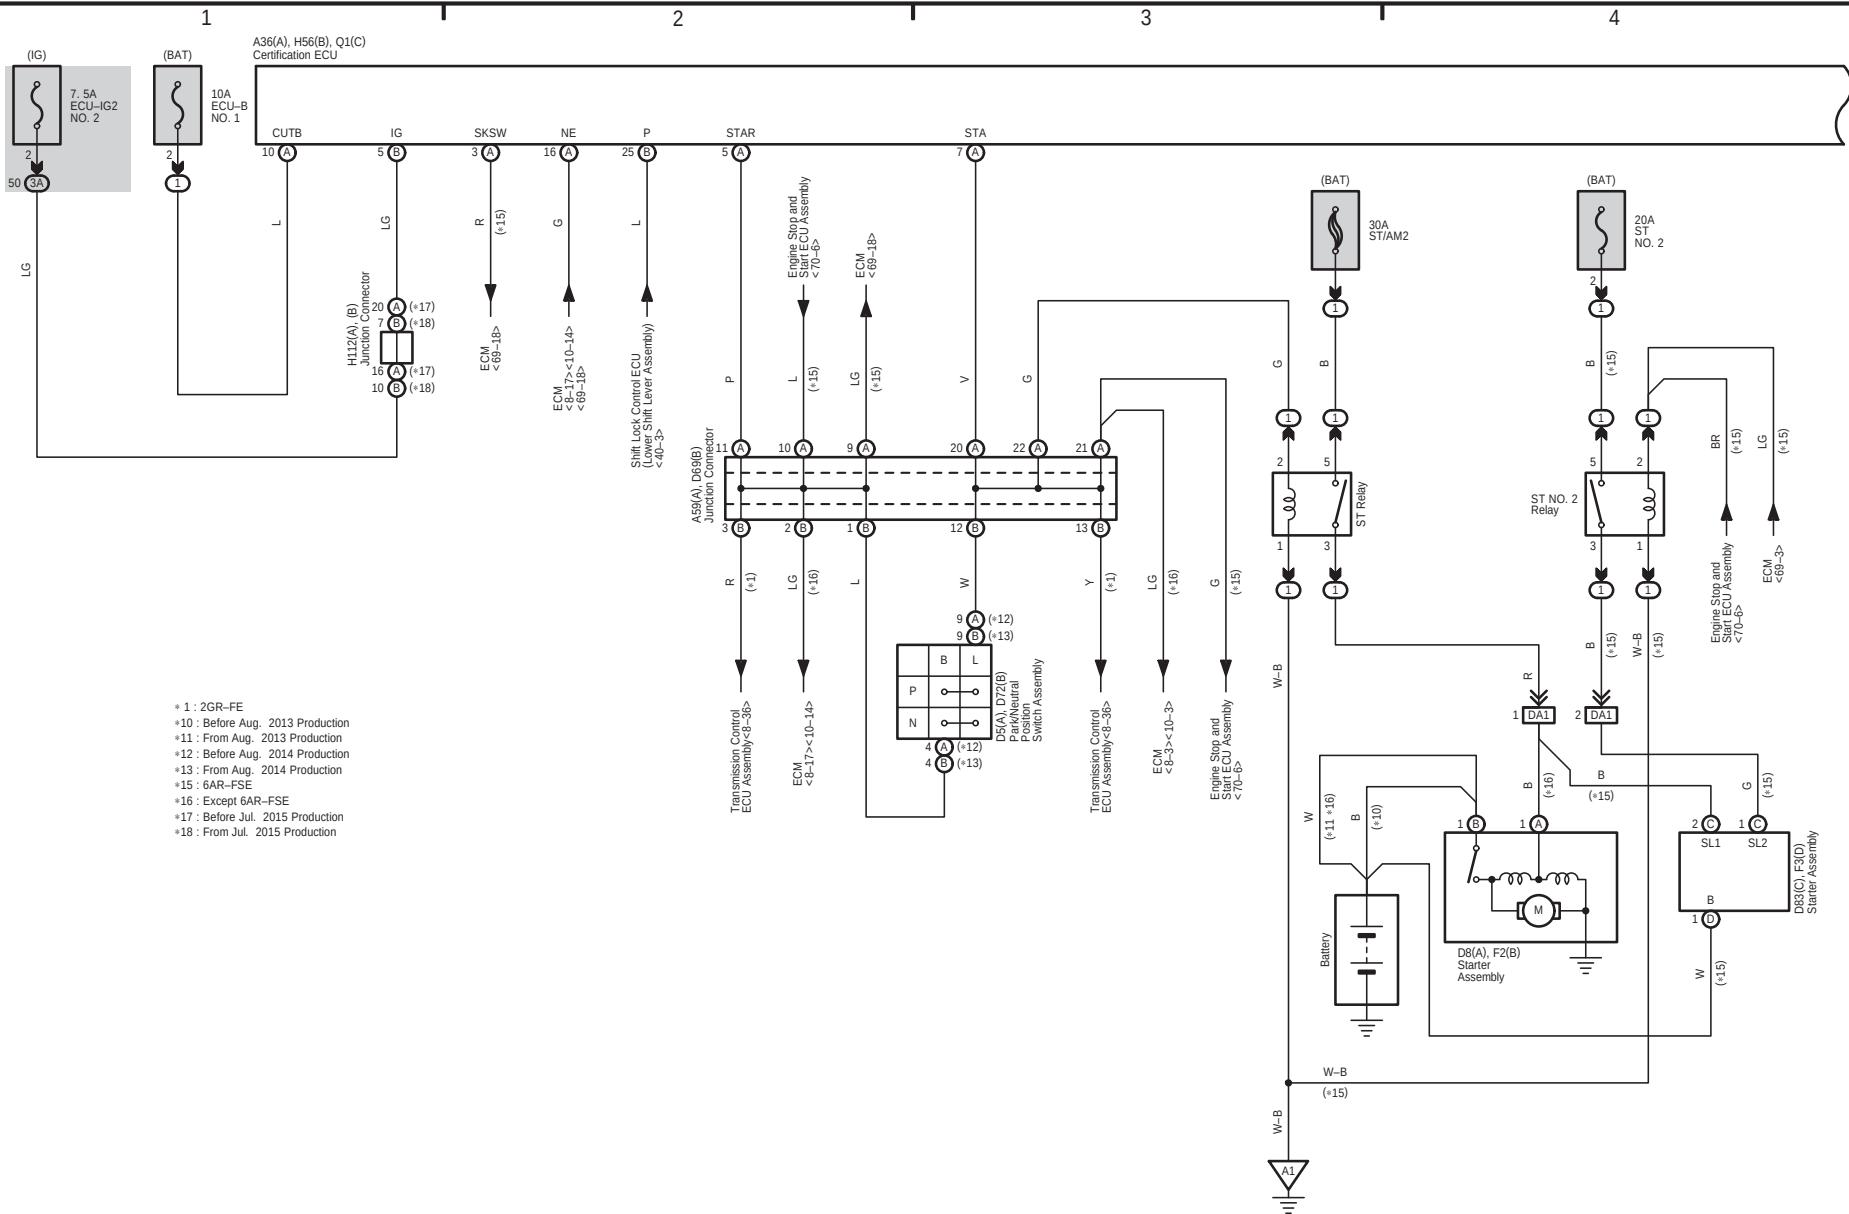


LEXUS ES200/ES250/ES350 (EM2822E)

Entry & Start System (LHD), Immobiliser System (LHD),
Starting (LHD), Steering Lock (LHD) and Wireless Door Lock Control (LHD)

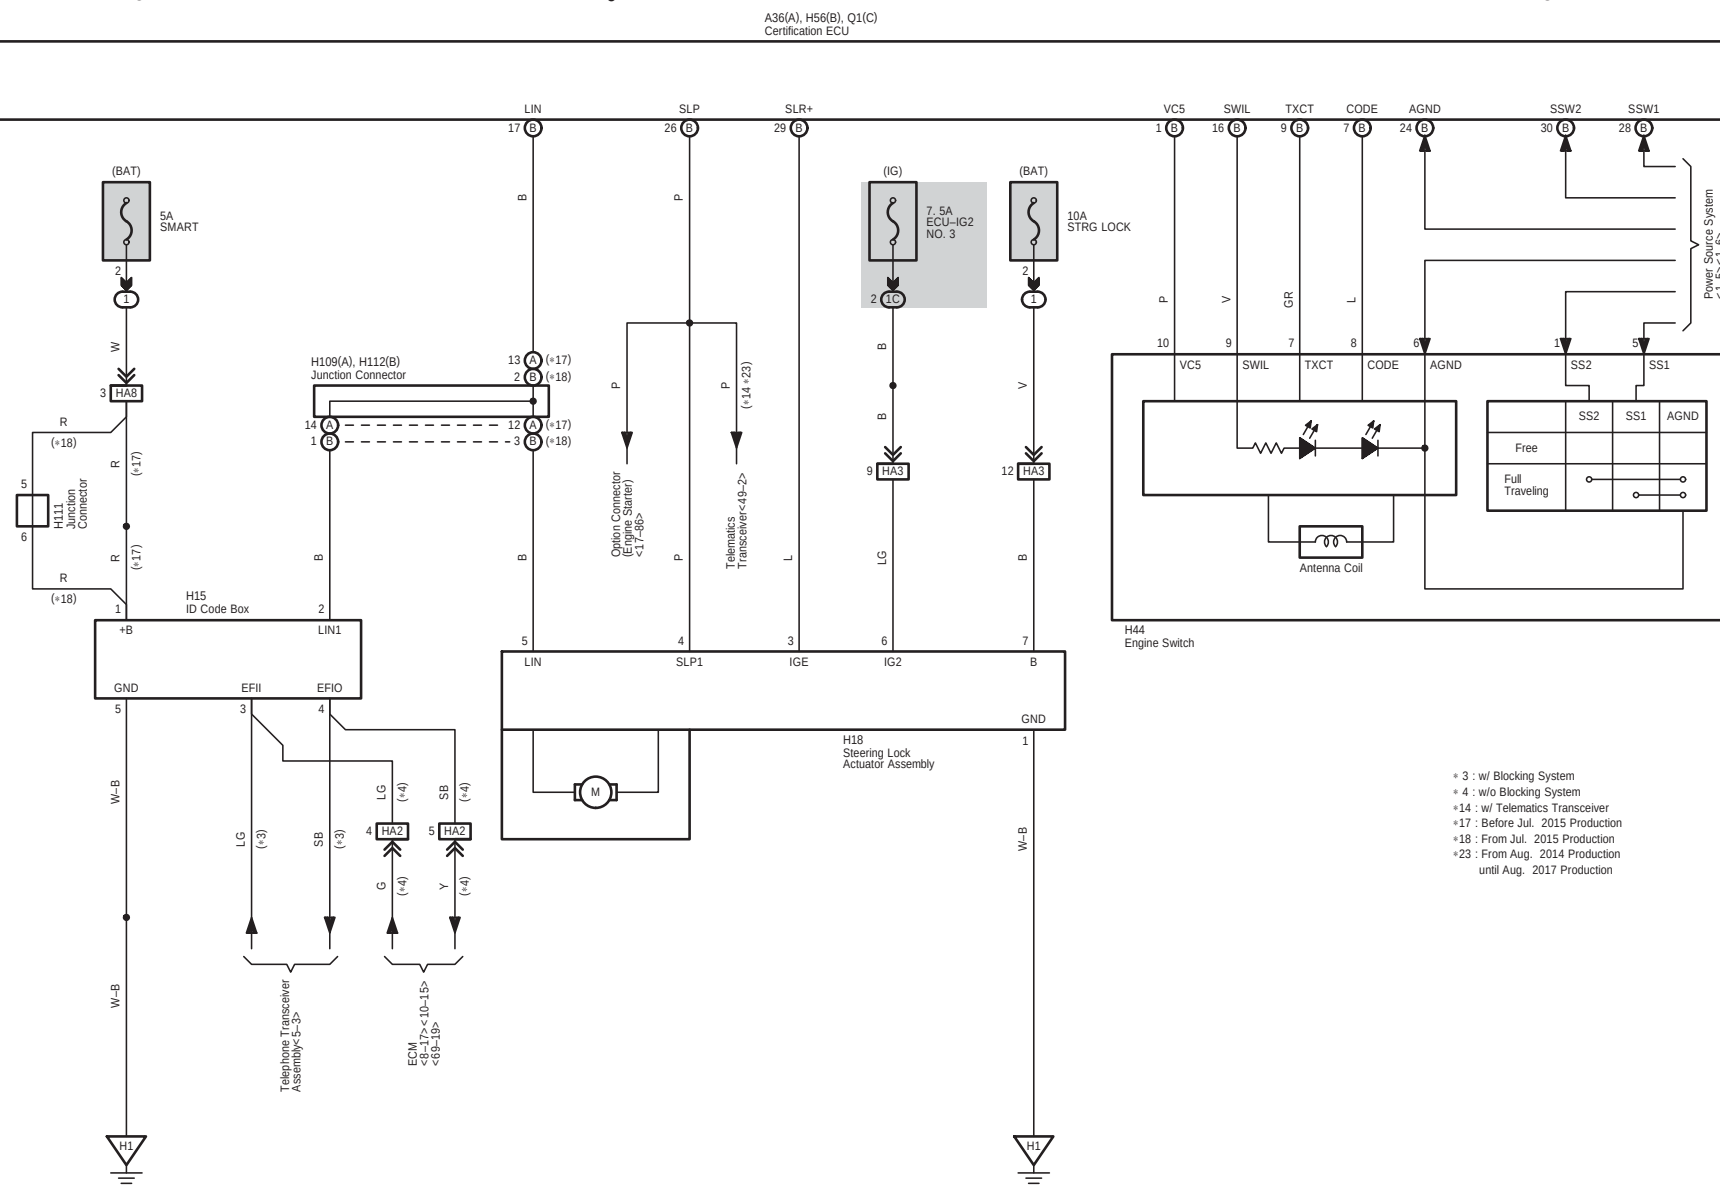

- * 3 : w/ Blocking System
- * 4 : w/o Blocking System
- *14 : w/ Telematics Transceiver
- *17 : Before Jul. 2015 Production
- *18 : From Jul. 2015 Production
- *23 : From Aug. 2014 Production until Aug. 2017 Production

Entry & Start System (LHD), Immobiliser System (LHD),
Starting (LHD), Steering Lock (LHD) and Wireless Door Lock Control (LHD)

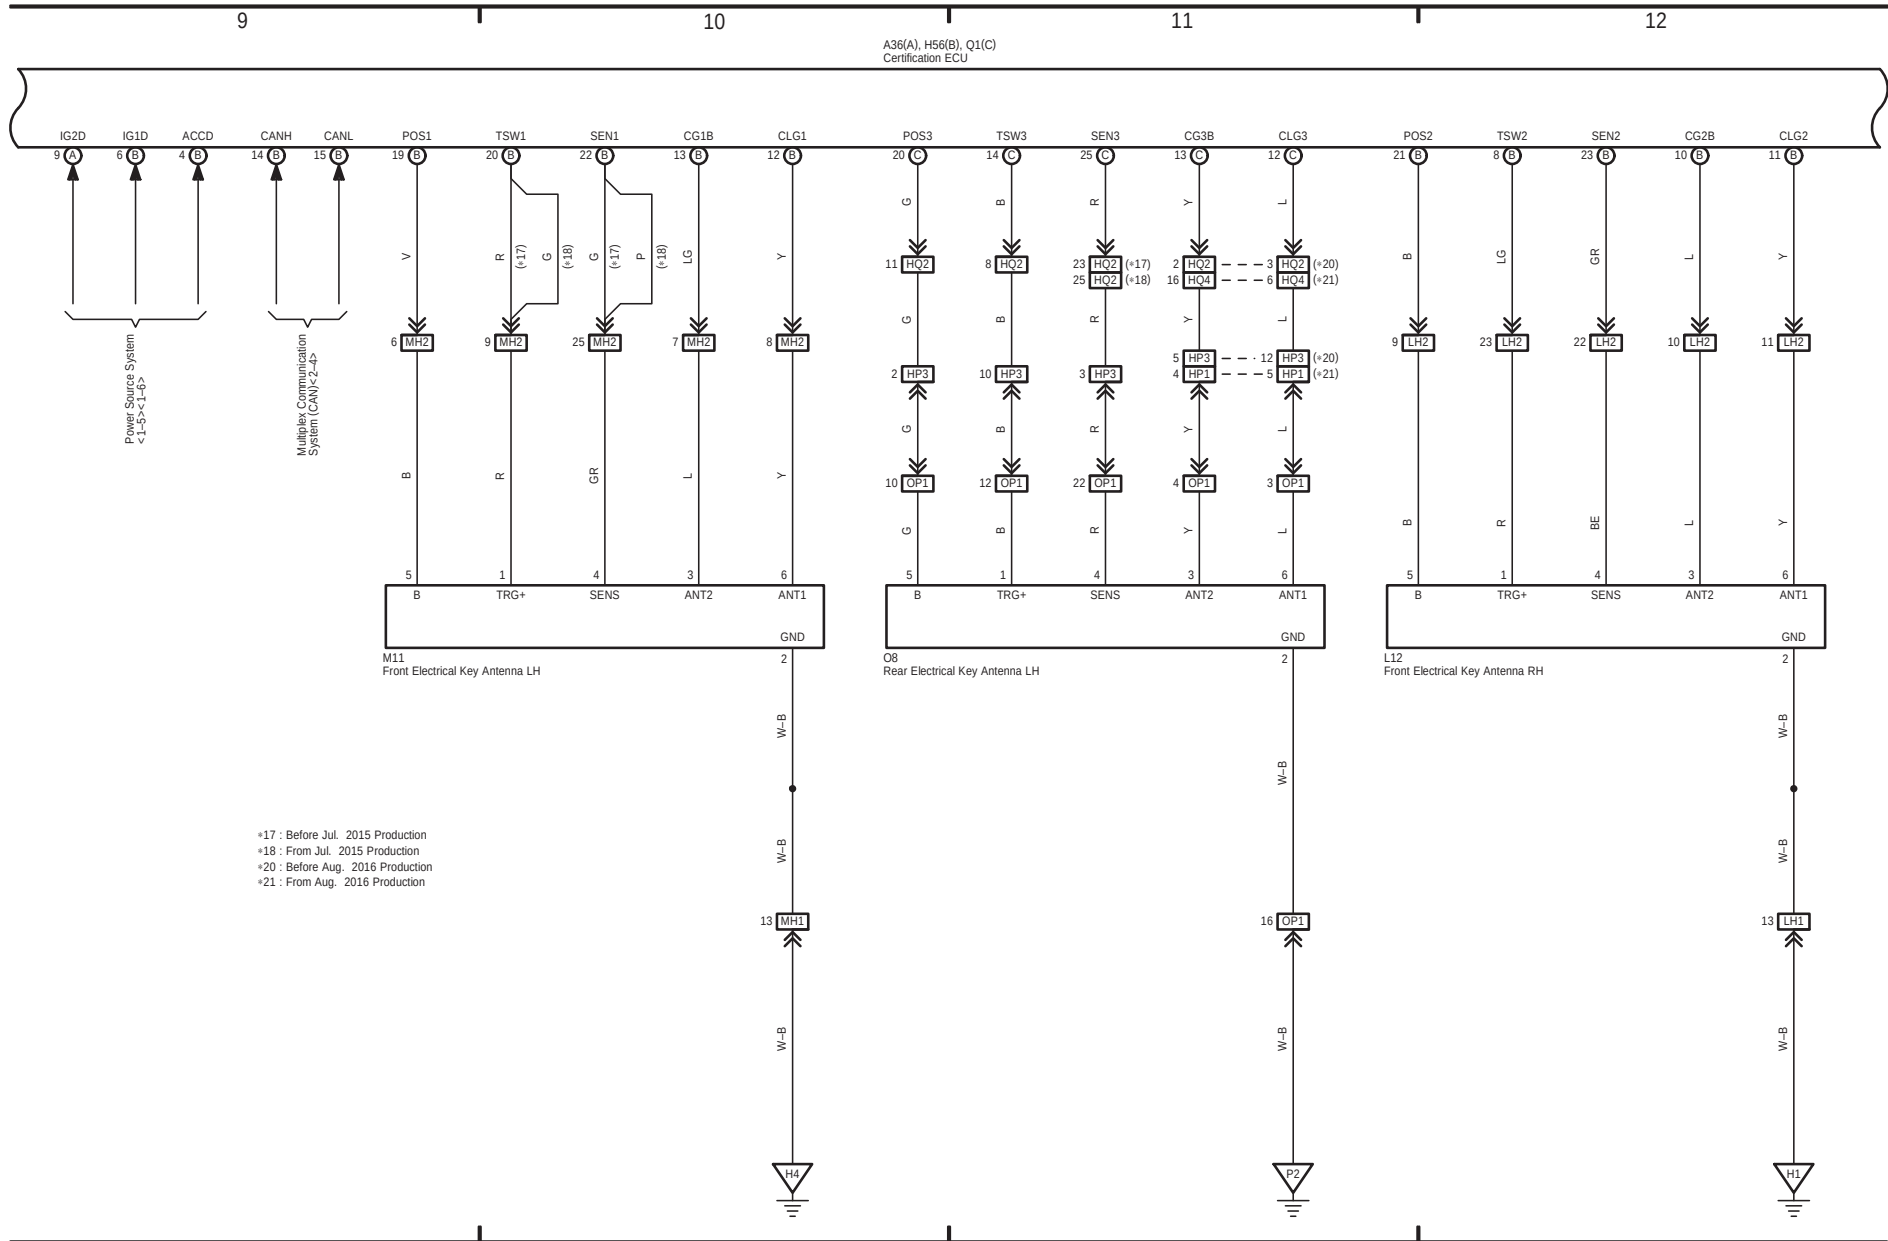

A36(A), H56(B), Q1(C)
Certification ECU

Pin 13: POS4 (22) to NO1 (10) via P; NO1 (10) to B (5) via G; B (5) to N8 (Rear Electrical Key Antenna RH).

Pin 14: TSW4 (16) to NO1 (12) via P; NO1 (12) to TRG+ (1) via B; TRG+ (1) to N8.

Pin 15: SEN4 (26) to NO1 (22) via V; NO1 (22) to SENS (4) via R; SENS (4) to N8.

Pin 16: CG4B (4) to NO1 (6) via Y; NO1 (6) to ANT2 (3) via Y; ANT2 (3) to N8.

Pin 17: CLG4 (3) to NO1 (7) via L; NO1 (7) to ANT1 (6) via L; ANT1 (6) to N8.

Pin 18: CG5B (2) to W (3) via W; W (3) to CLGB (3) and ANTE5 (1) via W-B; CLGB (3) and ANTE5 (1) to H35 (No. 1 Indoor Electrical Key Antenna Assembly (Front Floor)).

Pin 19: CLG5 (3) to R (3) via R; R (3) to CLGB (3) and ANTE6 (1) via W-B; CLGB (3) and ANTE6 (1) to P6 (No. 1 Indoor Electrical Key Antenna Assembly (Rear Floor)).

Pin 20: CG6B (10) to HQ2 (25) via B; HQ2 (25) to HP3 (11) via B; HP3 (11) to CLGB (3) and ANTE7 (1) via W-B; CLGB (3) and ANTE7 (1) to Q25 (No. 1 Indoor Electrical Key Antenna Assembly (Inside Luggage Compartment)).

Pin 21: CLG6 (11) to HQ2 (22) via W; HQ2 (22) to HP3 (4) via W; HP3 (4) to CLGB (3) and ANTE7 (1) via W-B; CLGB (3) and ANTE7 (1) to Q25.

Pin 22: CG7B (8) to W (6) via W; W (6) to CLGB (3) and ANTE8 (1) via W-B; CLGB (3) and ANTE8 (1) to U10 (Rear Electrical Key Antenna).

Pin 23: CLG7 (5) to R (5) via R; R (5) to CLGB (3) and ANTE8 (1) via W-B; CLGB (3) and ANTE8 (1) to U10.

Pin 24: CG8 (2) to UO1 (14) via V; UO1 (14) to CLGB (3) and ANTE8 (1) via W-B; CLGB (3) and ANTE8 (1) to U10.

Pin 25: CG8B (1) to UO1 (15) via P; UO1 (15) to CLGB (3) and ANTE8 (1) via W-B; CLGB (3) and ANTE8 (1) to U10.

Pin 26: RCO (5) to HQ1 (3) via G; HQ1 (3) to HP3 (6) via G; HP3 (6) to CLGB (3) and ANTE8 (1) via W-B; CLGB (3) and ANTE8 (1) to U10.

Pin 27: RDAM (17) to HQ1 (4) via Y; HQ1 (4) to HP3 (13) via Y; HP3 (13) to CLGB (3) and ANTE8 (1) via W-B; CLGB (3) and ANTE8 (1) to U10.


Pin 28: CSEL (6) to HQ1 (5) via R; HQ1 (5) to HP3 (7) via R; HP3 (7) to CLGB (3) and ANTE8 (1) via W-B; CLGB (3) and ANTE8 (1) to U10.

Pin 29: P29(B) Tire Pressure Warning ECU and Receiver (Door Control & Tire Pressure Monitoring System Receiver Assembly) to P30 (Door Control Receiver) via W-B (-6) and W-B (-7).

Legend:

- * 6 : w/ Tire Pressure Warning System
- * 7 : w/o Tire Pressure Warning System
- *17 : Before Jul. 2015 Production
- *18 : From Jul. 2015 Production
- *20 : Before Aug. 2016 Production
- *21 : From Aug. 2016 Production
- *22 : From Jul. 2015 Production until Aug. 2016 Production

- * 6 : w/ Tire Pressure Warning System
- * 7 : w/o Tire Pressure Warning System
- *17 : Before Jul. 2015 Production
- *18 : From Jul. 2015 Production
- *20 : Before Aug. 2016 Production
- *21 : From Aug. 2016 Production
- *22 : From Jul. 2015 Production
until Aug. 2016 Production

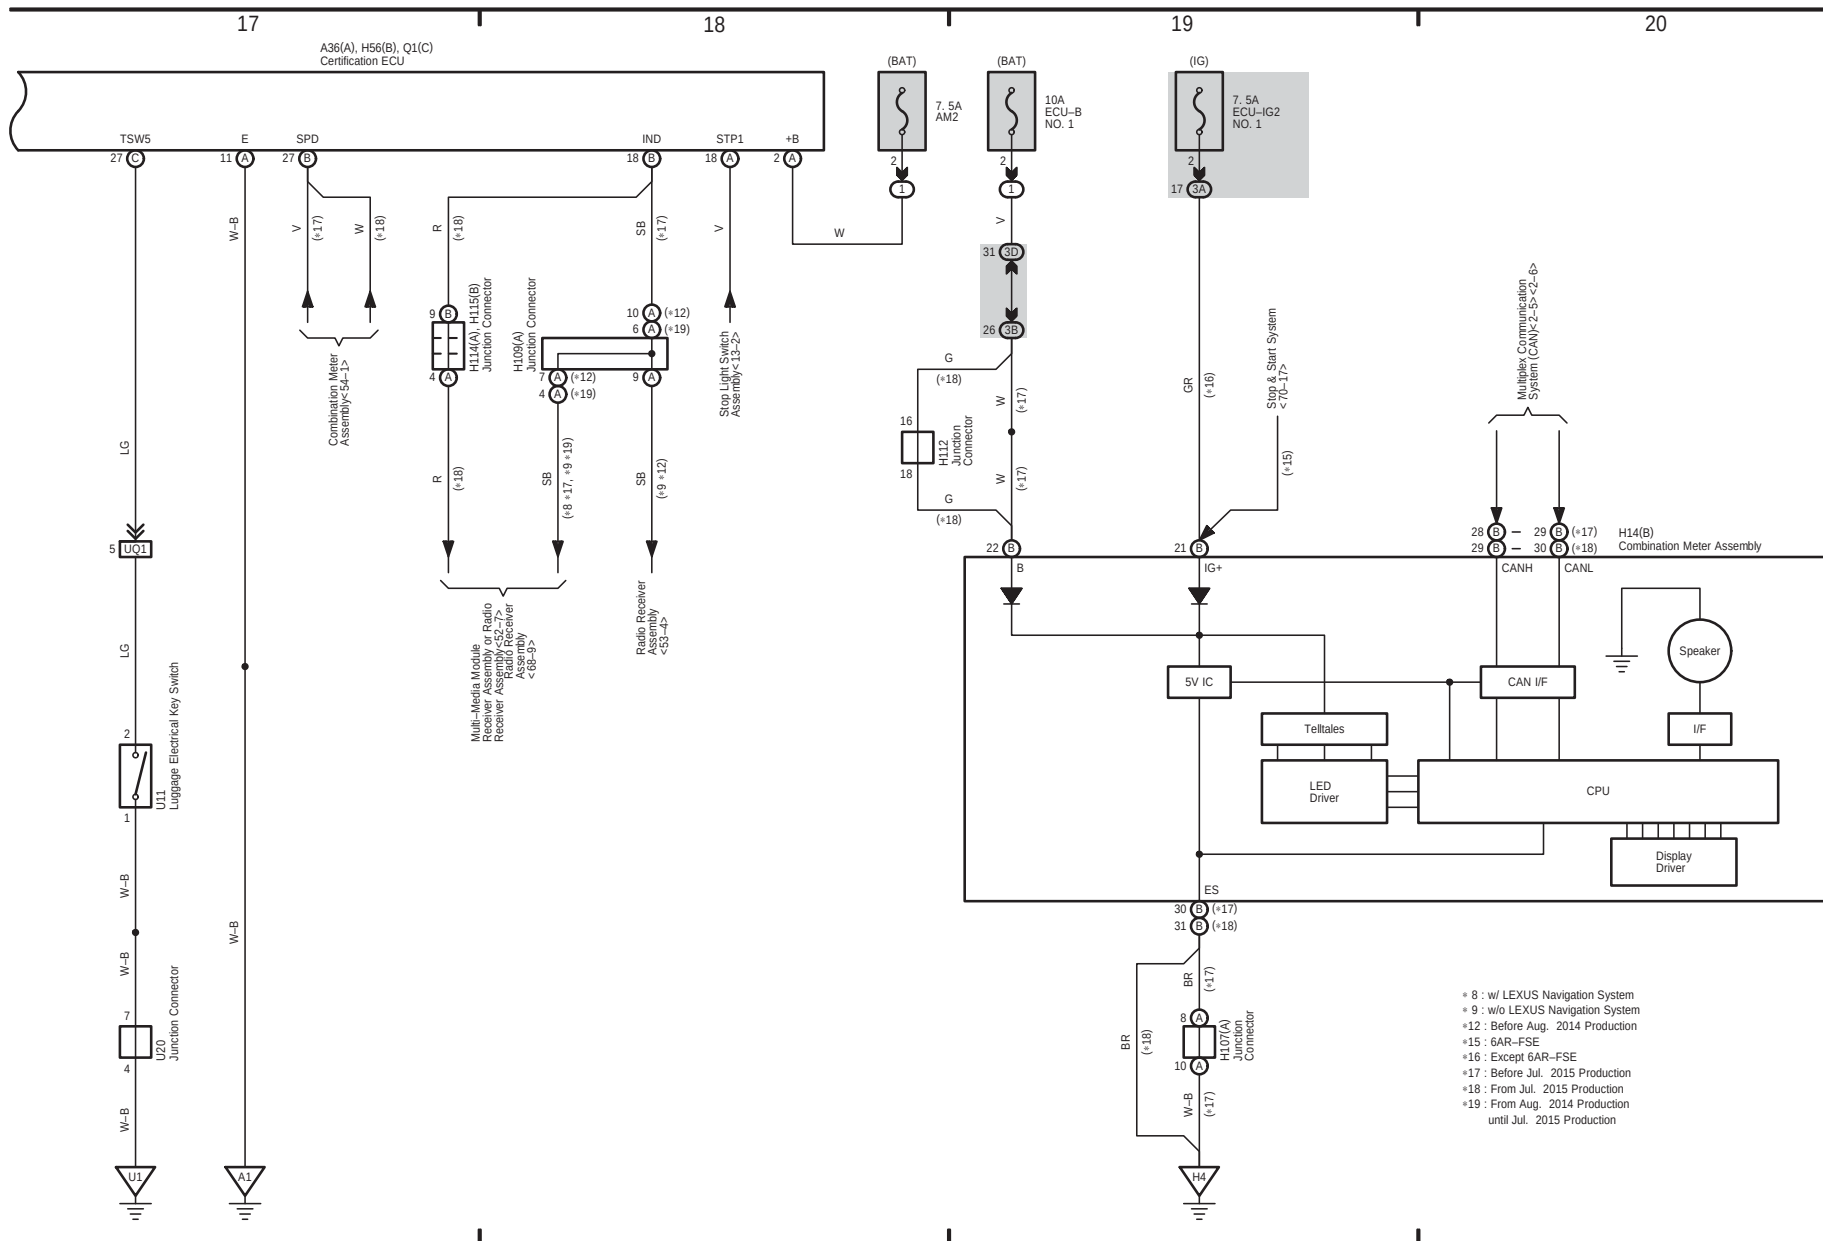

- * 8 : w/ LEXUS Navigation System
- * 9 : w/o LEXUS Navigation System
- * 12 : Before Aug. 2014 Production
- * 15 : 6AR-FSE
- * 16 : Except 6AR-FSE
- * 17 : Before Jul. 2015 Production
- * 18 : From Jul. 2015 Production
- * 19 : From Aug. 2014 Production
until Jul. 2015 Production