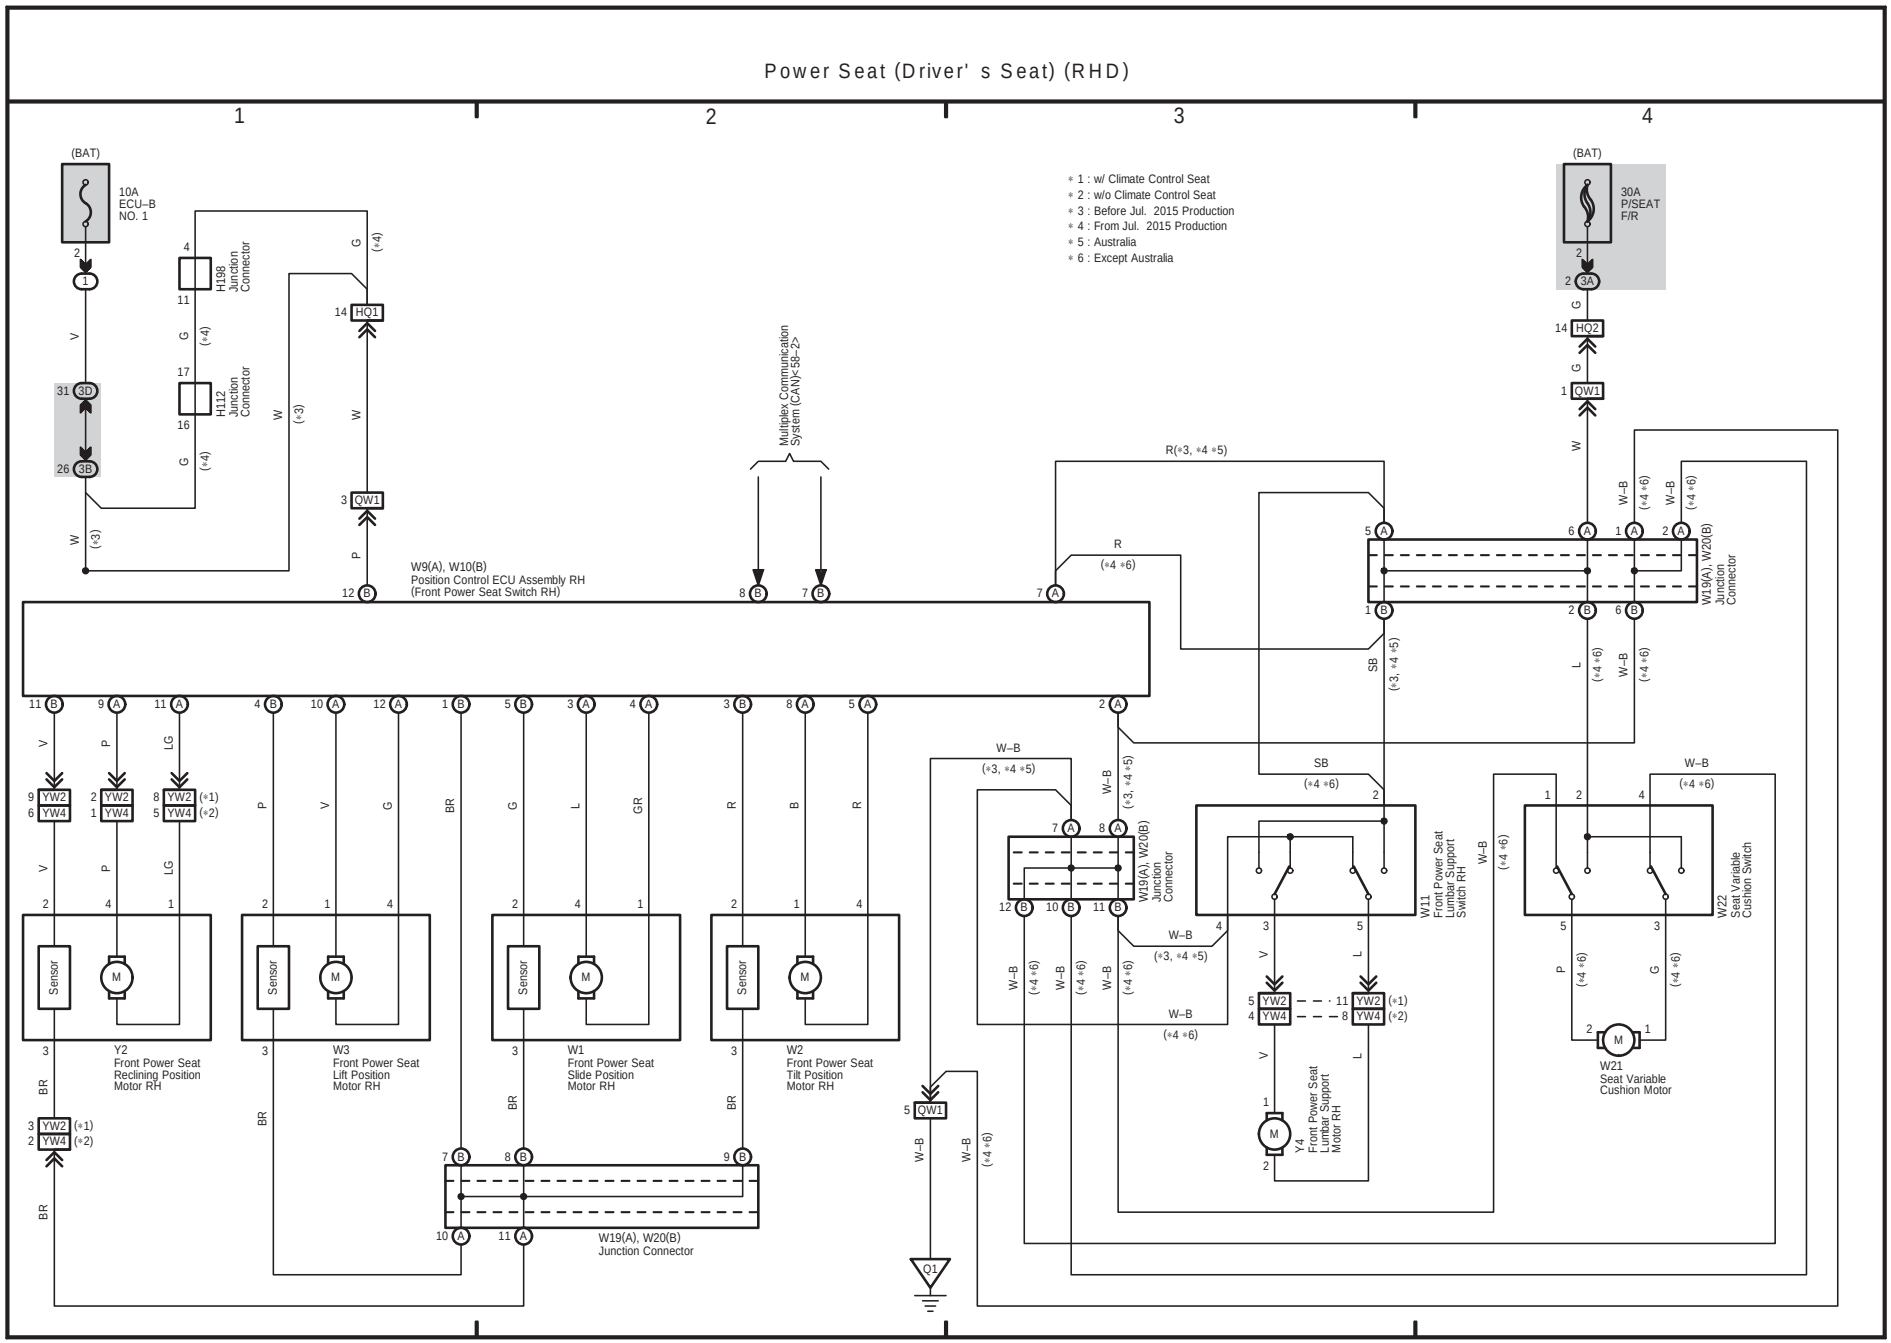
Power Seat (Driver' s Seat) (RHD)
1
2
3
4
(BAT)
10A
ECU–B
NO. 1
(BAT)
30A
P/SEAT
F/R
∗ 1 : w/ Climate Control Seat
∗ 2 : w/o Climate Control Seat
∗ 3 : Before Jul. 2015 Production
∗ 4 : From Jul. 2015 Production
∗ 5 : Australia
∗ 6 : Except Australia
Multiplex Communication System (CAN)<58–2>
W9(A), W10(B)
Position Control ECU Assembly RH
(Front Power Seat Switch RH)
W19(A), W20(B)
Junction Connector
W19(A), W20(B)
Junction Connector
W19(A), W20(B)
Junction Connector
Y2
Front Power Seat
Reclining Position
Motor RH
W3
Front Power Seat
Lift Position
Motor RH
W1
Front Power Seat
Slide Position
Motor RH
W2
Front Power Seat
Tilt Position
Motor RH
W11
Front Power Seat
Lumbar Support
Switch RH
Y4
Front Power Seat
Lumbar Support
Motor RH
W22
Seat Variable
Cushion Switch
W21
Seat Variable
Cushion Motor
Q1