



Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

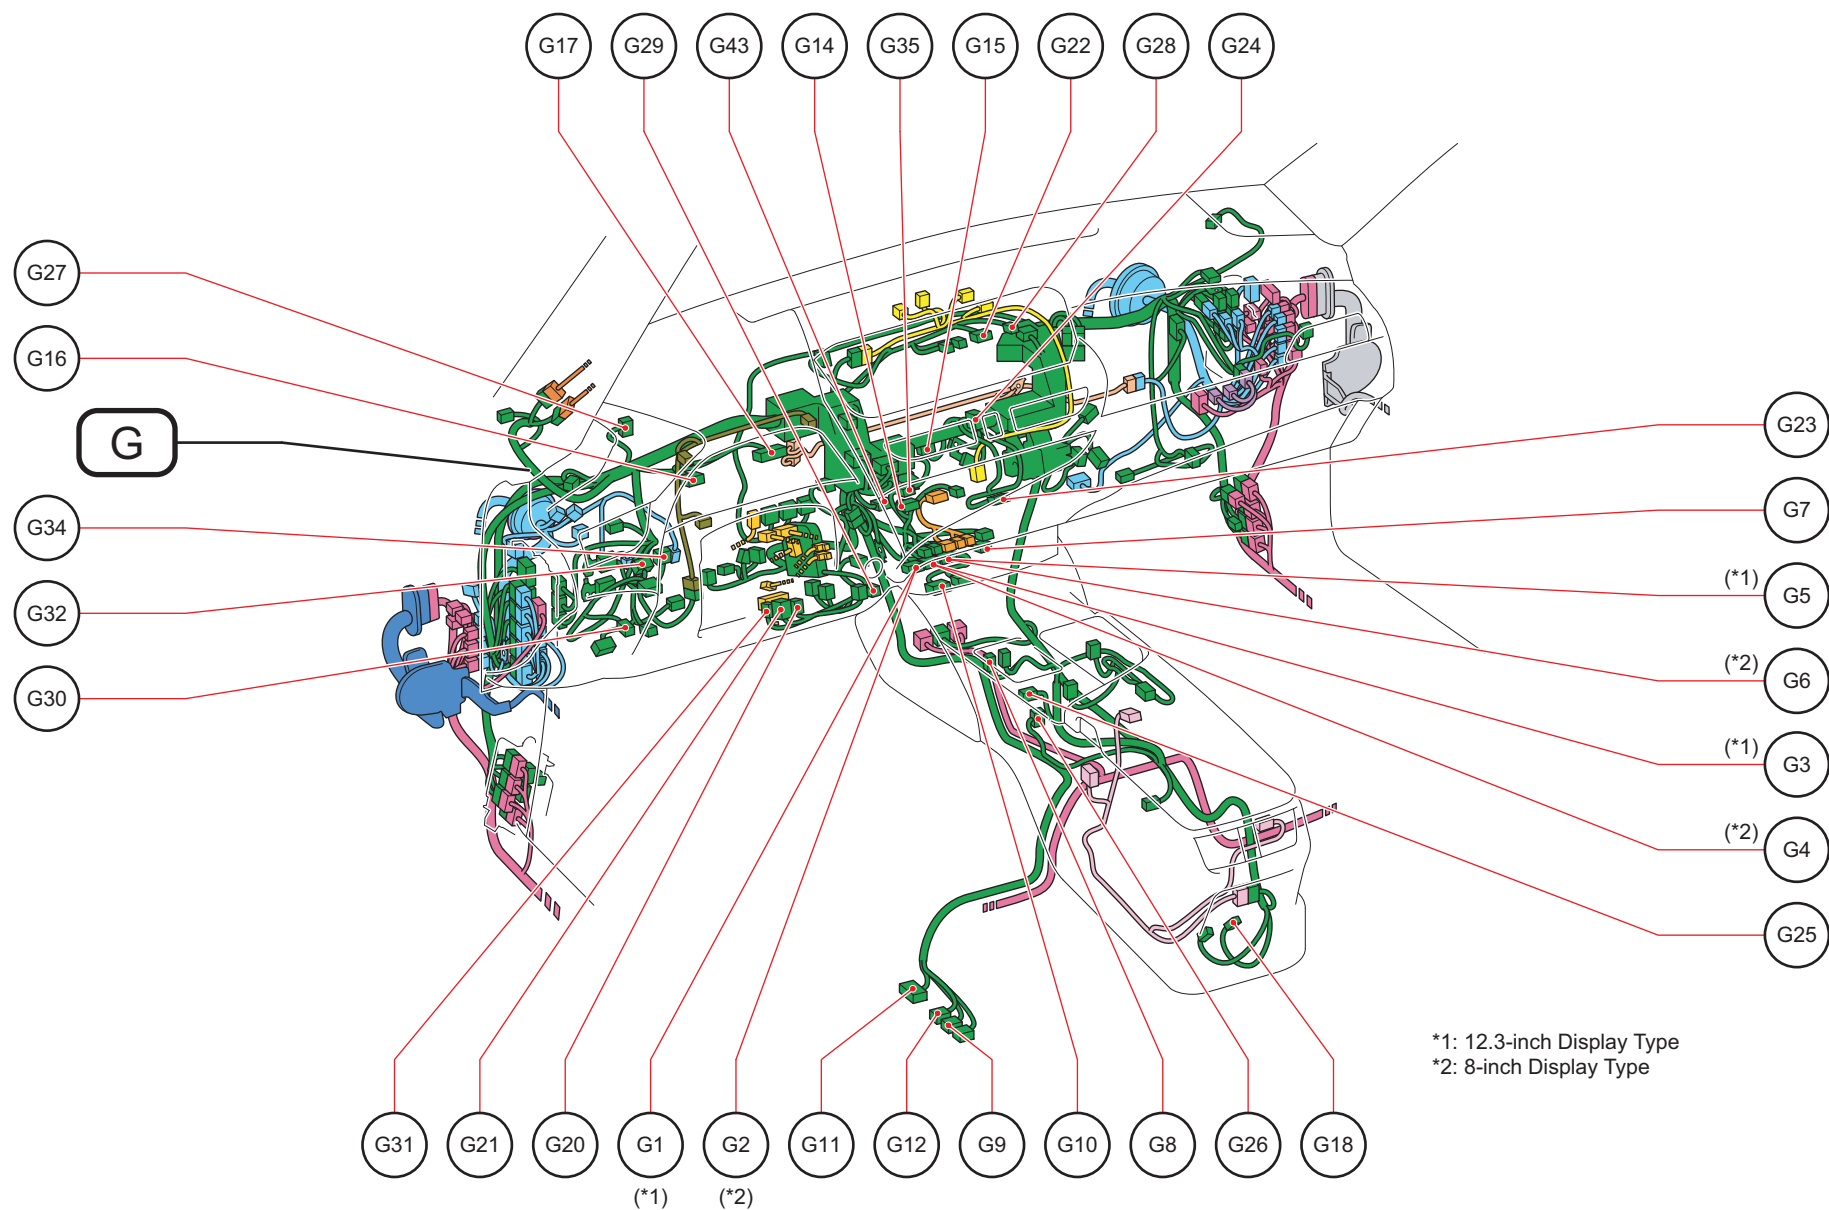

- G 1 Radio Receiver Assembly
- G 2 Radio Receiver Assembly
- G 3 Radio Receiver Assembly
- G 4 Radio Receiver Assembly
- G 5 Radio Receiver Assembly
- G 6 Radio Receiver Assembly
- G 7 Radio Receiver Assembly
- G 8 No. 1 Stereo Jack Adapter Assembly
- G 9 Stereo Component Amplifier Assembly
- G 10 Telematics Transceiver
- G 11 Stereo Component Amplifier Assembly
- G 12 Stereo Component Amplifier Assembly
- G 14 Navigation ECU
- G 15 Stereo Component Equalizer Assembly
- G 16 Combination Meter Assembly
- G 17 Combination Meter Assembly
- G 18 USB Charger Socket
- G 20 Spiral Cable Sub-Assembly
- G 21 Spiral Cable Sub-Assembly
- G 22 Multi-Display Assembly
- G 23 Air Conditioning Control Assembly
- G 24 Hazard Warning Signal Switch Assembly
- G 25 Shift Lock Solenoid (Shift Lock Control Unit Assembly)
- G 26 Transmission Control Switch (Shift Lock Control Unit Assembly)
- G 27 Meter Mirror Sub-Assembly
- G 28 Multi-Display Assembly
- G 29 Brake Warning Switch Assembly
- G 30 Trunk and Fuel Switch Assembly
- G 31 Tilt and Telescopic Switch
- G 32 No. 2 Combination Switch Assembly
- G 34 Stop Light Control ECU Assembly
- G 35 Refreshing Seat Switch
- G 43 Door Control Battery


Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

G1
Black

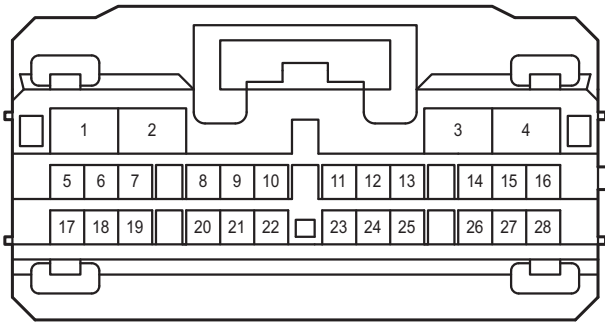


90980-12760

G2
Black

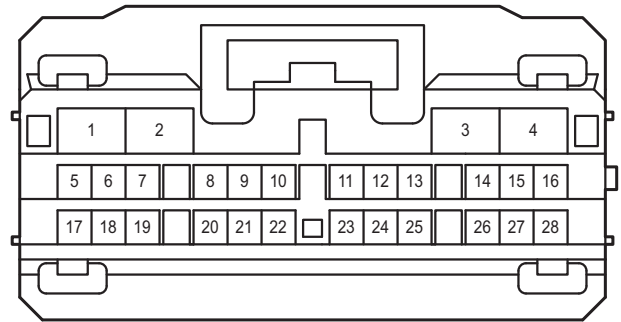


90980-12760

G3
White

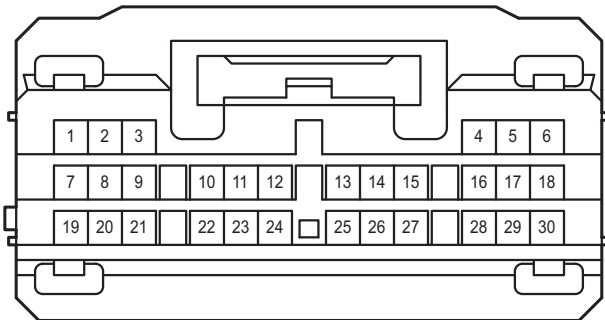


90980-12761

G4
White

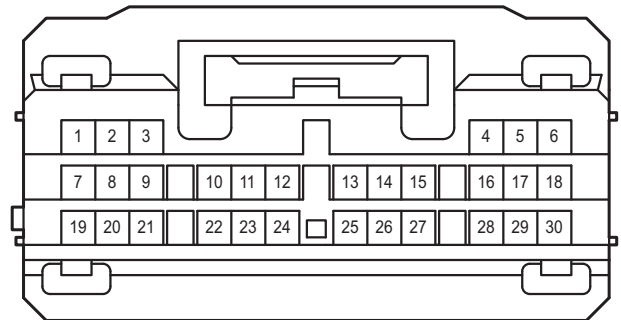


90980-12761

G5
Gray

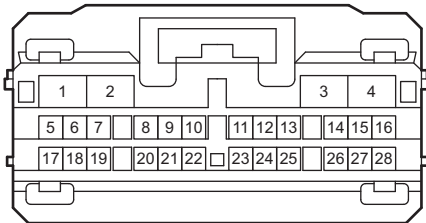


82824-52380

G6
Gray

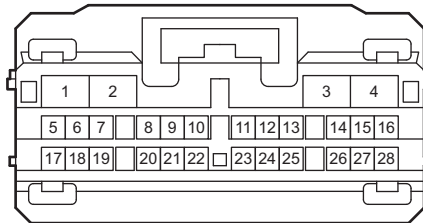

82824-52380

G7
Black

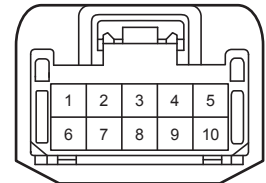


90980-12C39

G8
White



90980-12910


G9
White

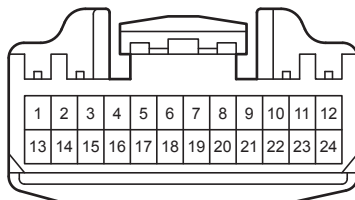

90980-12905


Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

G10
White

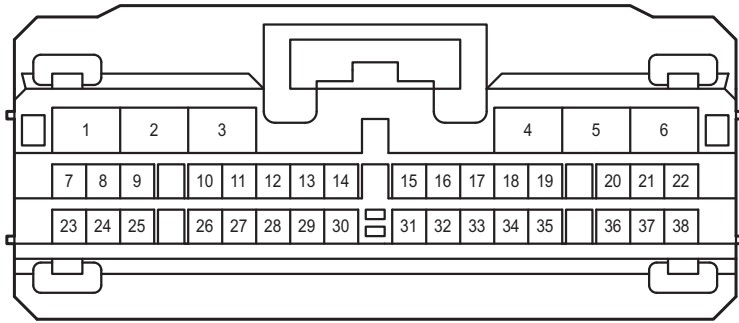


90980-12817

G11
White




90980-12979

G12
White

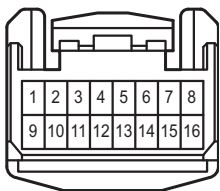


90980-12553

G14
Black

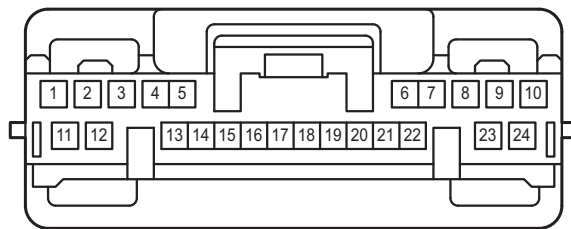


90980-12912

G15
White

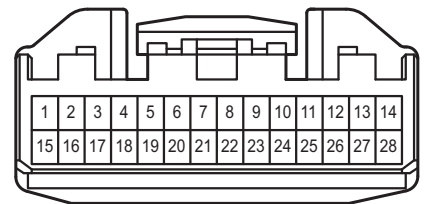


90980-12555

G16
Black

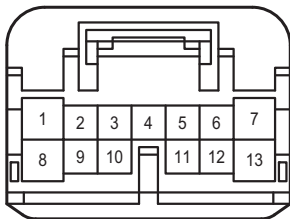


90980-12767

G17
Black

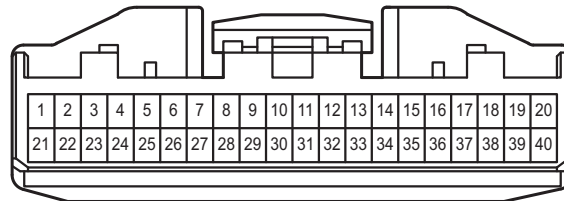


90980-12557

G18
Black




90980-12D25

G20
Black

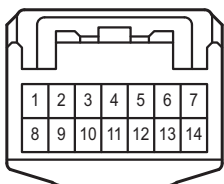


90980-12370

G21
Yellow

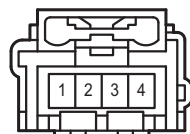


90980-12160

G22
Black

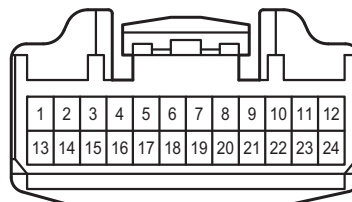


90980-12554

G23
Black

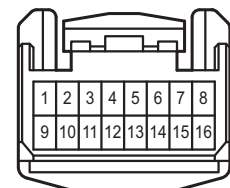


90980-12553

G24
Black

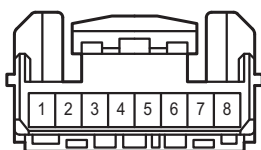


90980-12558

G25
White

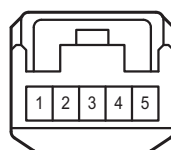

90980-12366


G26
White

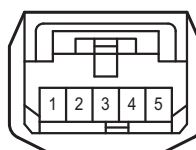

90980-12954


Position of Parts in Instrument Panel (LHD/2GR-FKS, 6AR-FSE, A25A-FKS)

G27
White

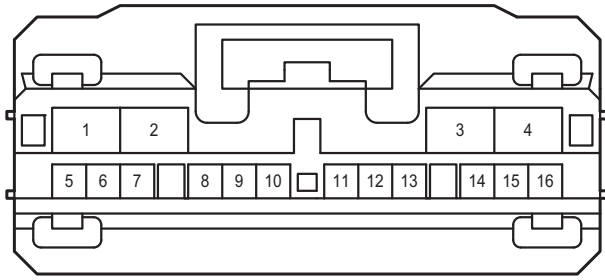


90980-12763

G28
Black

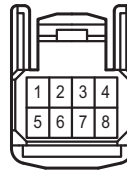


90980-12551

G29
Black

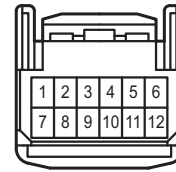


90980-12552

G30
White

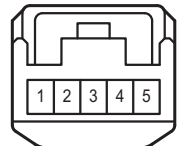


90980-12366

G31
Black

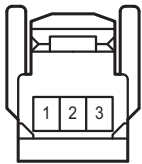


90980-12695

G32
Blue

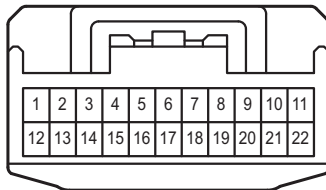


90980-12372

G34
Black




90980-10997

G35
Black

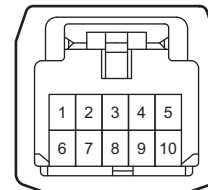

82824-78040

G43
Gray

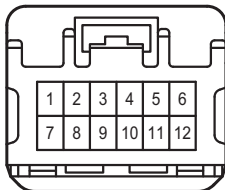

90980-12737