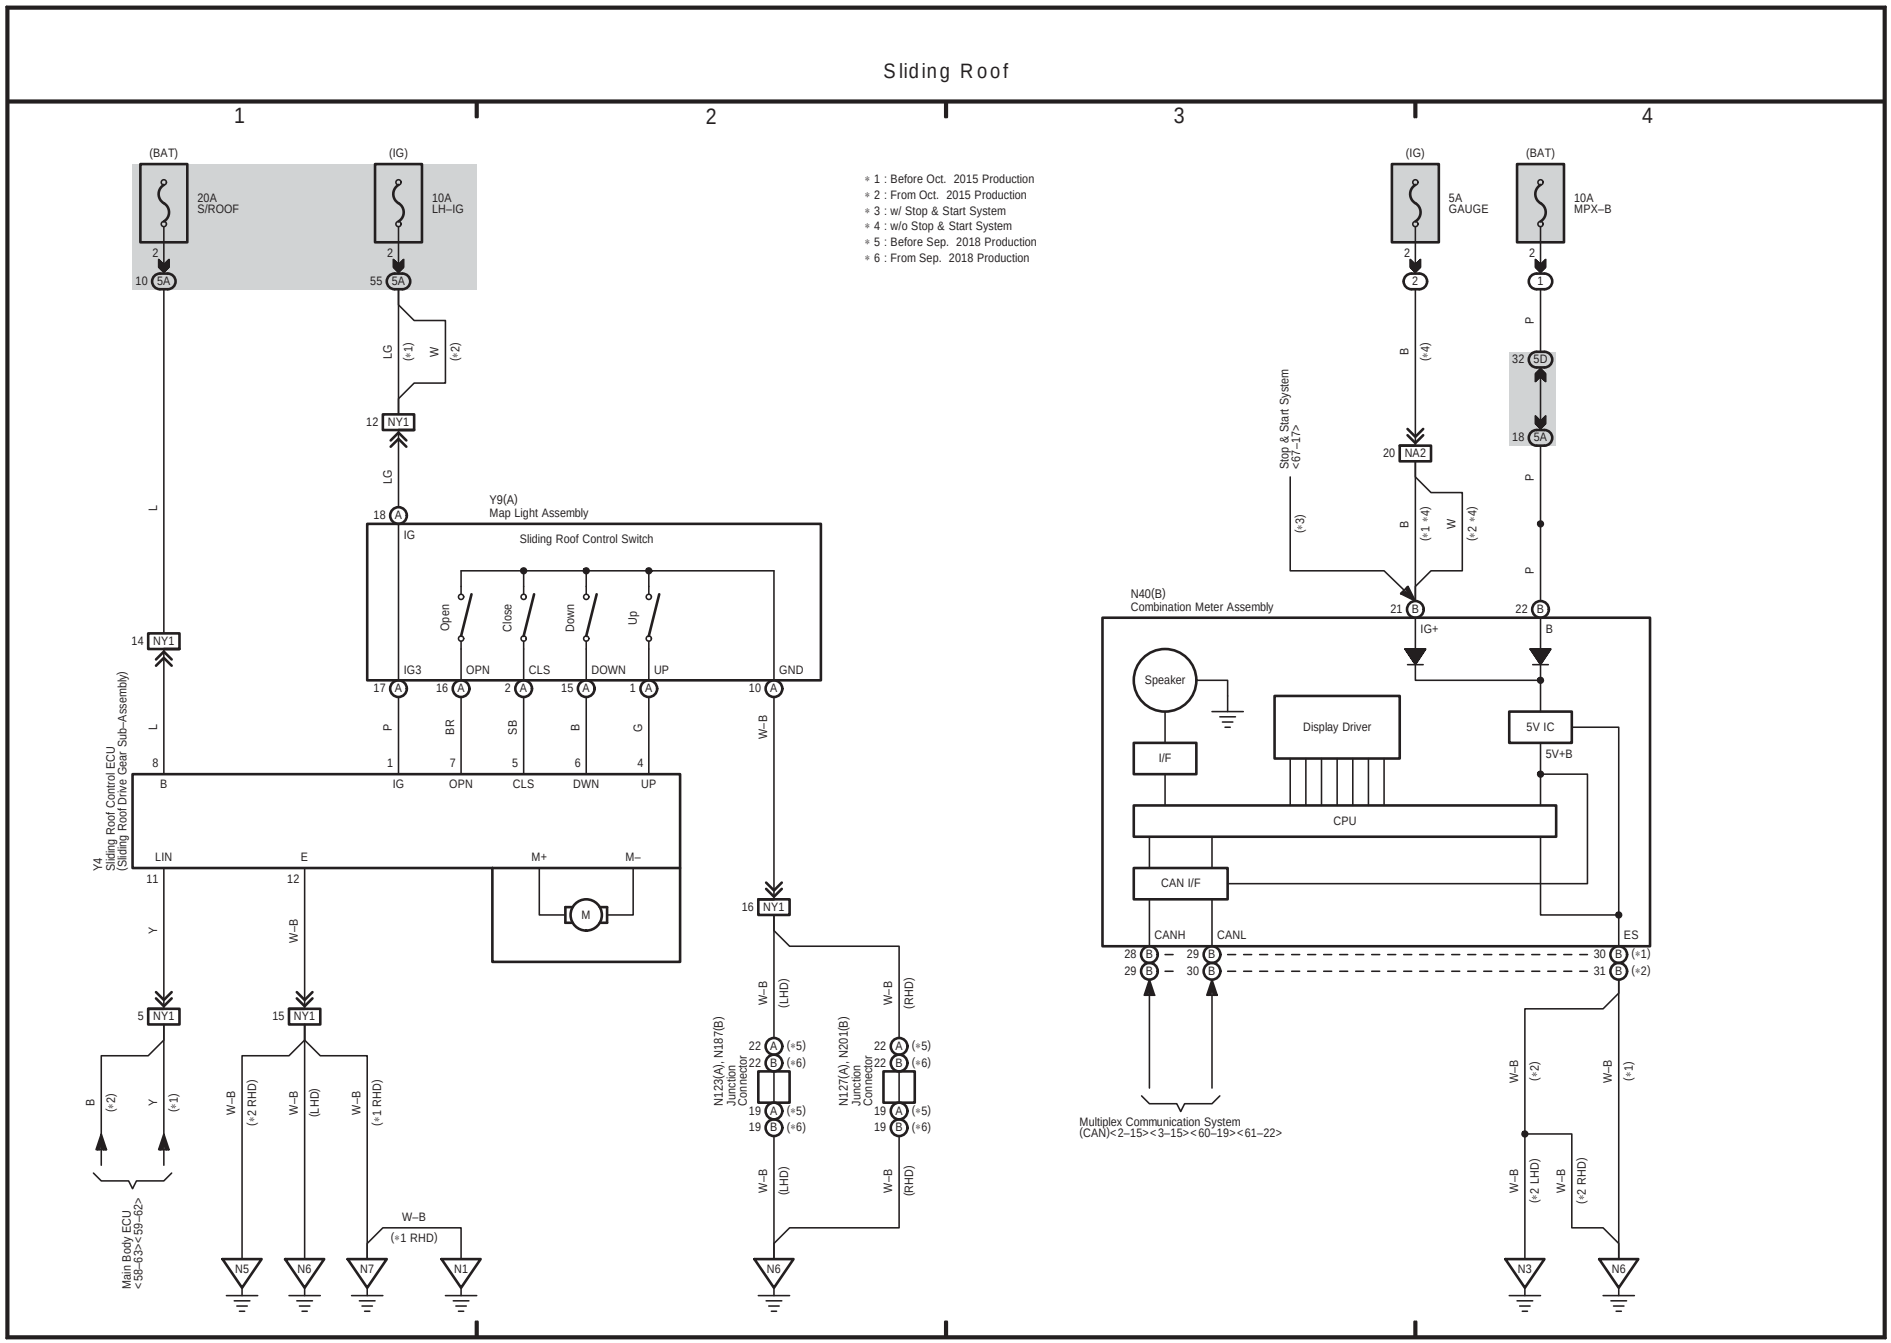
Sliding Roof
1
2
3
4
(BAT)
20A S/ROOF
(IG)
10A LH–IG
∗ 1 : Before Oct. 2015 Production
∗ 2 : From Oct. 2015 Production
∗ 3 : w/ Stop & Start System
∗ 4 : w/o Stop & Start System
∗ 5 : Before Sep. 2018 Production
∗ 6 : From Sep. 2018 Production
(IG)
5A GAUGE
(BAT)
10A MPX–B
Stop & Start System <67–17>
Y9(A) Map Light Assembly
Sliding Roof Control Switch
Open
Close
Down
Up
IG3
OPN
CLS
DOWN
UP
GND
Y4 Sliding Roof Control ECU (Sliding Roof Drive Gear Sub–Assembly)
LIN
E
M+
M–
N40(B) Combination Meter Assembly
IG+
B
Speaker
I/F
Display Driver
5V IC
5V+B
CPU
CAN I/F
CANH
CANL
ES
Multiplex Communication System (CAN)<2–15><3–15><60–19><61–22>
Main Body ECU <58–63><59–62>
N123(A), N187(B) Junction Connector
N127(A), N201(B) Junction Connector
W–B (∗1 RHD)
N5
N6
N7
N1
N3