
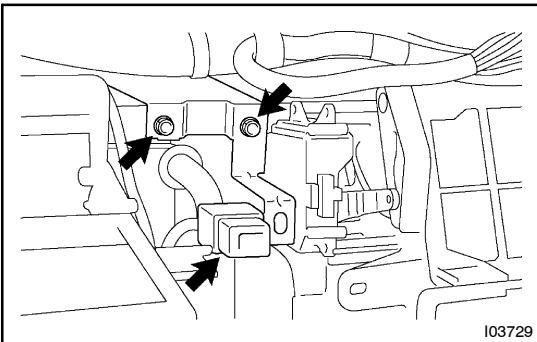


SERVOMOTOR REMOVAL


1. REMOVE AIR INLET SERVOMOTOR

- (a) Remove these parts:
- (1) Front door scuff plate on the passenger side
 - (2) Cowl side trim on the passenger side
 - (3) No. 2 under cover
 - (4) Glove compartment door
 - (5) Glove compartment panel
- (See page BO-91)

- (b) Disconnect the wire harness.

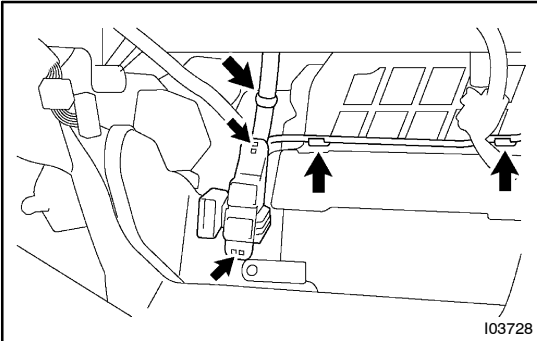


- (c) Remove the bracket.
- (1) Disconnect wire harness clamp.
 - (2) Remove the 2 bolts and bracket.

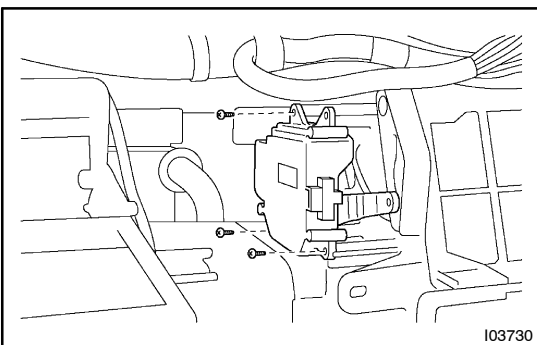

- (d) Remove the air inlet servomotor.
- (1) Disconnect the connector.
 - (2) Remove the 3 screws and servomotor.

**2. Driver Side:
REMOVE AIR MIX SERVOMOTOR**


- (a) Remove these parts:
- (1) No. 1 under cover
 - (2) No. 1 safety pad
(See page BO-91)

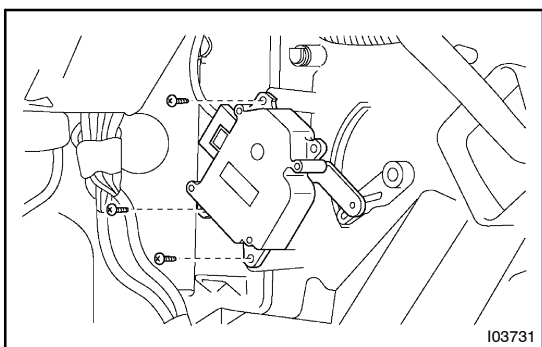

- (b) Remove the air mix servomotor.
- (1) Disconnect the connector.
 - (2) Remove the 3 screws and servomotor.

**3. LHD Passenger Side:
REMOVE AIR MIX SERVOMOTOR**

- (a) Remove heater radiator.
(See page AC-59)

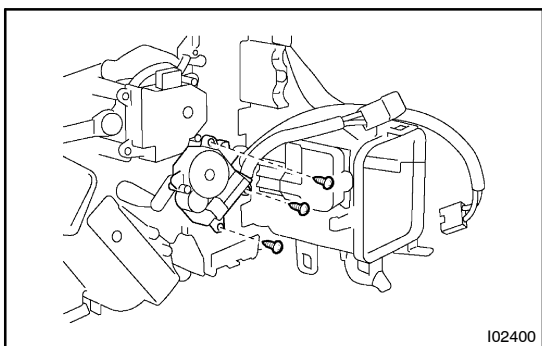


- (b) Remove the air mix servomotor.
- (1) Disconnect the connector.
 - (2) Remove the 3 screws and servomotor.

4. RHD Passenger Side: REMOVE AIR MIX SERVOMOTOR


(a) Remove these parts:

- (1) Front door scuff plate LH
- (2) Cowl side trim LH
- (3) No. 2 under cover
- (4) Glove compartment door
- (5) Glove compartment panel
(See page BO-91)

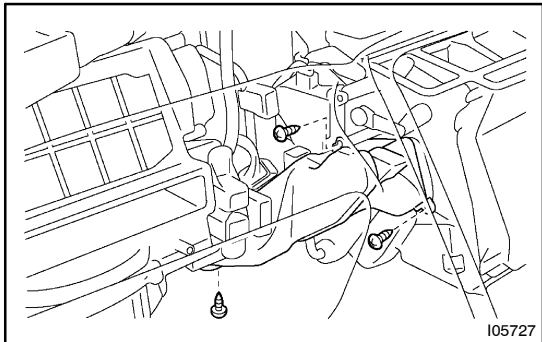

(b) Remove the air duct.

- (1) Disconnect the wire harness clamp.
- (2) Remove the 3 screws and air duct.

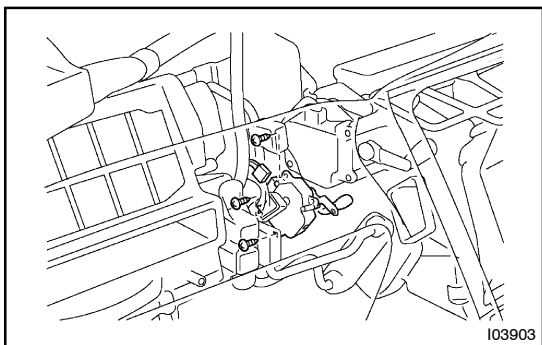


(c) Remove the air mix servomotor.

- (1) Disconnect the connector.
- (2) Remove the 3 screws and servomotor.

5. REMOVE AIR OUTLET SERVOMOTOR


(a) Remove these parts:

- (1) Front door scuff plate on the passenger side
- (2) Cowl side trim on the passenger side
- (3) No. 2 under cover
- (4) Glove compartment door
- (5) Glove compartment panel
(See page BO-91)

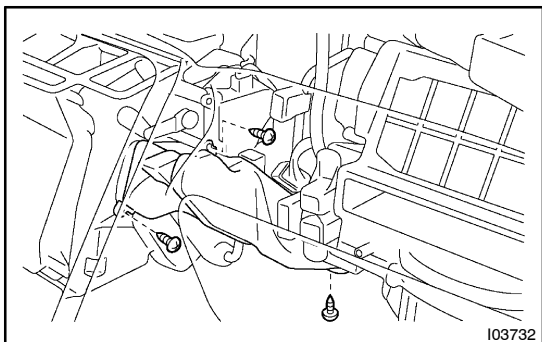

(b) Remove the air duct.

- (1) Remove the 3 screws and air duct.

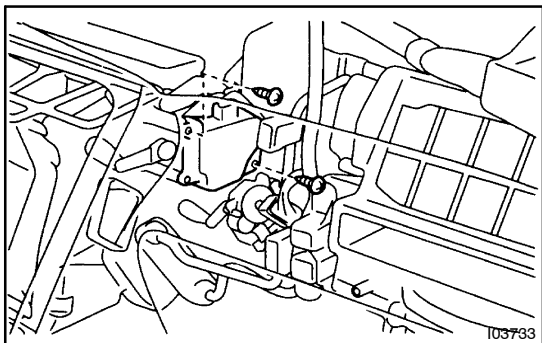

- (c) Remove air outlet servomotor.
- (1) Disconnect the connector.
 - (2) Remove the 2 screws and servomotor.