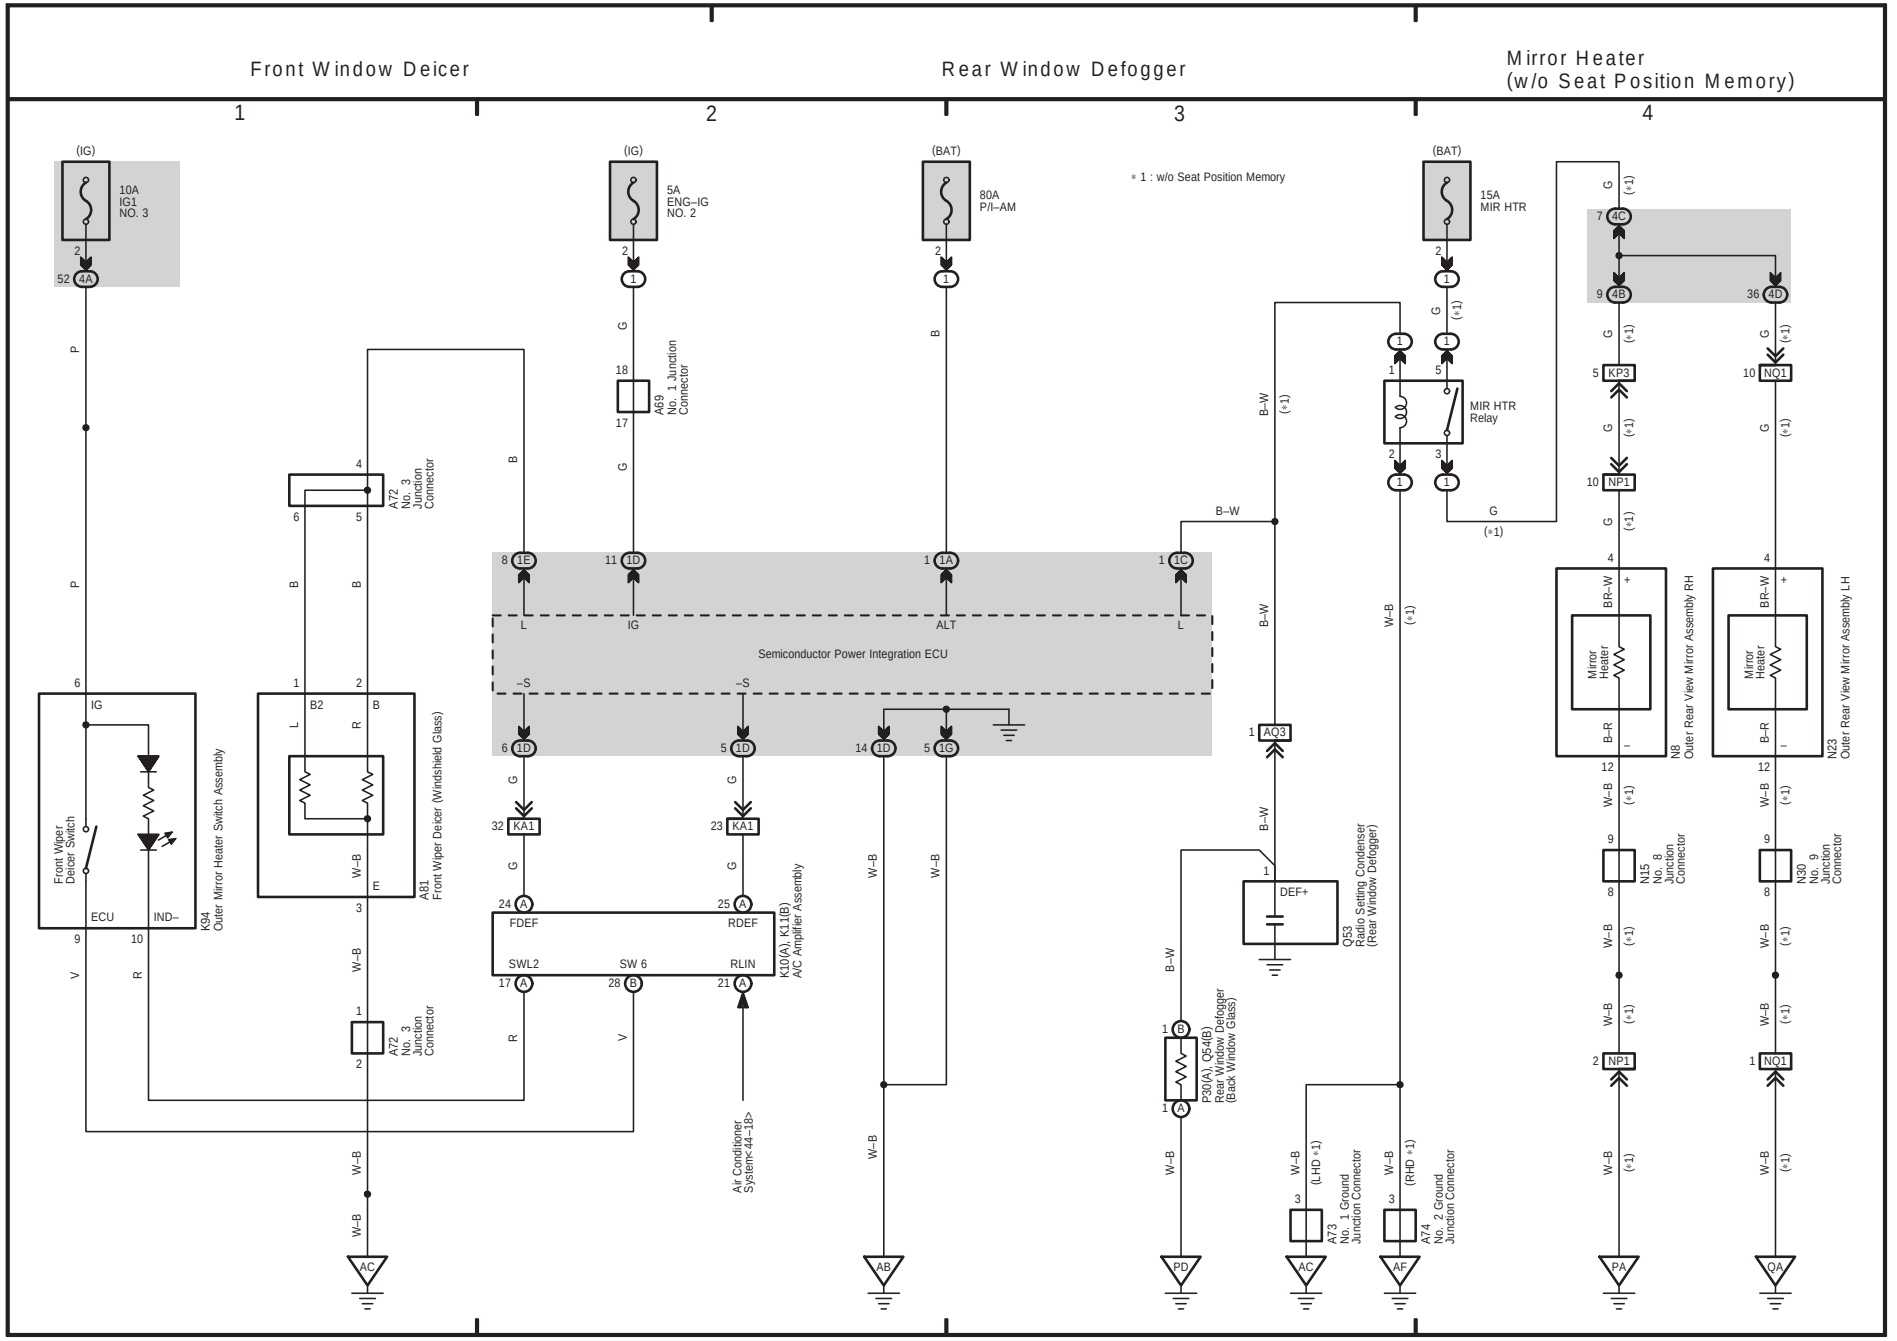
Front Window Deicer
Rear Window Defogger
Mirror Heater
(w/o Seat Position Memory)
1
2
3
4
* 1 : w/o Seat Position Memory
(IG)
10A
IG1
NO. 3
(IG)
5A
ENG–IG
NO. 2
(BAT)
80A
P/I–AM
(BAT)
15A
MIR HTR
A69
No. 1 Junction
Connector
A72
No. 3
Junction
Connector
MIR HTR
Relay
Semiconductor Power Integration ECU
IG
ALT
–S
K94
Outer Mirror Heater Switch Assembly
Front Wiper
Deicer Switch
ECU
IND–
A81
Front Wiper Deicer (Windshield Glass)
B2
K10(A), K11(B)
A/C Amplifier Assembly
FDEF
RDEF
SWL2
SW 6
RLIN
Air Conditioner
System<44–18>
DEF+
Q53
Radio Setting Condenser
(Rear Window Defogger)
P30(A), Q54(B)
Rear Window Defogger
(Back Window Glass)
A73
No. 1 Ground
Junction Connector
(LHD *1)
A74
No. 2 Ground
Junction Connector
(RHD *1)
KA1
KP3
NP1
NQ1
AQ3
4A
4B
4C
4D
1A
1C
1D
1E
1G
N8
Outer Rear View Mirror Assembly RH
N23
Outer Rear View Mirror Assembly LH
Mirror
Heater
N15
No. 8
Junction
Connector
N30
No. 9
Junction
Connector
AC
AB
PD
AC
AF
PA
QA