




RADIATOR SUPPORT (ASSY)

REPLACEMENT

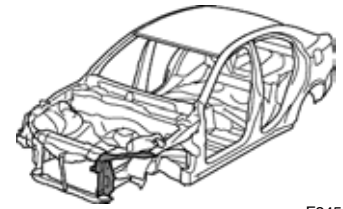


F24501A

REMOVAL

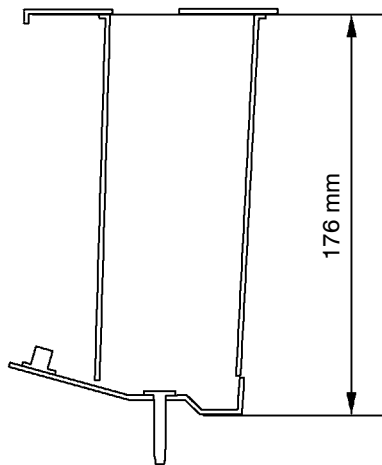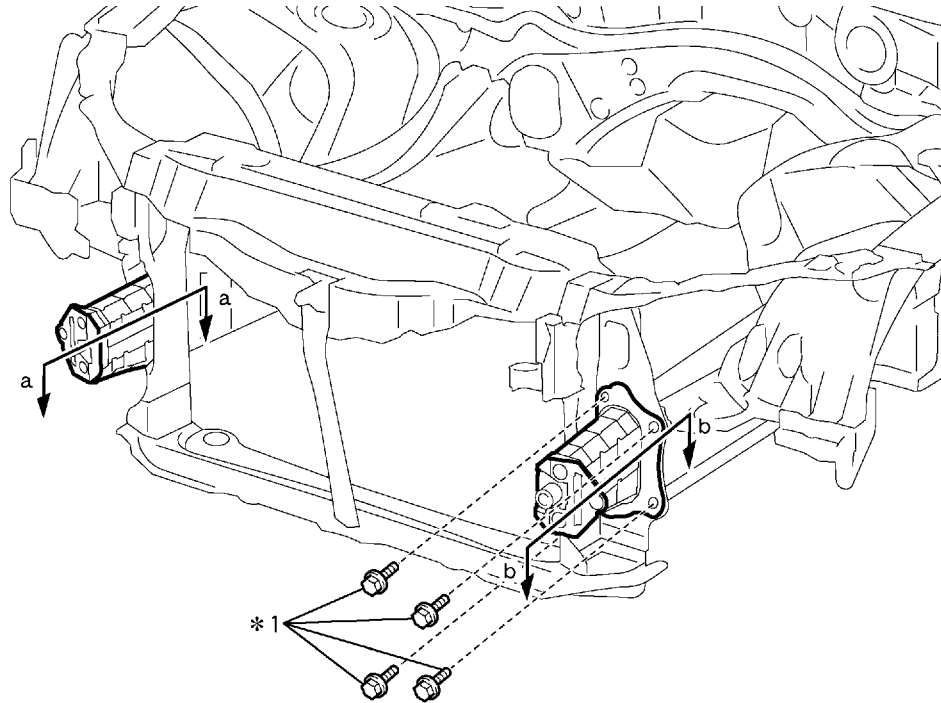

a - a

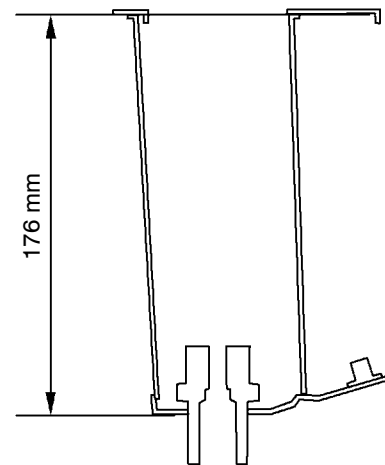


b - b

F24509

POINT

1 *1: Bolt

176 mm (6.93 in.)

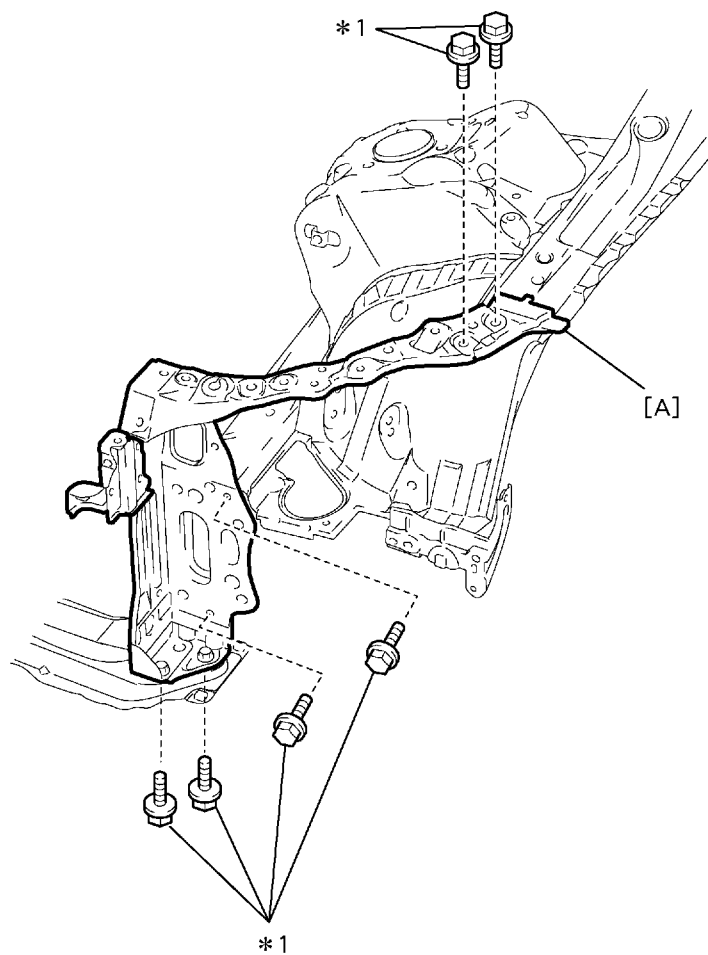

F24501

POINT


- 1 *1: Bolt
- 2 Leave [A] to the vehicle side, remove radiator support.

PART NAME

[A] Radiator Support Extension

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

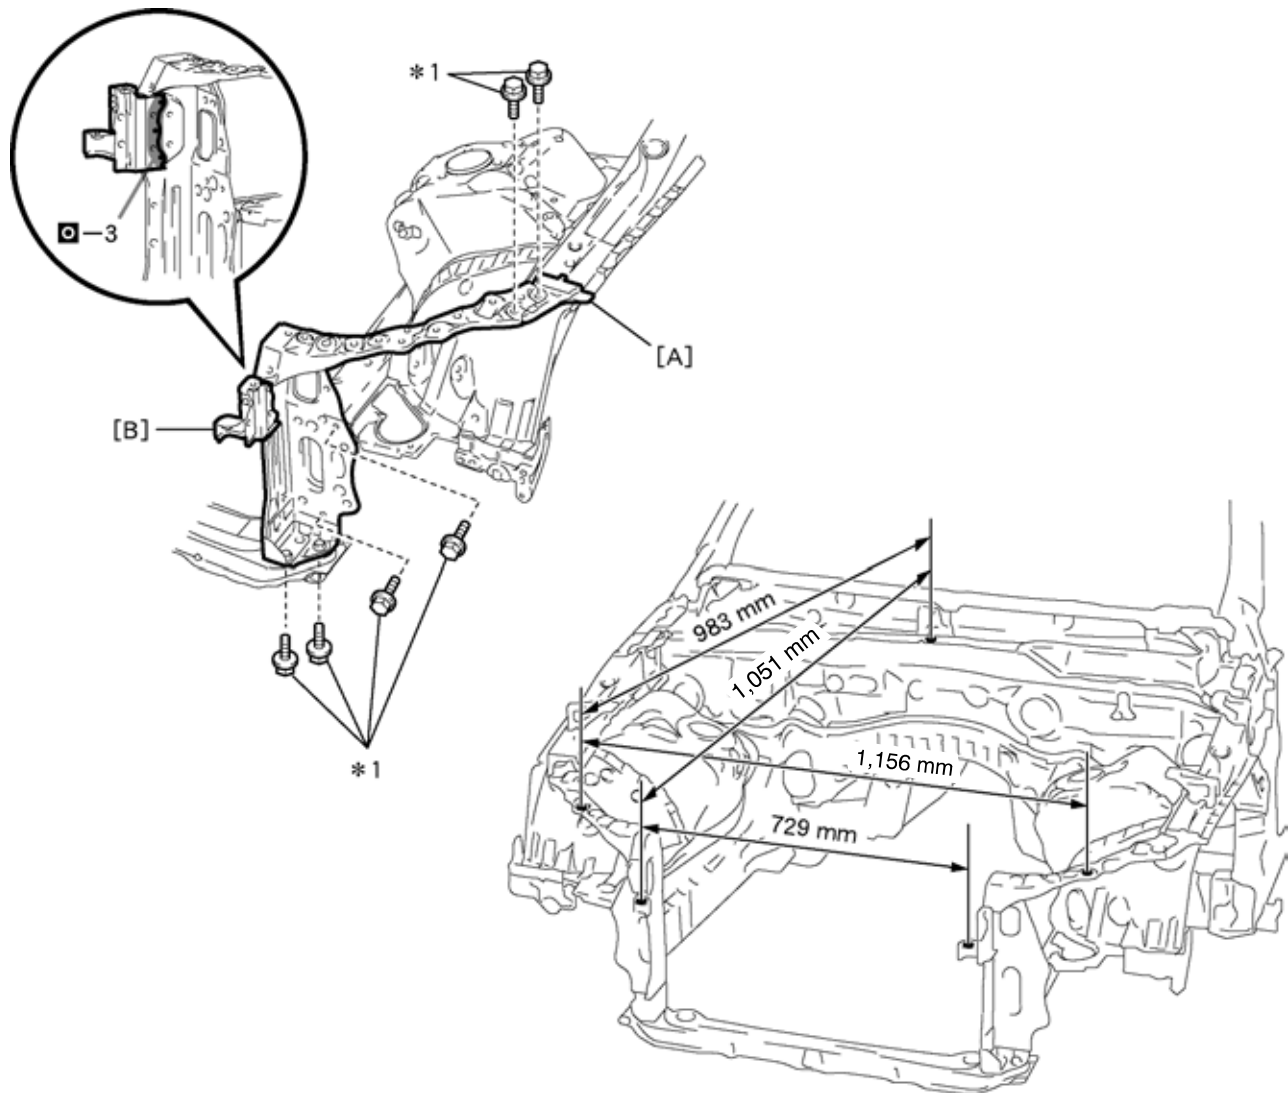

F24502

POINT

- 1 *1: Bolt
- 2 Measure the dimensions before installing the headlights.
- 3 These values are reference values.

PART NAME

[A] Radiator Support Extension [B] Head Lamp Bracket

729 mm (28.70 in.)

983 mm (38.70 in.)

1,051 mm (41.38 in.)

1,156 mm (45.51 in.)