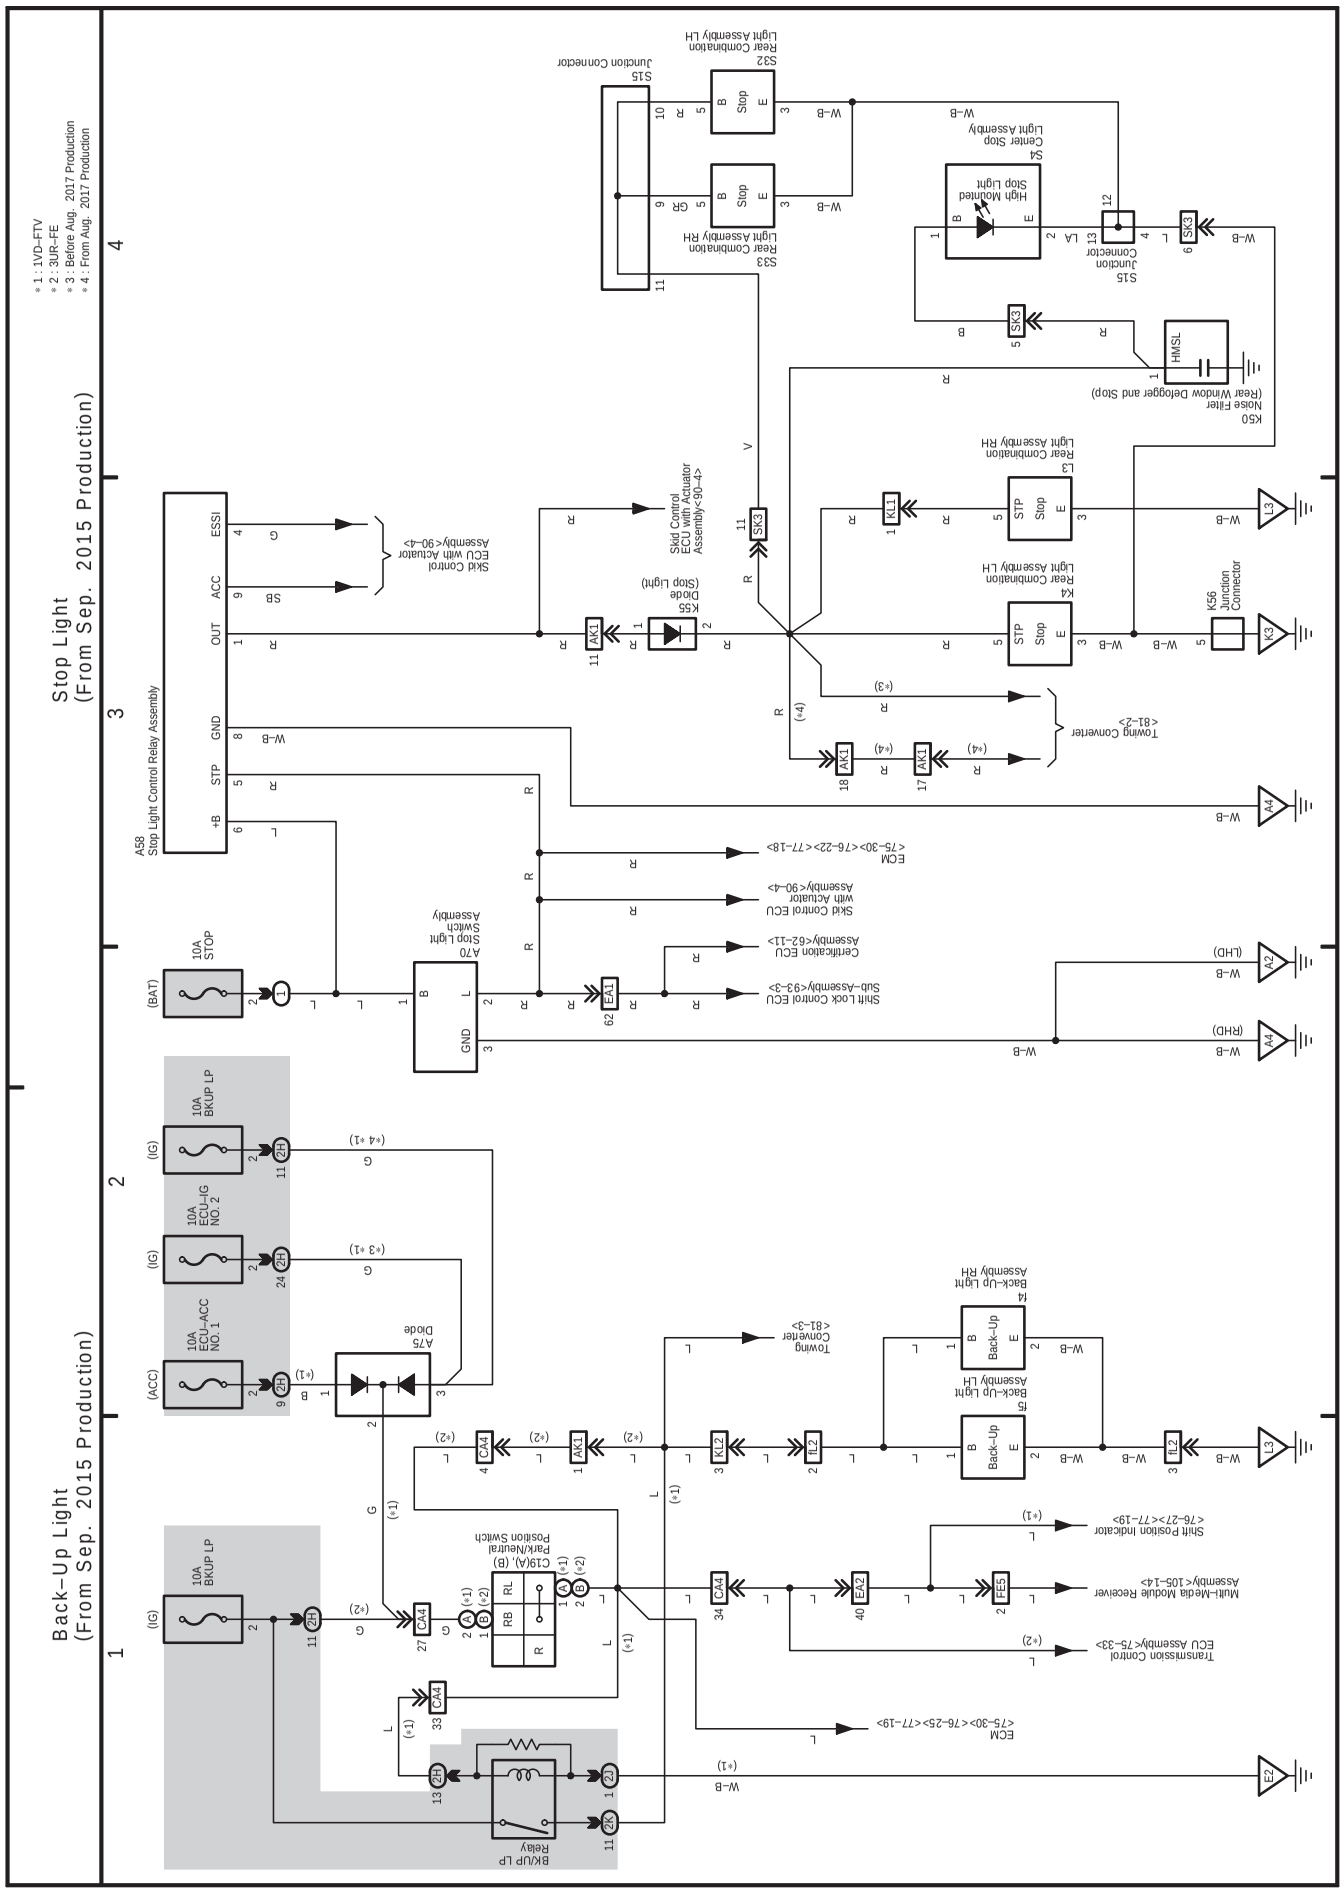
Back–Up Light
(From Sep. 2015 Production)
Stop Light
(From Sep. 2015 Production)
* 1 : 1VD–FTV
* 2 : 3UR–FE
* 3 : Before Aug. 2017 Production
* 4 : From Aug. 2017 Production
A58
Stop Light Control Relay Assembly
ESSI
ACC
OUT
GND
STP
+B
Skid Control ECU with Actuator Assembly<90–4>
Skid Control ECU with Actuator Assembly<90–4>
Skid Control ECU Assembly<62–11>
Shift Lock Control ECU Sub–Assembly<93–3>
ECM
<75–30><76–22><77–18>
A70
Stop Light Switch Assembly
10A STOP
10A BKUP LP
10A ECU–IG NO. 2
10A ECU–ACC NO. 1
A75
Diode
B/K/UP LP Relay
Park/Neutral Position Switch
C19(A), (B)
Skid Control ECU with Actuator Assembly<90–4>
K55
Diode (Stop Light)
Skid Control ECU with Actuator Assembly<90–4>
S32
Rear Combination Light Assembly LH
S33
Rear Combination Light Assembly RH
S15
Junction Connector
S4
Center Stop Light Assembly
High Mounted Stop Light
S15
Junction Connector
HMSL
K50
Noise Filter
(Rear Window Defogger and Stop)
L3
Rear Combination Light Assembly RH
K4
Rear Combination Light Assembly LH
K56
Junction Connector
Towing Converter <81–2>
Towing Converter <81–3>
T5
Back–Up Light Assembly LH
T4
Back–Up Light Assembly RH
ECM
<75–30><76–25><77–19>
Transmission Control ECU Assembly<75–33>
Multi–Media Module Receiver Assembly<105–14>
Shift Position Indicator <76–27><77–19>
E2
(BAT)
(IG)
(ACC)
(RHD)
(LHD)