


On-Wire Harness Side

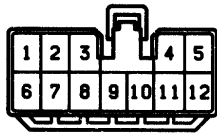

s-12-1

Z17945

SERVOMOTOR AMPLIFIER ON-VEHICLE INSPECTION

AC2VC-01

1. REMOVE INSTRUMENT PANEL SAFETY PAD
(See page [BO-98](#))
2. INSPECT AMPLIFIER CIRCUITS

Disconnect the connector from the amplifier and inspect the connector on wire harness side, as shown in the chart below.

Tester condition	Condition	Specified condition
3 – System amplifier terminal C – 14	Constant	Continuity
4 – System amplifier terminal C – 13	Constant	Continuity
9 – Ground	Constant	Continuity
1 – 6	Constant	Continuity
7 – Ground	Ignition switch ON	Battery positive voltage
7 – Ground	Ignition switch OFF	No voltage

If circuit is as specified, try to replace the amplifier with a new one. If the circuit is not as specified, inspect the circuits connected to other parts.