


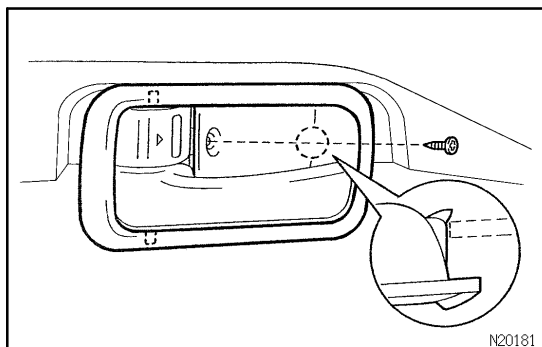


REMOVAL

1. REMOVE THESE PARTS:

HINT:

Tape a screwdriver tip before use.

- (a) Door inside handle bezel

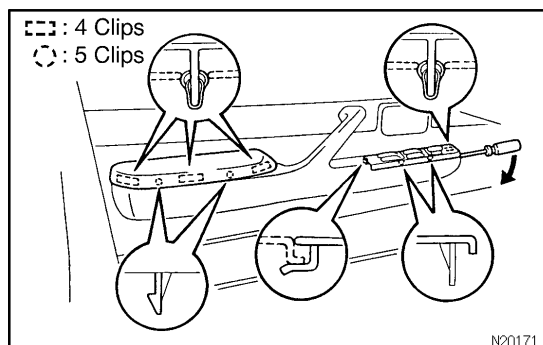

- (b) Armrest

- (c) Armrest panel base upper


- (d) Courtesy light

- (e) Lower frame bracket garnish

2. REMOVE DOOR TRIM (See page [BO-12](#))

3. REMOVE DOOR SPEAKER

Remove the 4 screws and disconnect the connector, then remove the speaker.

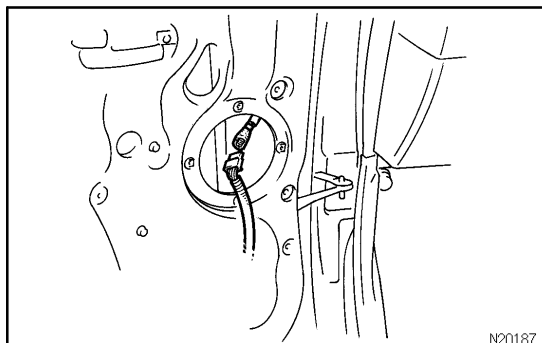

4. REMOVE OUTER REAR VIEW MIRROR

- (a) Remove a clip and disconnect the connector.

- (b) Remove the 3 bolts and outer rear view mirror.