





INTERIOR LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

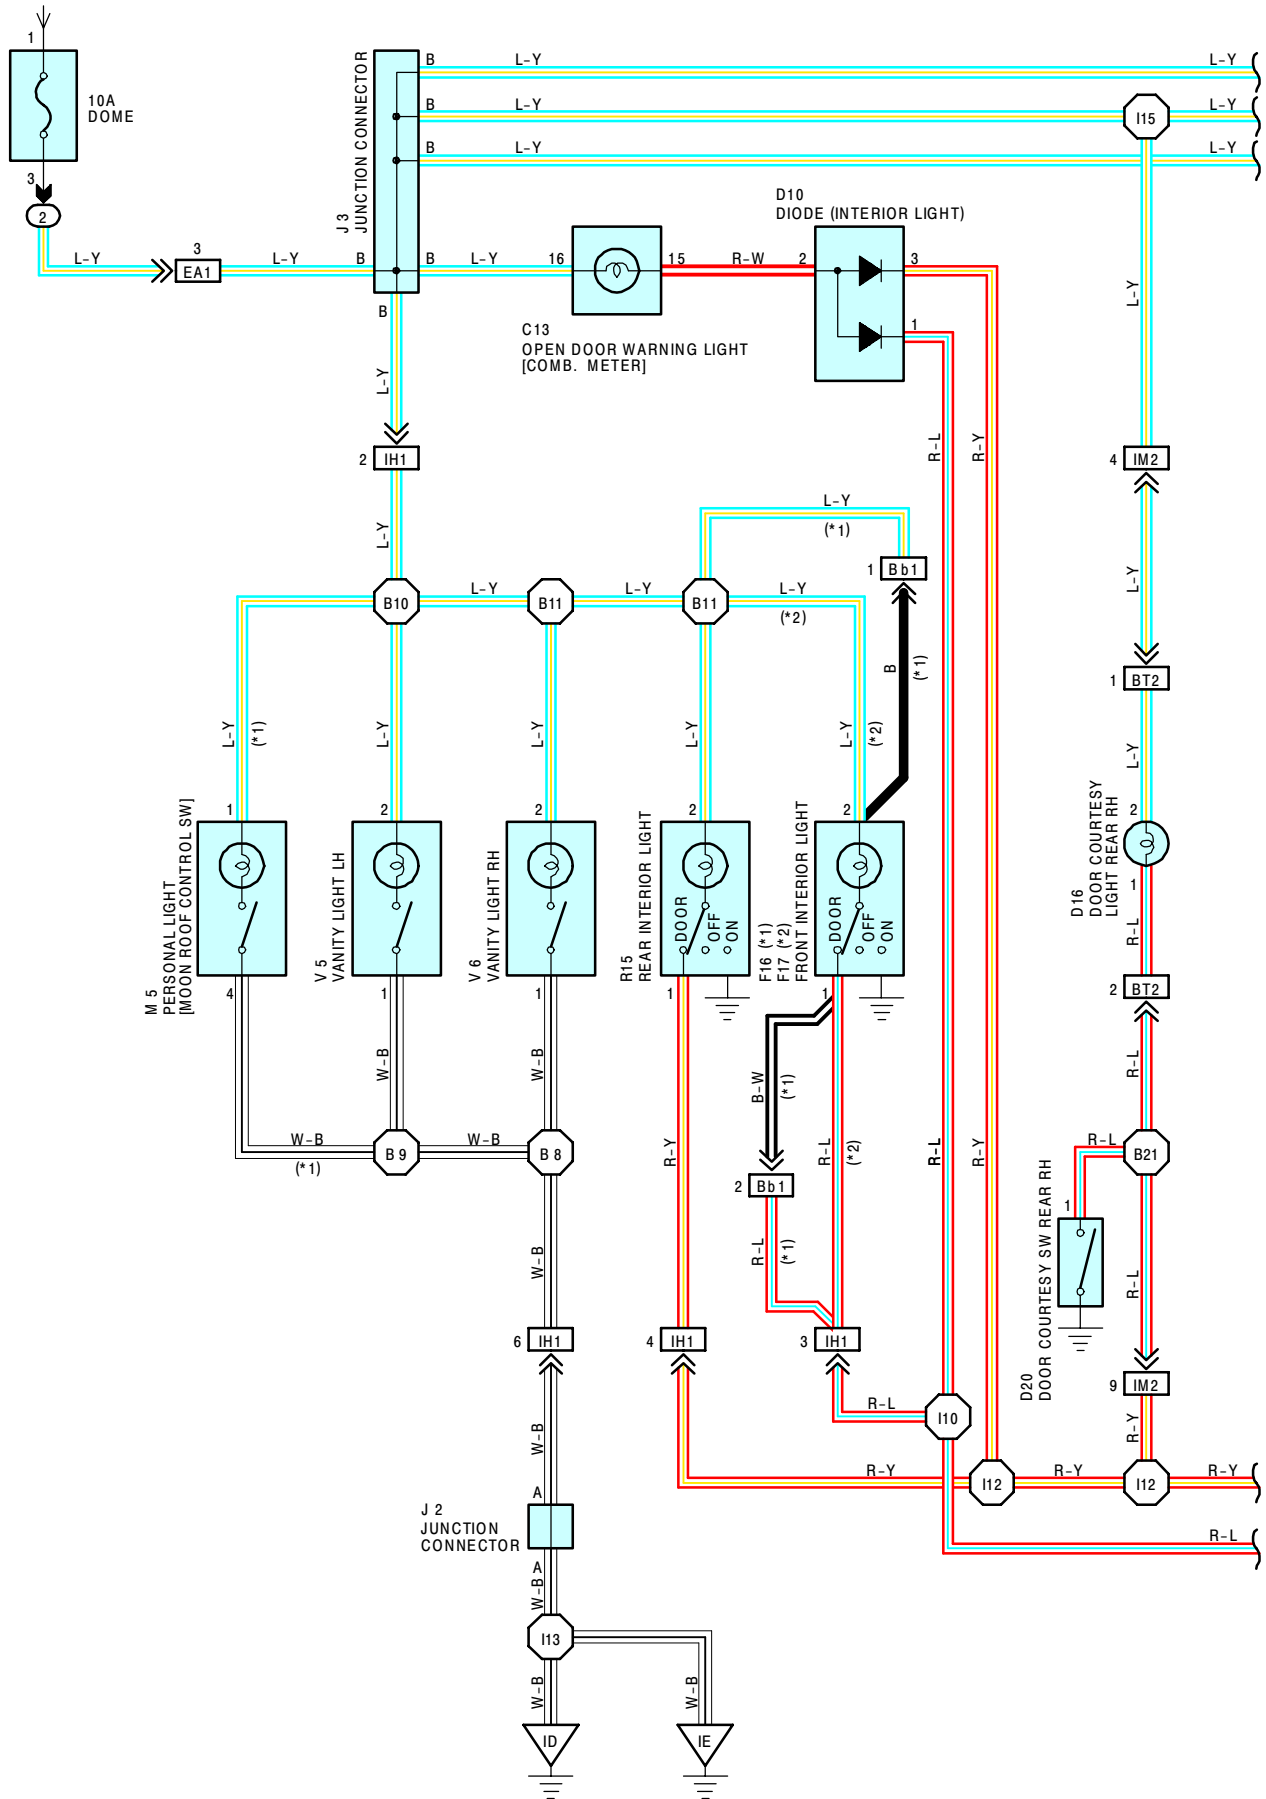

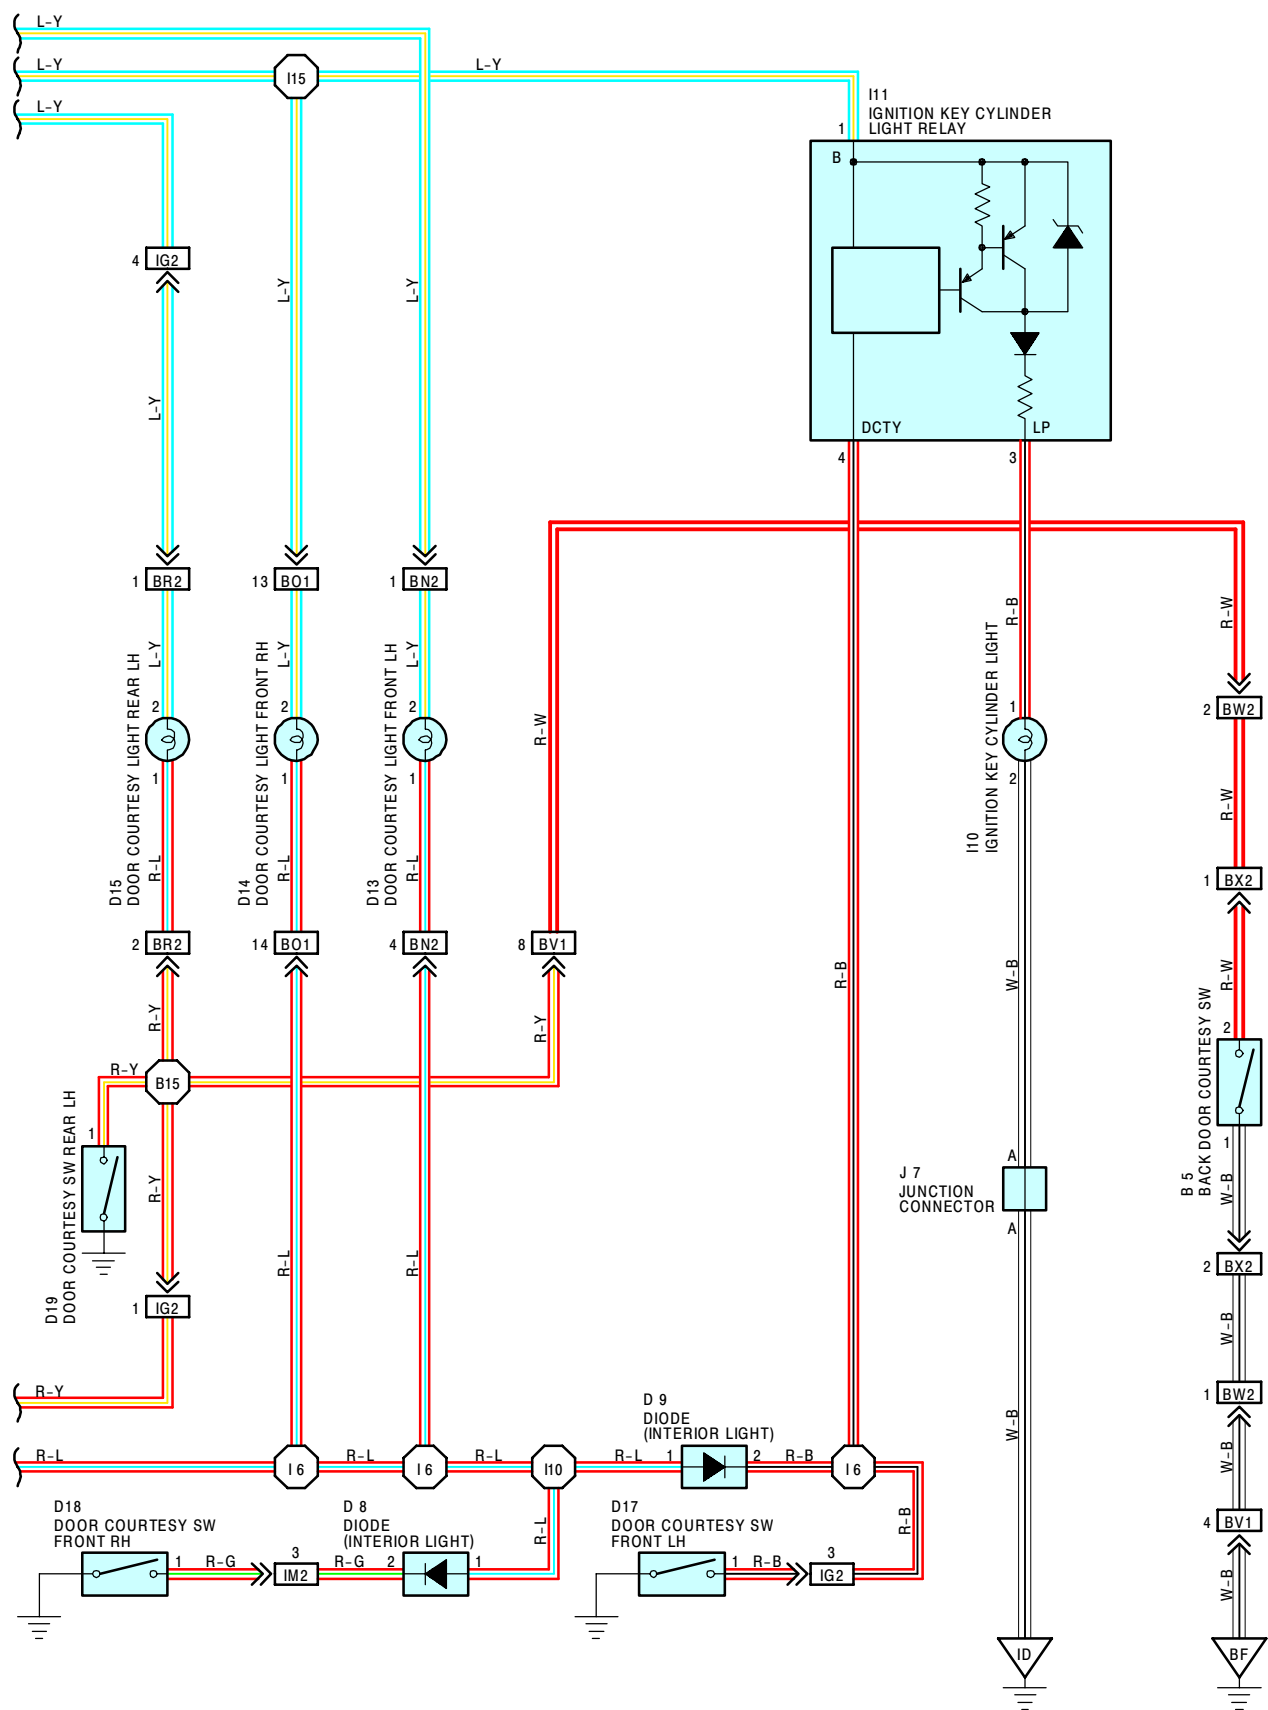



INTERIOR LIGHT

SERVICE HINTS

F16, F17 FRONT INTERIOR LIGHT

2-GROUND : ALWAYS APPROX. 12 VOLTS

2-1 : CLOSED WITH THE INTERIOR LIGHT POSITION SW AT DOOR POSITION

D17, D18, D19, D20 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND : CLOSED WITH EACH OF THE DOOR OPENED

B 5 BACK DOOR COURTESY SW

2-1 : CLOSED WITH THE BACK DOOR OPENED

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 5	26	D16	26	I11	25
C13	24	D17	26	J 2	25
D 8	24	D18	26	J 3	25
D 9	24	D19	26	J 7	25
D10	24	D20	26	M 5	26
D13	26	F16	26	R15	25
D14	26	F17	26	V 5	27
D15	26	I10	25	V 6	27

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IH1	32	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
IM2	34	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BN2	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BR2	36	REAR DOOR LH WIRE AND FLOOR WIRE (LEFT CENTER PILLAR)
BT2	36	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BV1	36	LUGGAGE ROOM NO. 1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BW2	36	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BX2	38	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
Bb1	38	COWL WIRE AND FRAME WIRE (RIGHT FENDER)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 6	34	COWL WIRE	B 9	38	ROOF WIRE
I10			B10		
I12			B11		
I13			B15	38	FLOOR WIRE
I15			B21	38	FLOOR NO. 2 WIRE
B 8	38	ROOF WIRE			

B 5



C13

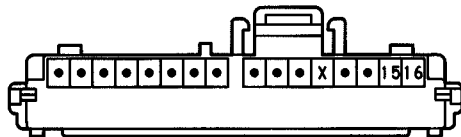

D 8, D 9 GRAY



D10



D13, D14,
D18, D16



D17, D18,
D19, D20 BLUE



F16, F17



I10



I11




J 2 BLUE



(HINT:SEE PAGE 7)

J 3

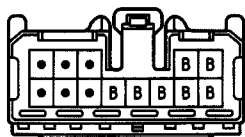

(HINT:SEE PAGE 7)

J 7 BLUE



(HINT:SEE PAGE 7)

M 5



V 5, V 6 BLUE



R15

