




CELLULAR MOBILE TELEPHONE



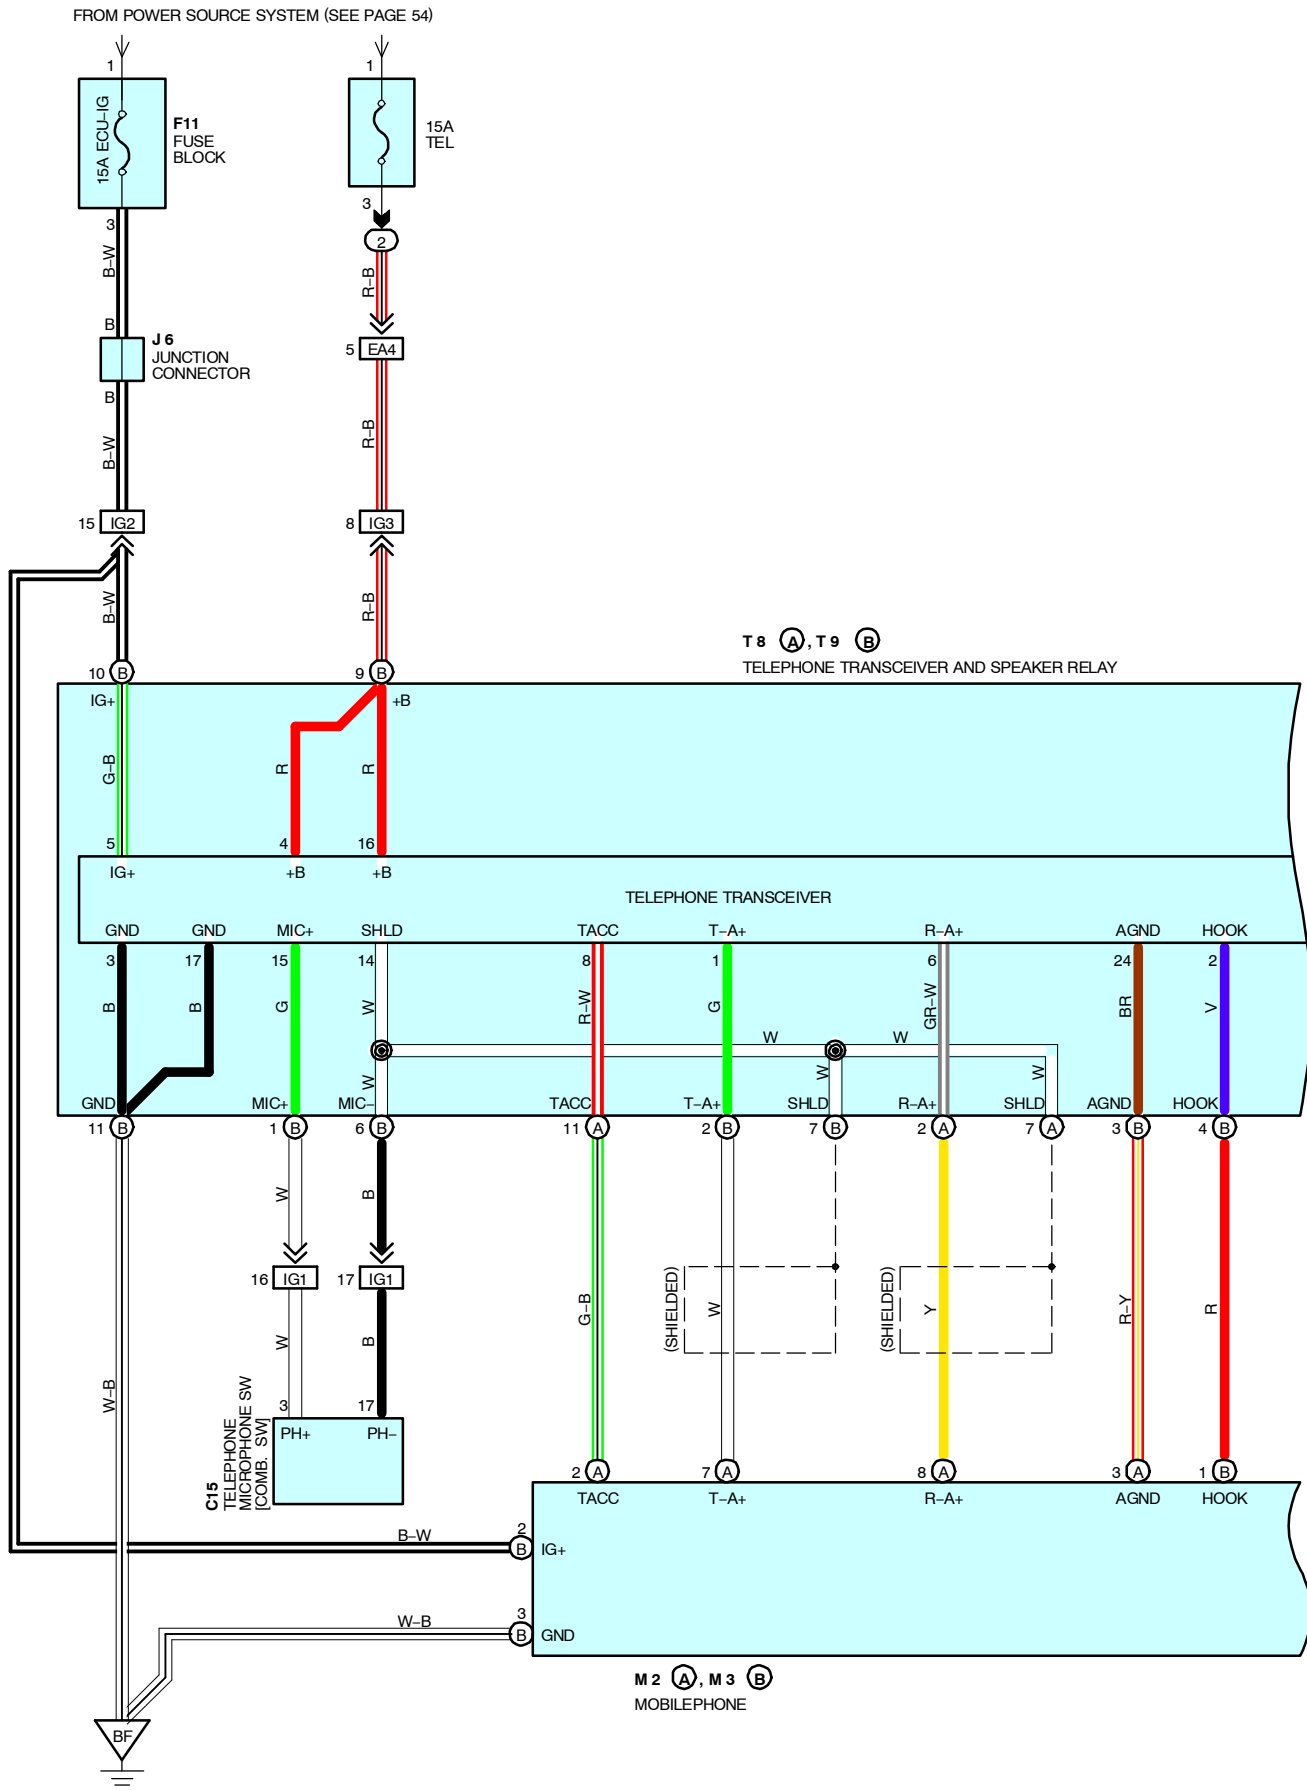

CELLULAR MOBILE TELEPHONE

SERVICE HINTS

T 9 (B) TELEPHONE TRANSCEIVER AND SPEAKER RELAY

(B) 9-GROUND : ALWAYS APPROX. 12 VOLTS

(B) 10-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

(B) 11-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A12	24	M 2	A 26	S 17	25
C15	24	M 3	B 26	T 8	A 27
F11	25	R 1	25	T 9	B 27
J 6	25	R11	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	21	R/B NO.2 (FRONT SIDE OF THE LEFT FENDER)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA4	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
IG1	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IG2		
IG3		
BR1	36	REAR DOOR LH WIRE AND FLOOR WIRE (LEFT CENTER PILLAR)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BF	36	UNDER THE CENTER CONSOLE BOX

A12

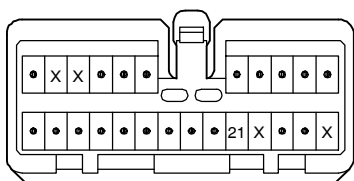


C15 BLACK

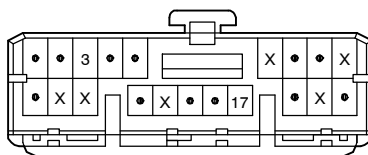

F11


(SEE PAGE 20)

J 6

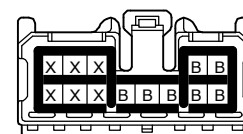


(HINT : SEE PAGE 7)


M 2 (A)




M 3 (B)




R 1

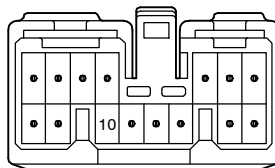


R11



S17 GRAY



T 8 (A)



T 9 (B)

