


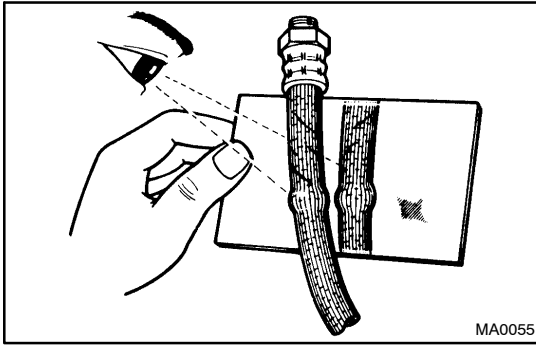

BRAKE INSPECTION

MA031-01

1. INSPECT BRAKE LINE PIPES AND HOSES

HINT:

Check in a well lighted area. Check the entire circumference and length of the brake hoses using a mirror as required. Turn the front wheels fully right or left before checking the front brake.

- (a) Check all brake lines and hoses for:
 - Damage
 - Wear
 - Deformation
 - Cracks
 - Corrosion
 - Leaks
 - Bends
 - Twists
- (b) Check all clamps for tightness and connections for leakage.
- (c) Check that the hoses and lines are clear of sharp edges, moving parts and the exhaust system.
- (d) Check that the lines installed in grommets pass through the center of the grommets.

2. INSPECT FRONT AND REAR BRAKE PADS AND DISCS

(FRONT PADS: See page [BR-16](#))

(REAR PADS: See page [BR-25](#))

(FRONT DISCS: See page [BR-21](#))

(REAR DISCS: See page [BR-30](#))

3. INSPECT PARKING BRAKE LININGS AND DRUMS

(See page [BR-36](#))

4. INSPECT OR CHANGE BRAKE FLUID

- (a) Visually inspect the master cylinder for leaks.

- (b) Change brake fluid.

(See page [BR-4](#))

Fluid: SAE J1703 or FMVSS No.116 DOT3