



J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

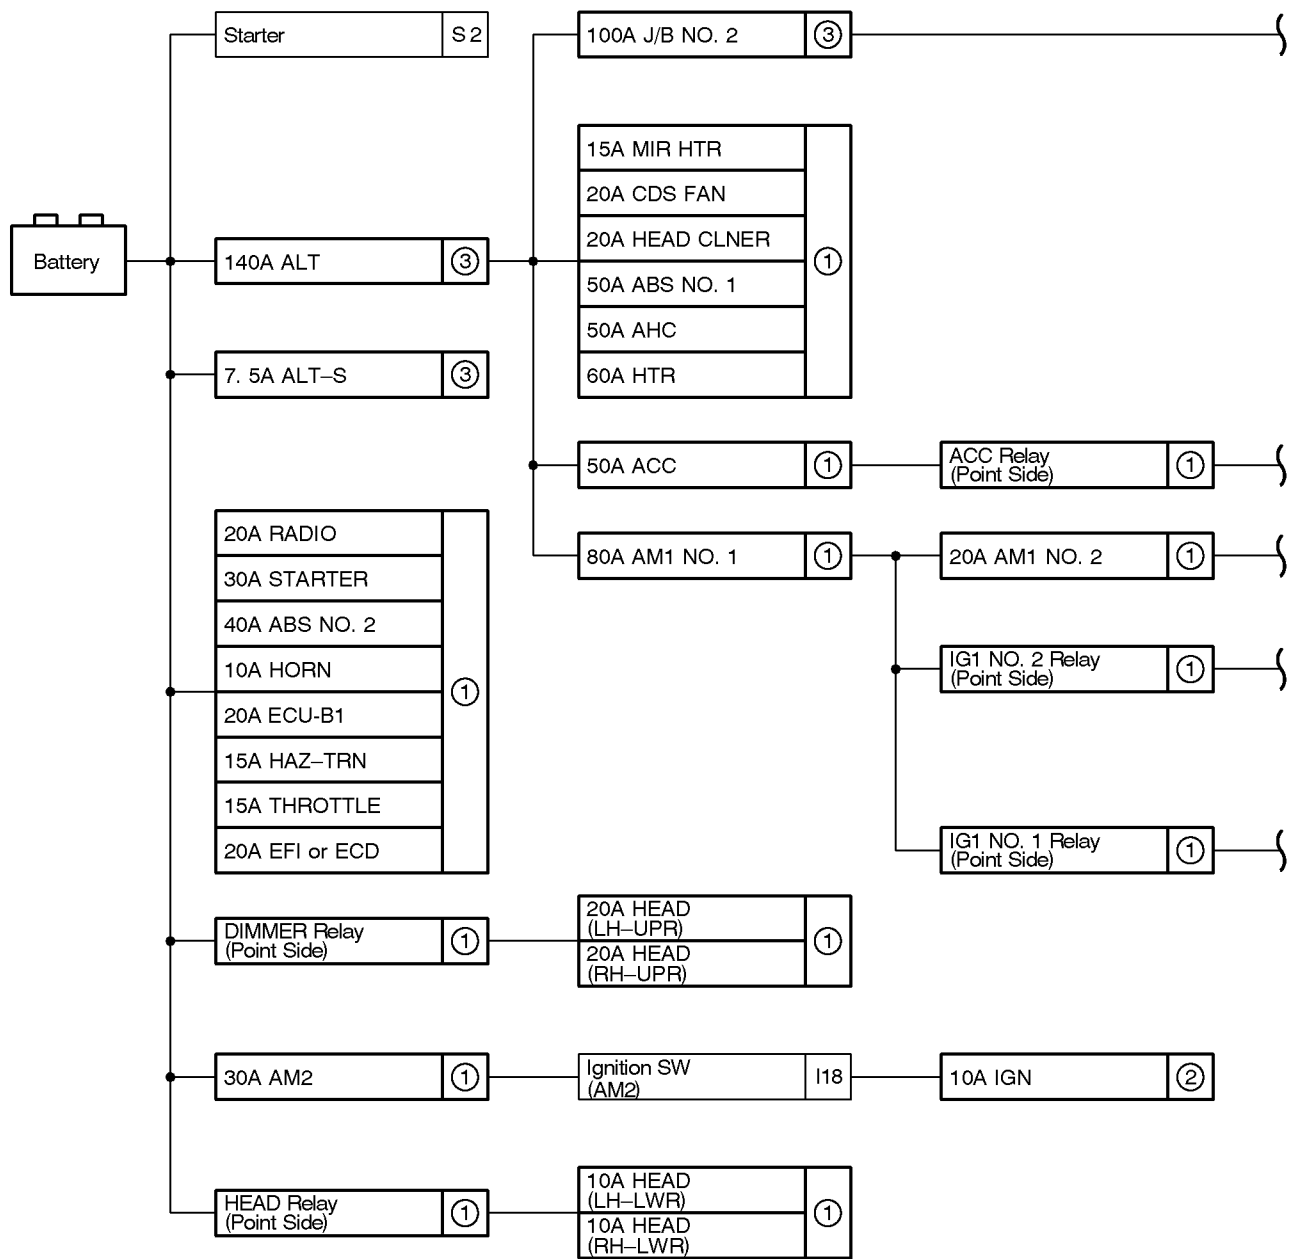

[LOCATION] ① : Engine Room J/B (See Page 22)

② : Cowl Side J/B LH (See Page 26)

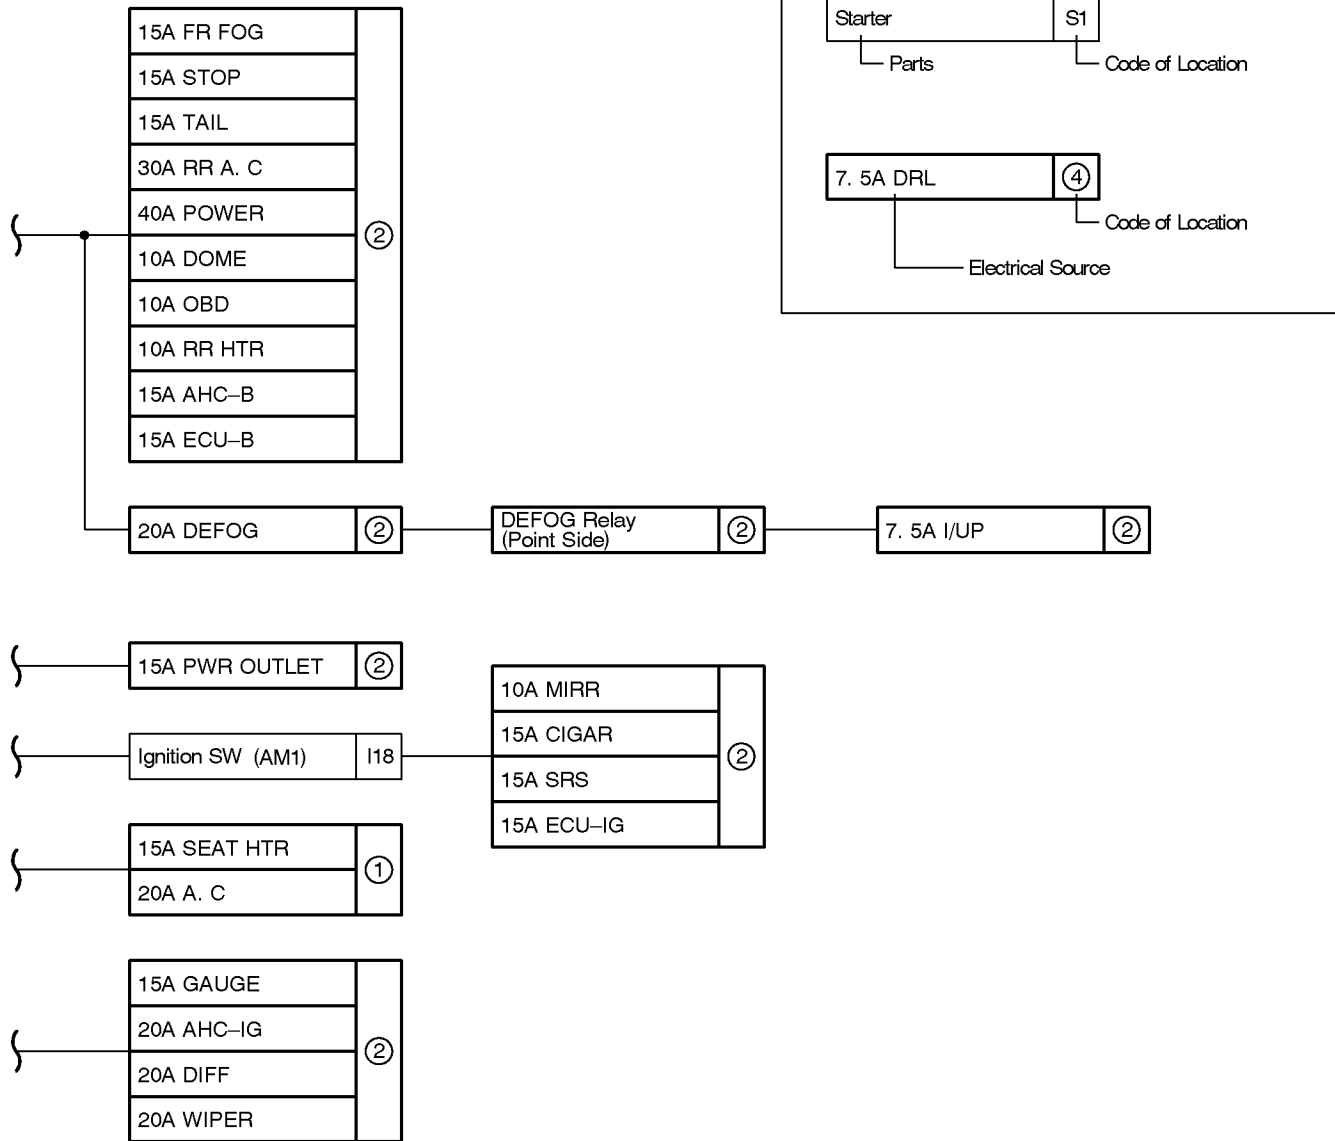

③ : Fusible Link Block (F 7 on See Page 36)

J POWER SOURCE (Current Flow Chart)

Engine Room J/B (See Page 22)

Fuse		System	Page
10A	HEAD (LH-LWR)	Combination Meter	272
		Front Fog Light	92
		Headlight	86
10A	HEAD (RH-LWR)	Headlight	86
10A	HORN	Horn	158
		Theft Deterrent	230
15A	HAZ-TRN	Theft Deterrent	230
		Turn Signal and Hazard Warning Light	94
15A	MIR HTR	Rear Window Defogger and Mirror Heater	258
15A	SEAT HTR	Seat Heater	256
15A	THROTTLE	Cruise Control	170
		Electronically Controlled Transmission and A/T Indicator	162
		Engine Control and Engine Immobiliser System	76
20A	A.C	Condenser Fan and Front Air Conditioning	280
		Key Reminder and Seat Belt Warning	260
		Rear Air Conditioning	286
20A	AM1 NO.2	Turn Signal and Hazard Warning Light	94
20A	CDS FAN	Condenser Fan and Front Air Conditioning	280
20A	ECU-B1	Automatic Light Control	118
		Cellular Mobile Telephone	264
		Clock	152
		Combination Meter	272
		Door Lock Control	214
		Interior Light	106
		Key Reminder and Seat Belt Warning	260
		Light Auto Turn Off	122
		Moon Roof	210
		Multiplex Communication System	128
		Power Seat	236
		Power Tilt and Power Telescopic	242
		Power Window	204
		Remote Control Mirror	246
		Theft Deterrent	230
		Wireless Door Lock Control	220
20A	EFI or ECD	Cruise Control	170
		Electronically Controlled Transmission and A/T Indicator	162
		Engine Control and Engine Immobiliser System	76
20A	HEAD (LH-UPR)	Headlight	86
20A	HEAD (RH-UPR)	Headlight	86

* These are the page numbers of the first page on which the related system is shown.

20A	HEAD CLNER	Headlight Cleaner	124
20A	RADIO	Auto Antenna	262
		Radio and Player	268

Fuse		System	Page
30A	AM2	Electronically Controlled Transmission and A/T Indicator	162
		Engine Control and Engine Immobiliser System	76
		Ignition	70
		Starting	68
30A	STARTER	Starting	68
40A	ABS NO.1	VSC	184
40A	ABS NO.2	VSC	184
50A	AHC	Active Height Control Suspension and Adaptive Variable Suspension	176
60A	HTR	Condenser Fan and Front Air Conditioning	280
80A	AM1 NO.1	Rear Window Defogger and Mirror Heater	258
		Turn Signal and Hazard Warning Light	94

Cowl Side J/B LH (See Page 26)

Fuse		System	Page
7.5A	I/UP	Rear Window Defogger and Mirror Heater	258
10A	DOME	Garage Door Opener	160
		Interior Light	106
		Multiplex Communication System	128
10A	IGN	Charging	74
		Combination Meter	272
		Cruise Control	170
		Electronically Controlled Transmission and A/T Indicator	162
		Engine Control and Engine Immobiliser System	76
		SRS	193
10A	MIRR	VSC	184
		Multiplex Communication System	128
10A	OBD	Remote Control Mirror	246
		Cruise Control	170
10A	RR HTR	Engine Control and Engine Immobiliser System	76
		Rear Air Conditioning	286
15A	AHC-B	Active Height Control Suspension and Adaptive Variable Suspension	176
15A	CIGAR	Auto Antenna	262
		Cigarette Lighter	154
		Clock	152
		Condenser Fan and Front Air Conditioning	280
		Radio and Player	268
		Rear Air Conditioning	286
		Remote Control Mirror	246
		Shift Lock	198
15A	ECU-B	Combination Meter	272
		Condenser Fan and Front Air Conditioning	280
		Headlight	86

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	ECU-B	Power Tilt and Power Telescopic	242
		Rear Air Conditioning	286
		SRS	193
		Theft Deterrent	230
15A	ECU-IG	Auto Antenna	262
		Automatic Light Control	118
		Cellular Mobile Telephone	264
		Door Lock Control	214
		Interior Light	106
		Light Auto Turn Off	122
		Moon Roof	210
		Multiplex Communication System	128
		Power Seat	236
		Power Tilt and Power Telescopic	242
		Power Window	204
		Remote Control Mirror	246
		Shift Lock	198
		Theft Deterrent	230
		VSC	184
		Wireless Door Lock Control	220
15A	FR FOG	Front Fog Light	92
15A	GAUGE	Active Height Control Suspension and Adaptive Variable Suspension	176
		Automatic Glare-Resistant EC Mirror	252
		Back-Up Light	116
		Center Differential Lock	200
		Charging	74
		Combination Meter	272
		Cruise Control	170
		Electronically Controlled Transmission and A/T Indicator	162
		Engine Control and Engine Immobiliser System	76
		Headlight	86
		Illumination	102
		Key Reminder and Seat Belt Warning	260
		Multiplex Communication System	128
		Power Rear Quarter Window	254
		Rear Window Defogger and Mirror Heater	258
		Remote Control Mirror	246
		VSC	184
		Wireless Door Lock Control	220
15A	PWR OUTLET	Power Outlet	156
15A	SRS	SRS	193
15A	STOP	Active Height Control Suspension and Adaptive Variable Suspension	176
		Cruise Control	170
		Electronically Controlled Transmission and A/T Indicator	162

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	STOP	Engine Control and Engine Immobiliser System	76
		Multiplex Communication System	128
		Shift Lock	198
		Stop Light	114
		VSC	184
15A	TAIL	Automatic Light Control	118
		Illumination	102
		Light Auto Turn Off	122
		Multiplex Communication System	128
		Taillight	98
		Theft Deterrent	230
		Wireless Door Lock Control	220
20A	AHC-IG	Active Height Control Suspension and Adaptive Variable Suspension	176
20A	DEFOG	Rear Window Defogger and Mirror Heater	258
20A	DIFF	Center Differential Lock	200
20A	WIPER	Front Wiper and Washer	144
		Headlight Cleaner	124
		Multiplex Communication System	128
		Rear Wiper and Washer	148
30A	RR A.C	Rear Air Conditioning	286
40A	POWER	Door Lock Control	214
		Moon Roof	210
		Multiplex Communication System	128
		Power Seat	236
		Power Tilt and Power Telescopic	242
		Power Window	204
		Wireless Door Lock Control	220

Fusible Link Block (F7 on See Page 36)

Fuse		System	Page
7.5A	ALT-S	Charging	74
100A	J/B NO.2	Automatic Light Control	118
		Light Auto Turn Off	122
140A	ALT	Automatic Light Control	118
		Charging	74
		Light Auto Turn Off	122
		Turn Signal and Hazard Warning Light	94

* These are the page numbers of the first page on which the related system is shown.