


CLOCK

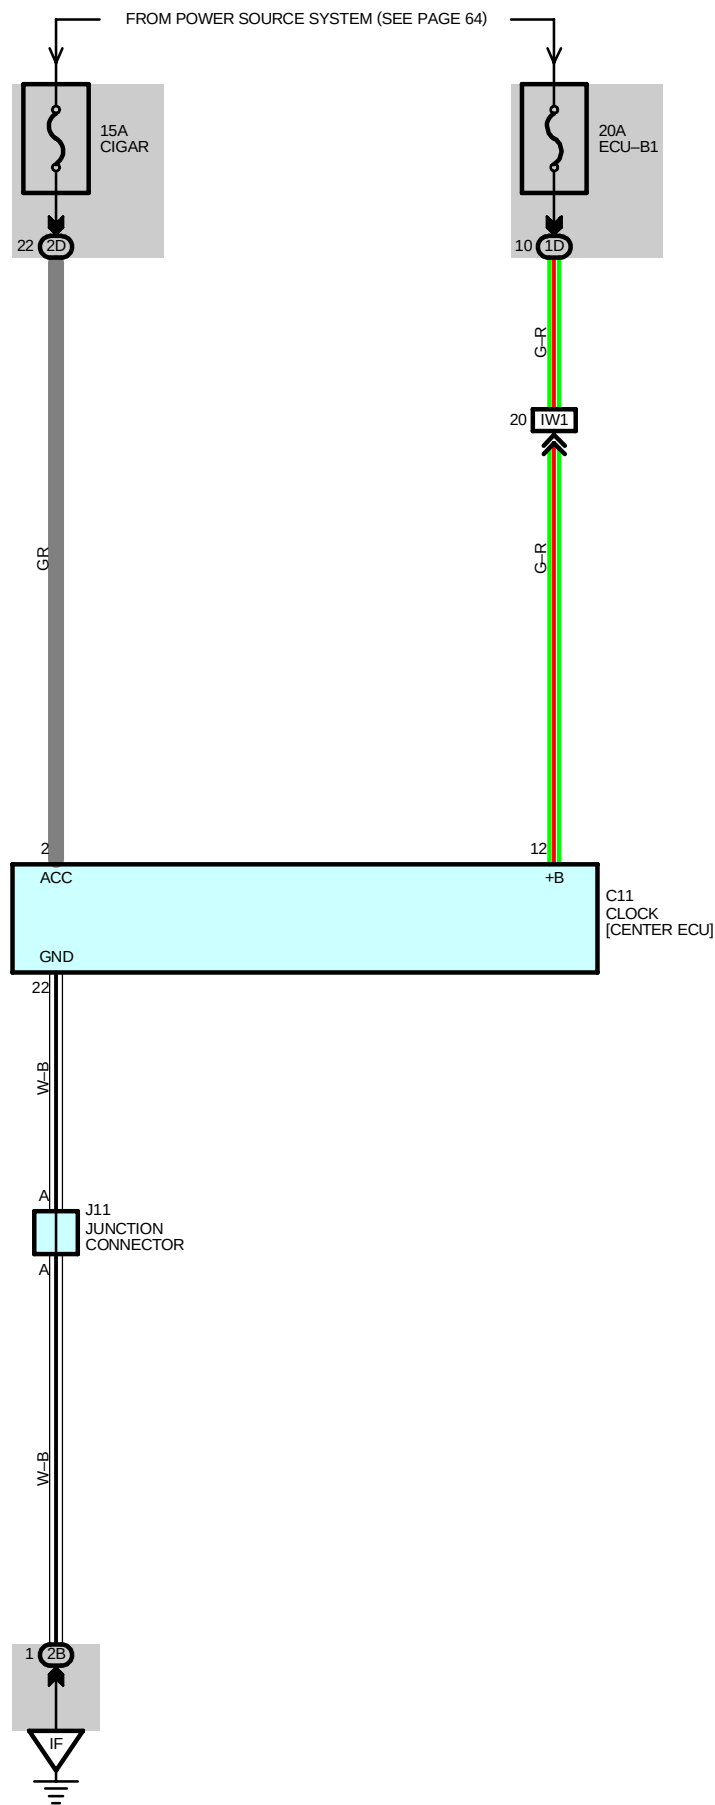

SERVICE HINTS

C11 CLOCK [CENTER ECU]

2-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
12-GROUND : Always approx. **12** volts
22-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C11	40	J11	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH