



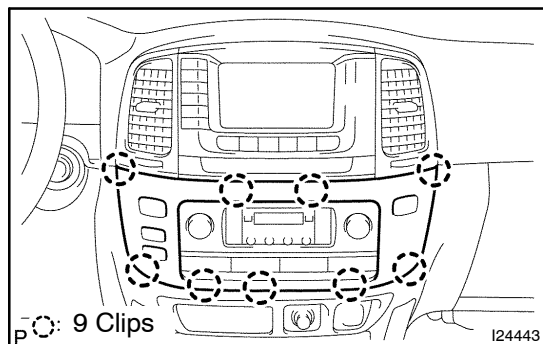

## REMOVAL


### 1. REMOVE CENTER CLUSTER FINISH PANEL

Disengage the 9 clips and remove the center cluster finish panel, then disconnect the connector.

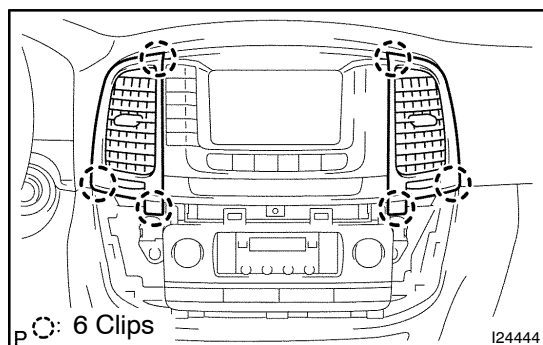


### 2. REMOVE CENTER RESISTORS

Disengage the 6 clips and remove the center resistors both side.

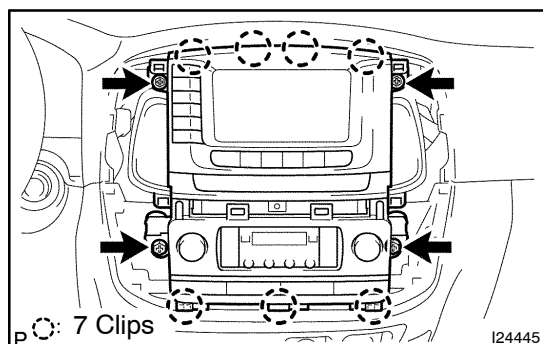


### 3. REMOVE INTEGRATION CONTROL PANEL ASSEMBLY

- (a) Remove the 4 bolts.
- (b) Disengage the 7 clips and remove the integration control panel assembly, then disconnect the connectors.

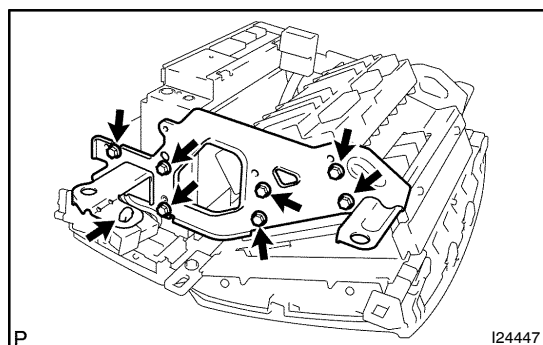


### 4. w/ LEXUS navigation system: REMOVE A/C AMPLIFIER

- (a) Disconnect the connector clamp.
- (b) Remove the 3 screws, the 4 bolts and the radio receiver bracket LH.

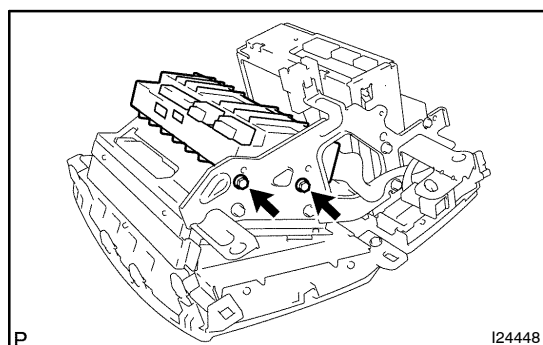


- (c) Remove the 2 screws and the A/C amplifier.

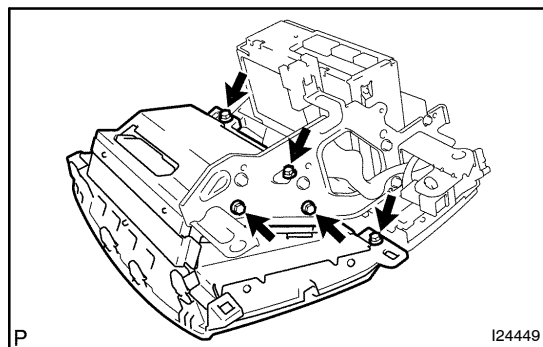


**5. w/ LEXUS navigation system:  
REMOVE EMV**

Remove the 2 screws, the 2 bolts and the EMV.

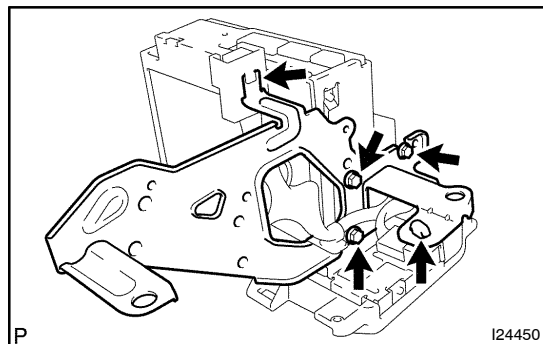


**6. w/ LEXUS navigation system:  
REMOVE INTEGRATION CONTROL PANEL**

- (a) Disconnect the connector clamps.
- (b) Remove the screw, the 2 bolts and the radio receiver bracket RH.
- (c) Remove the integration control panel from the radio receiver.

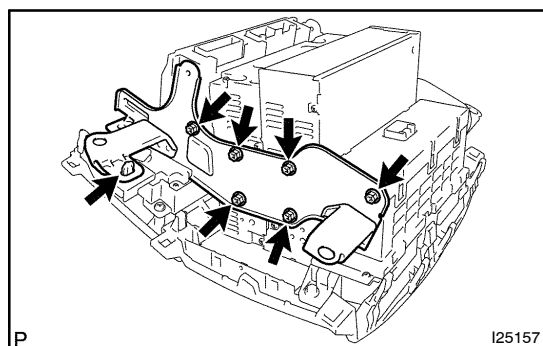

**7. w/o LEXUS navigation system:  
REMOVE INTEGRATION CONTROL PANEL**

- (a) Disconnect the connector clamp.
- (b) Remove the 6 bolts and the radio receiver bracket LH.

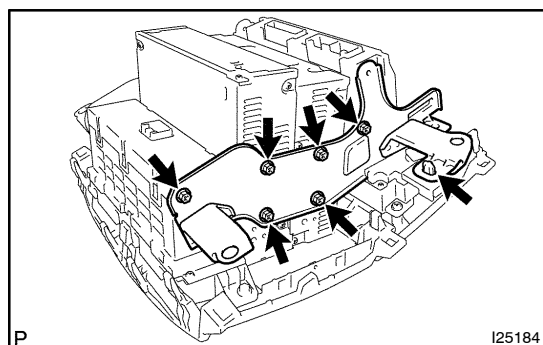

- (c) Disconnect the connector clamp.
- (d) Remove the 6 bolts and the radio receiver bracket RH.
- (e) Remove the integration control panel.